

# **WY-50/WY-50 + Maintenance Manual**

880020-01 Rev. B  
January 1986

Wyse Technology Inc.  
3471 N. First Street  
San Jose, CA 95134-1803 U.S.A.

Printed in U.S.A.



---

**FCC NOTICE**

- ☐ **Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may violate FCC rules.**

- ☒ **Caution:** Changes or modifications not covered in this manual must be approved in writing by the manufacturer's Regulatory Engineering department. Changes or modifications made without written approval may void the user's authority to operate this equipment.

---

**CANADIAN DOC NOTICE**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.



## **PREFACE**

This maintenance manual contains information on how to service and repair the WY-50 and WY-50+ terminals. Appendix D describes additional diagnostic firmware specific to the WY-50+ terminal, an enhanced version of the WY-50. We assume you are a qualified service technician with previous experience in terminal and computer repair. To take full advantage of this manual, we suggest you read the information in the order presented.

## **HOW TO USE THIS MANUAL**

This manual is divided into six chapters and four appendixes. Chapter one provides important information for the technician who has never serviced this terminal before. If you are already familiar with the terminal, the technical information in Appendix A can serve as an ongoing introduction. Here is a summary of this manual:

**Chapter 1, "Product Overview"** describes the terminal, including internal functions, I/O, telecommunications, environmental needs, and operator controls.

**Chapter 2, "Removal and Replacement Procedures,"** shows you how to take the terminal apart and put it back together again. It includes instructions on how to change power requirements on the terminal from domestic to international.

**Chapter 3, "Troubleshooting,"** tells you what to look for and how to fix problems on the terminal. It includes a list of tools needed for troubleshooting, a quick reference guide, and a flowchart.

**Chapter 4, "Adjustments and Alignments,"** describes power supply and monitor adjustments that control the quality of the display.

**Chapter 5, "Illustrated Parts List,"** includes a list of display and keyboard assembly parts.

**Chapter 6, "Theory of Operation,"** describes the terminal operation by function.



**Appendix A, "Specifications,"** lists the terminal's specifications.

**Appendix B, "Connector Pin Assignments,"** lists the signals on each pin of the MODEM and the AUX ports located on the rear panel of the terminal.

**Appendix C, "Schematics,"** includes schematics for the microprocessor PCB, keyboard, and monitor/power supply PCB.

**Appendix D, "Servicing the WY-50+,"** describes new diagnostic firmware included in the WY-50+, the enhanced version of the WY-50, and lists new part numbers.

## **REFERENCE MANUALS**

These publications provide additional information about the terminal.

WY-50 Display Terminal Reference Manual, Wyse 88-011-01

WY-50 Display Terminal Quick Reference Guide, Wyse 88-021-01

WY-50+ User's Guide, Wyse 880153-01

WY-50+ Programmer's Guide, Wyse 880154-01



## TABLE OF CONTENTS

<b>PREFACE.....</b>	<b>iii</b>
<b>1 GENERAL INFORMATION.....</b>	<b>1-1</b>
Introduction.....	1-1
High Level Functional Description.....	1-2
Microprocessor.....	1-2
Memory.....	1-2
Input/Output Devices.....	1-4
Keyboard.....	1-4
CRT Display.....	1-6
Telecommunications.....	1-6
Environmental Considerations.....	1-6
Operator Controls.....	1-7
Keyboard.....	1-8
Power Cord.....	1-8
Communications Cable.....	1-8
Fuse.....	1-8
Power Switch.....	1-8
Brightness Control.....	1-8
Setup Parameters.....	1-9
Cleaning.....	1-10
<b>2 REMOVING AND REPLACING COMPONENTS.....</b>	<b>2-1</b>
Modules.....	2-1
Fuse Replacement.....	2-4
Keyboard Replacement.....	2-5
Keyboard Cable Replacement.....	2-6
Keyboard PCB Replacement.....	2-7
Top Cover Replacement.....	2-8
Replacing the Monitor/Power Supply PCB.....	2-8
Changing Power Requirements on the Terminal....	2-8
CRT/Yoke Assembly Replacement.....	2-12
Brightness Potentiometer Replacement.....	2-14
AC Power Switch Replacement.....	2-15
Microprocessor PCB Replacement.....	2-17
<b>3 TROUBLESHOOTING.....</b>	<b>3-1</b>
Introduction.....	3-1
Power-On Self Test.....	3-1
Diagnostic Self Test.....	3-2
Troubleshooting.....	3-3
Troubleshooting Flowchart.....	3-3
Power Supply Check from the	
Microprocessor PCB.....	3-8
Checking Horizontal Synchronization.....	3-9
Adjusting Vertical Hold.....	3-9



4	<b>ADJUSTMENTS AND ALIGNMENTS.....</b>	4-1
	Power Adjustments.....	4-1
	Does the Terminal Meet the Display	
	Specifications?.....	4-3
	Aligning the Terminal Display.....	4-4
	Adjustments.....	4-5
	Height.....	4-5
	Linearity.....	4-5
	Focus.....	4-5
	Width.....	4-6
	Yoke Lock.....	4-6
	Sub-Brightness.....	4-8
	Display Magnets.....	4-8
5	<b>ILLUSTRATED PARTS LIST.....</b>	5-1
	WY-50 Display Assembly Parts List.....	5-2
	WY-50 Keyboard Assembly Parts List.....	5-4
6	<b>THEORY OF OPERATIONS.....</b>	6-1
	Introduction.....	6-1
	Raster Scan Terminology.....	6-1
	Printed Circuit Board Layout and Component	
	Identification.....	6-2
	Microprocessor PCB Block Diagram.....	6-3
	CRT and Power Supply Block Diagram.....	6-8
	Keyboard Block Diagram.....	6-13
	Functional Description.....	6-14
	Microprocessor.....	6-14
	Communications Interface.....	6-16
	Display Memory.....	6-16
	Nonvolatile Memory.....	6-17
	Keyboard Interface.....	6-17
	Video Controller.....	6-17
	Video Clock Circuitry.....	6-17
	Programmable Video Controller.....	6-18
	Attribute Control.....	6-18
	Character Generator.....	6-19
	Row Buffer Diagnostic Register.....	6-20
	Video Shift Register.....	6-20

## APPENDIXES

A	<b>SPECIFICATIONS.....</b>	A-1
B	<b>CONNECTOR PIN ASSIGNMENTS.....</b>	B-1
C	<b>SCHEMATICS.....</b>	C-1
D	<b>SERVICING THE WY-50+.....</b>	D-1
	Introduction to WY-50+ Maintenance.....	D-1
	Troubleshooting.....	D-1
	Power-On self-Test.....	D-1
	Field Diagnostics.....	D-2
	System Diagnostic Test.....	D-2
	Transmit/Receive Communications Port Test.....	D-4



Keyboard Function Test.....	D-5
Attribute/Character Font Test.....	D-6
Alignment and Adjustment.....	D-8
Pattern M.....	D-8
Pattern O.....	D-9
Parts List.....	D-10
Schematics.....	D-10
<b>INDEX.....</b>	<b>I-1</b>

## LIST OF FIGURES

1-1 Simplified Block Diagram.....	1-1
1-2 Memory Map.....	1-3
1-3 Keyboard.....	1-5
1-4 Terminal Dimensions.....	1-6
1-5 Operator Controls.....	1-7
2-1 Four Major Modules.....	2-2
2-2 Orientation View of Terminal and Components.....	2-3
2-3 Line Fuse Location.....	2-5
2-4 Keyboard Assembly.....	2-6
2-5 Monitor/Power Supply and Chassis.....	2-10
2-6 CRT/Yoke Assembly.....	2-12
2-7 Operator Brightness Potentiometer.....	2-14
2-8 AC Power Switch Removal.....	2-16
2-9 Microprocessor PCB Removal.....	2-18
3-1 Test Jumper.....	3-2
3-2 Troubleshooting Flowchart.....	3-4
3-3 Power Connector at the Microprocessor PCB.....	3-8
4-1 Monitor/Power Supply Component Layout.....	4-1
4-2 Yoke Lock on the CRT Neck.....	4-7
4-3 Display Magnets.....	4-8
6-1 Microprocessor PCB.....	6-2
6-2 Microprocessor PCB Block Diagram.....	6-4
6-3 Monitor/Power Supply Block Diagram .....	6-10
6-4 Horizontal Oscillator Timing.....	6-12
6-5 Vertical Timing.....	6-13
6-6 Keyboard Block Diagram.....	6-13
D-1 Keyboard Function Test Pattern.....	D-6
D-2 Attribute/Character Font Test.....	D-7
D-3 Pattern M.....	D-8
D-4 Pattern O.....	D-9

## LIST OF TABLES

3-1 Error Message Definitions.....	3-1
4-1 Problems and Adjustments.....	4-4
4-2 Screen Areas Affected by Display Magnets.....	4-9
6-1 8031 Pin Assignments.....	6-14
D-1 Power-On Self-Test Error Codes.....	D-1
D-2 System Diagnostic Test Error Codes.....	D-3
D-3 Transmit/Receive Com Port Test Error Codes.....	D-5
D-4 Test Pattern Problems and Adjustments.....	D-10



## 1 GENERAL INFORMATION


### INTRODUCTION

The WY-50 is a compact, high-performance, low-cost terminal capable of meeting the needs of a wide variety of applications. The terminal consists of a display console and a detached keyboard from which data can be entered for display on the cathode ray tube (CRT). All of the electronics needed to support the display and keyboard are in the terminal.

In addition to the CRT and keyboard, the terminal contains two independent telecommunications interfaces. Peripherals, such as a hard-copy printer, attach to the terminal with the auxiliary interface connector on the rear panel.

All the component parts are organized around and controlled by the microprocessor. The microprocessor controls all internal data manipulation and processing functions. Figure 1-1 is a simplified block diagram of the terminal.

Figure 1-1 Simplified Block Diagram

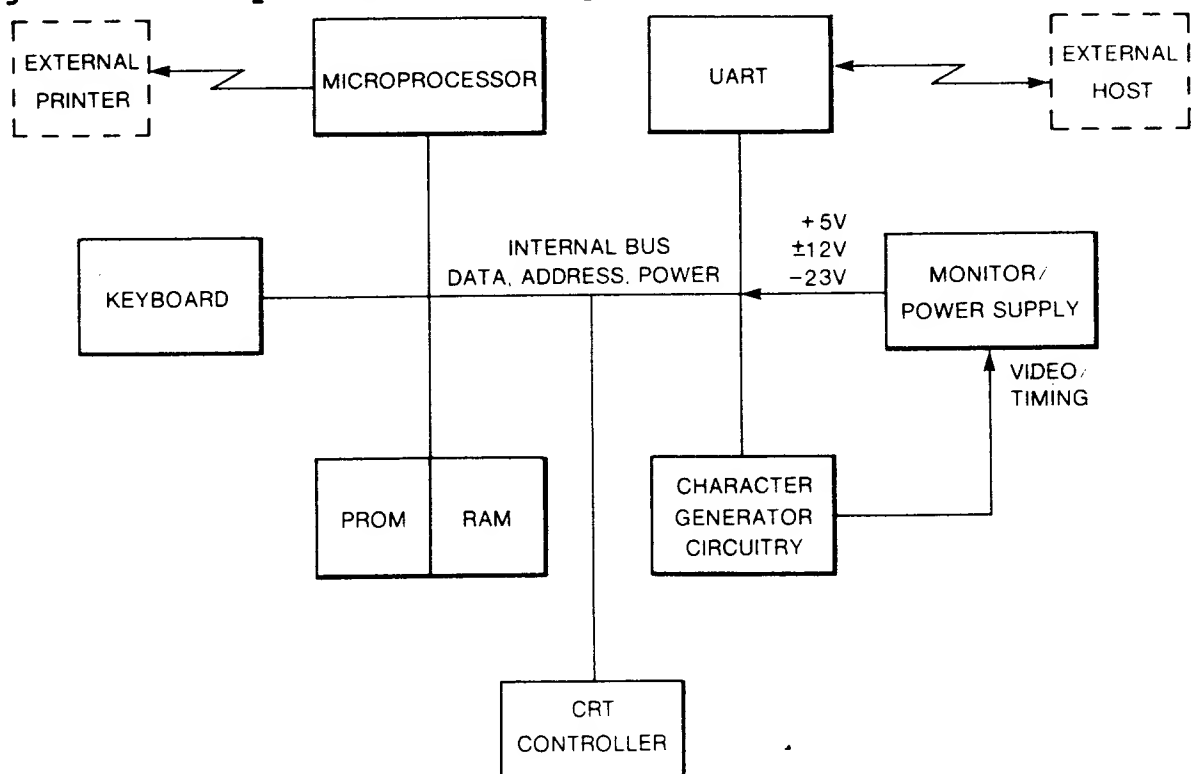



## HIGH LEVEL FUNCTIONAL DESCRIPTION

The terminal consists of a microprocessor, a CRT controller, associated control logic, and input/output (I/O) devices. This circuitry is mounted on a single printed circuit board (PCB) in the display console pedestal. The microprocessor controls all basic functions. Timing and control signals for the CRT are generated on the microprocessor PCB. The deflection, high-voltage, and power supply circuitry are located on a single PCB that sits just below the neck of the CRT. Cabling connects the microprocessor PCB and the monitor/power supply PCB. The microprocessor PCB is in the base of the terminal. The monitor/power supply PCB is inside the monitor.

### MICROPROCESSOR

The heart of the terminal is an 8-bit, single component microprocessor that has 128 bytes of RAM, 32 I/O lines, two 16-bit counter/timers, a full-duplex UART, and integral interrupt and clock circuitry. The microprocessor uses an external EPROM for program storage. This EPROM can be either 4K, 8K, or 16K. In addition to EPROM, a buffer consisting of up to 4K of RAM holds display information. The microprocessor, CRT controller, and telecommunications interface electronics are attached to a bidirectional bus. These circuits can perform their functions independently while interfacing with the microprocessor or the memory on a direct-memory access (DMA) or interrupt basis.

### MEMORY

The memory consists of RAM, EPROM, and EAROM. The RAM stores display information, which is repeatedly read from memory by the CRT controller. This information refreshes the CRT screen. The EPROM stores programs and contains the power-up and self-test routines. The EAROM stores the operator's setup parameters (i.e. baud rate and parity). The microprocessor has an address range capability of 64K. In addition to this addressing range capability, the microprocessor treats external program storage (EAROM) separately (it has its own enable line). This means that an external EPROM can use an additional 64K memory space without infringing on the space available for I/O or RAM. Figure 1-2 is a memory map for the terminal. Note that the EPROM is not shown in the figure because it does not occupy I/O or memory address space.

The standard RAM capacity is 4K and consists of two 2K x 8 RAMS. Each 2K x 8 RAM is allowed 8K of address space. The lower RAM



3FFFH. Since each RAM uses only 2K of address space, the RAM addressing wraps around at 2K page boundaries. The system firmware addresses the RAM from 1800H to 27FFH in order to access 4K of unique contiguous location.

Figure 1-2 Memory Map

HEX ADDRESS			
0000H	0FFFH	1st 2K OF RAM	RAM
1000H	1FFFH		
2000H	2FFFH	2nd 2K OF RAM	
3000H	3FFFH		
4000H	4FFFH	CRT CONTROLLER	CRT CONTROLLER
5000H	5FFFH		
6000H	6FFFH	S.I.O. (UART)	UART
7000H	7FFFH		
8000H	8FFFH	ROW BUFFER	ROW BUFFER DIAGNOSTIC REGISTER
9000H	9FFFH	DIAGNOSTIC REGISTER	
A000H	AFFFH	KEYBOARD LATCH	KEYBOARD
B000H	BFFFH		
C000H	CFFFH	EAROM	EAROM
D000H	DFFFH		
E000H	EFFFH	UNASSIGNED	
F000H	FFFFH		



## INPUT/OUTPUT DEVICES


The I/O devices consist of a keyboard, a CRT display, and two telecommunications interfaces.

### Keyboard

The keyboard consists of 101 keys mounted on a single-sided printed circuit board. All keys have full-travel, hard-contact switches. The microprocessor periodically scans the keys checking for a key closure. Figure 1-3 illustrates the terminal's keyboard. A detailed description is found in "Theory of Operations," Chapter 6.



Figure 1-3 Keyboard

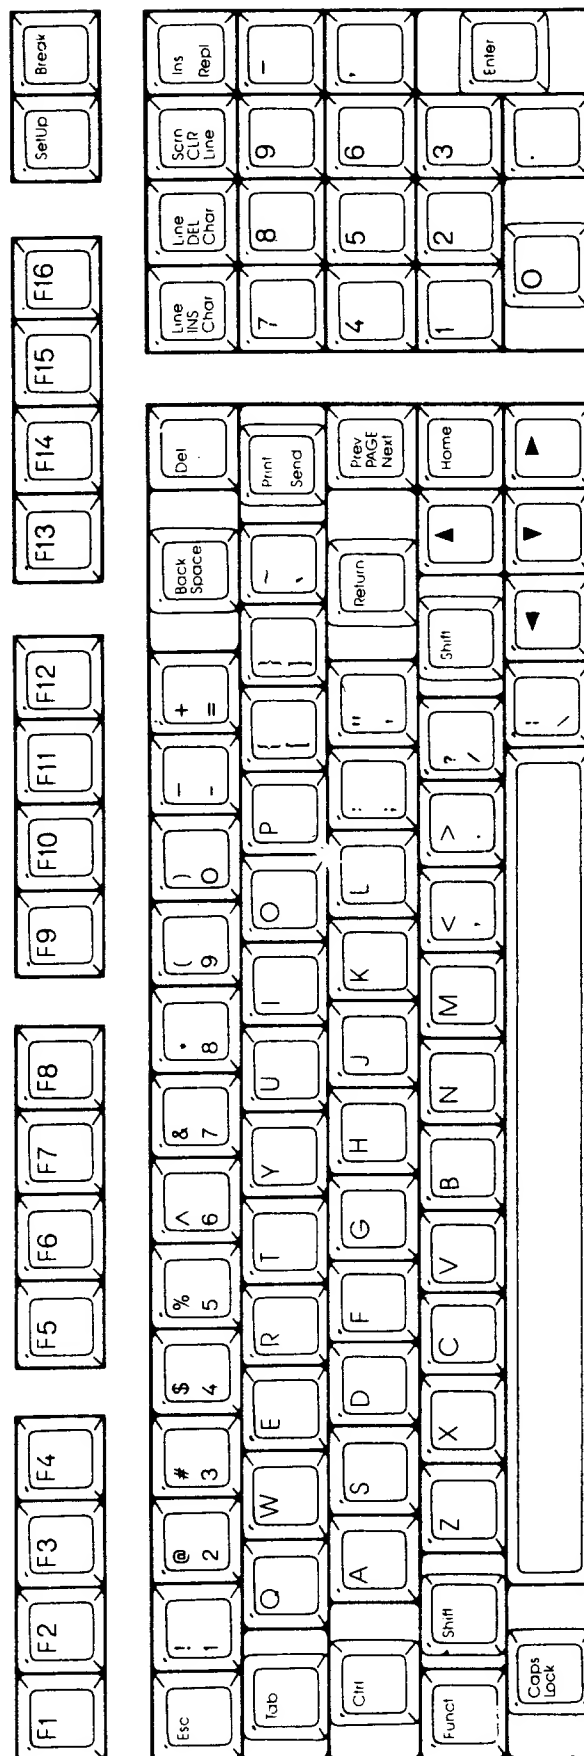



## CRT Display

The terminal has a 14-inch CRT. It displays 24 rows of characters (either 80 or 132 columns) and two control rows (one for terminal status and the other for function key identification). The CRT controller reads displayed characters from RAM on a direct memory access basis.

## TELECOMMUNICATIONS


The terminal has two independent asynchronous interfaces that conform with the EIA standard RS-232C. Data rates can be set independently for either interface. The setup procedures in this chapter define the operator-controlled parameters. The operator-controlled parameters are defined in the setup procedures in this chapter. The primary (modem) interface can communicate at data rates up to 38.4K bps. The AUX (auxiliary printer) interface is unidirectional and can communicate at data rates up to 19.2K bps.

## ENVIRONMENTAL CONSIDERATIONS

The terminal can be placed on a table, desktop, or any other vibration-free horizontal surface free from lint and dust. Abnormally bright room light or direct sunlight from a window can interfere with the display.

Figure 1-4 shows the terminal's dimensions. The user should allow three inches of clearance on all sides when installing the terminal, to allow air circulation and room for the tilt and swivel mechanism.

Figure 1-4 Terminal Dimensions

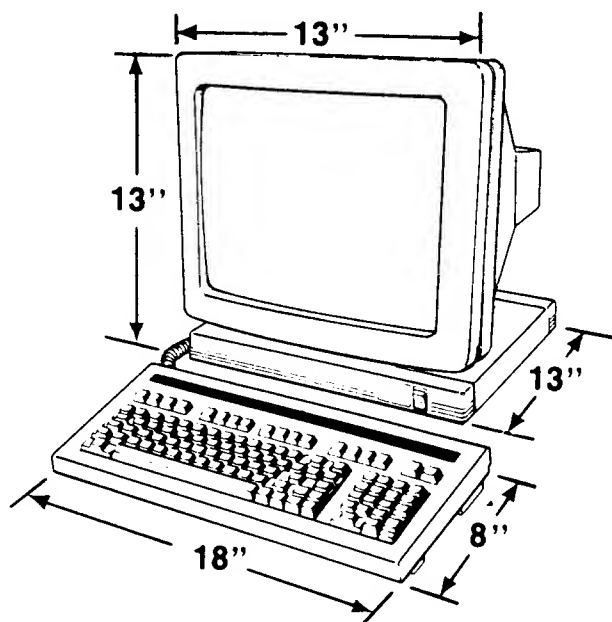




You can install the terminal next to most other types of electrical or electronic equipment without serious interference. Avoid locations near strong magnetic fields that can distort and interfere with the operation or servicing of the video display.

Ambient room temperature should never exceed 45 degrees Celsius (113 degrees Fahrenheit) when the terminal is on. No special cooling is necessary. Make sure the rear of the terminal has a free flow of air. Don't set it on sound-deadening devices that impede the intake of cooling air underneath it.

## OPERATOR CONTROLS

Figure 1-5 shows all operator controls, including the keyboard, power, and external brightness. It also points out the MODEM and AUX communication connectors.

Figure 1-5 Operator Controls

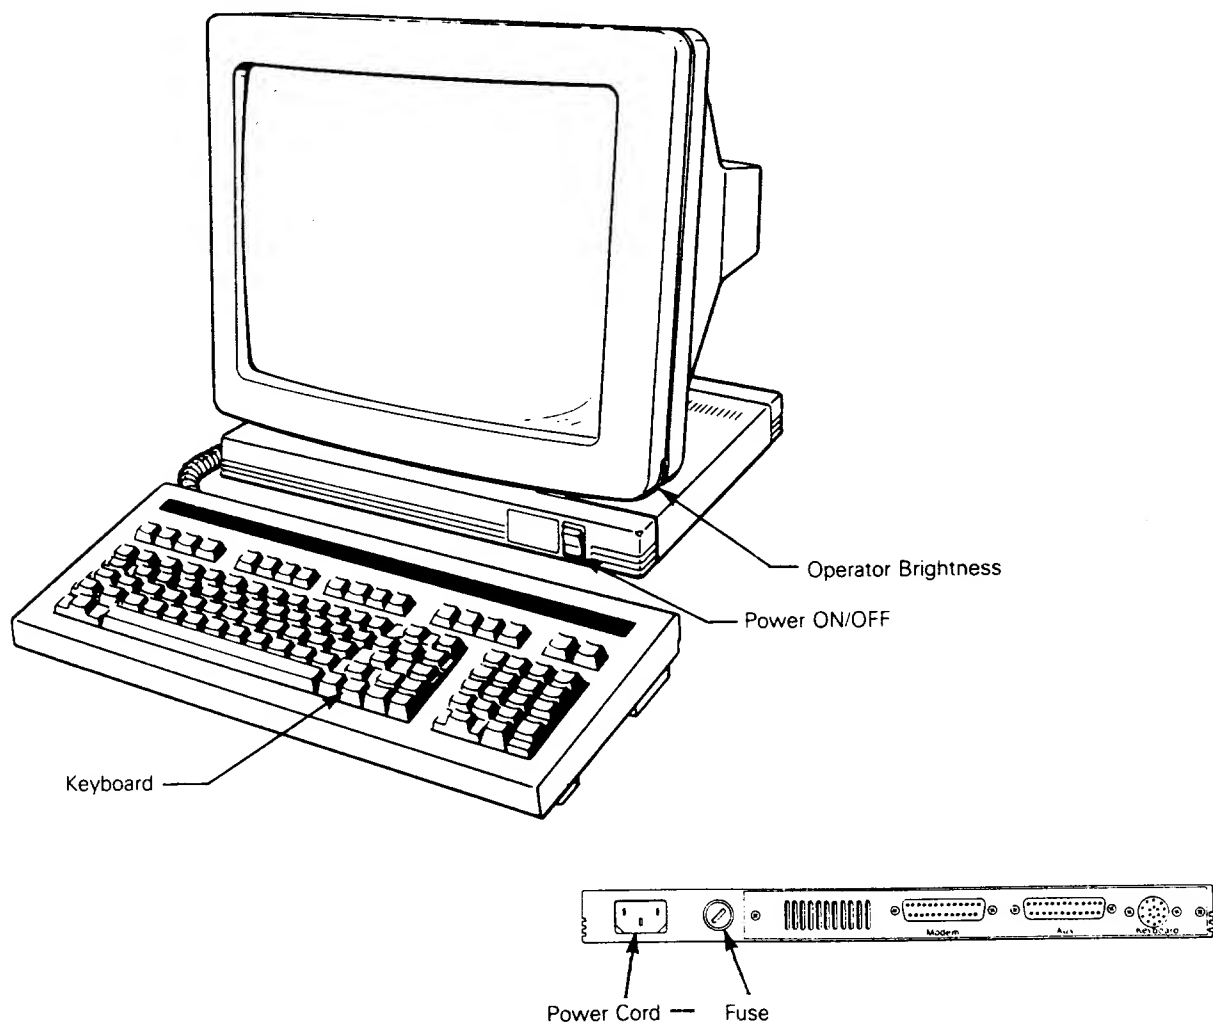



## Keyboard

Plug the keyboard into the keyboard connector on the rear panel. This plug fits only one way. Avoid unplugging or plugging in the keyboard when the power is on: you could damage the keyboard, the microprocessor board, or both.

**CAUTION**--Compare the voltage specified on the configuration label (on the back of the CRT enclosure) with the AC power source to prevent damaging the terminal.

## Power Cord

You should insert the power cord into the connector on the rear panel. Then plug it into a grounded three-prong AC power source. The AC plug is keyed so it can't be inserted the wrong way.

## Communications Cable

Connect the communications cable from the terminal or modem to the communications connector labeled MODEM. This port defaults to 9600 baud, no parity, with one stop bit and eight data bits. The operator can change these parameters by going into setup mode.

Connect the serial printer (if applicable) to the connector on the rear panel labeled AUX. This port is configured to operate at the same baud, parity, stop bit, and data bit as the MODEM port (the AUX port will operate up to 19.2K bps, the MODEM port will operate up to 38.4K bps). You can change these parameters by going into setup mode.

## Fuse

The line fuse is located to the right of the power cord receptacle. Both domestic and international versions of the terminal require a standard fuse, 250 volts, 2 amperes. You can find instructions about changing it in "Removal and Replacement," Chapter 2.

## Power Switch

The power switch is on the right of the console pedestal. Pressing the top of the switch turns AC power ON.

## Brightness Control

The brightness control is a thumbwheel located on the lower right-hand corner of the CRT bezel. Rotating the wheel



clockwise increases the display brightness. Rotating it counterclockwise decreases the brightness.

## SETUP PARAMETERS

When you turn the power on, the terminal beeps and executes an internal self-test. When the self-test finishes and the CRT is warm (approximately 30 seconds), the cursor appears in the upper left-hand corner of the display. The unit is now ready for operation based on the setup parameters.

To inspect the parameters, press SHIFT while simultaneously pressing SETUP. The first level of parameters appears across the bottom of the screen. To examine the other four levels of parameters, press ▼ key. Each time you press this key, you can see another level. Change parameters with this procedure:

1. Enter the setup mode by pressing SHIFT and SETUP simultaneously.
2. Press ▼ key until the parameter to be changed is displayed on the bottom row of the screen.
3. Press ► key until the specific parameter to be changed is highlighted.
4. Press the spacebar to advance the parameter to the specific setting desired.
5. Press the cursor keys to advance to the next parameter to be changed.
6. To leave the setup mode, press SHIFT and SETUP simultaneously.

The status line flashes a message asking if the changed parameters should be saved for power-on. Parameter changes not saved are implemented immediately. The next time the terminal is turned on, any parameters established before the unsaved changes will be the parameters under which it operates.

Pressing Y saves the parameters keyed in but does not alter any of the function key definitions.

Pressing A saves all changes made (maximum, four bytes per function key).

7. To return to a normal operation mode, press any key.

The terminal is now operational using the parameters defined in the setup mode.

To get back to the power-on default parameters without



cycling the power, press ESC while in the setup mode.

See the WY-50 Reference Manual for more comprehensive setup instructions.

## **CLEANING**

The terminal needs an occasional cleaning. The screen should be cleaned with a soft, lint-free cloth. Don't ever use chemical substances, abrasives, or commercial glass cleaners that contain alcohol or ammonia to clean the screen. (Apply the cleaner to the cloth, not directly to the screen.)



## 2 REMOVING AND REPLACING COMPONENTS

### MODULES

This chapter describes how to remove and install each module. For purposes of orientation, FRONT is the monitor face, BACK is the rear panel and power cord location (see Figure 2-2).


The terminal consists of these four major modules (see Figure 2-1):

#### Module Name

- o     Monitor/Power Supply     The monitor/power supply performs two major functions: it converts AC input voltage to the required DC voltages (+5V, +12V, -12V, -23V, and +24.5V) and it amplifies and displays horizontal, vertical, and video signals on the CRT screen.
- o     Keyboard     The keyboard is a scanned matrix. When the user presses a key, the keyboard flags the CPU to generate the appropriate key code. The CPU also debounces keys.
- o     Microprocessor PCB     The microprocessor PCB generates video and output signals. All control logic is on this PCB.
- o     CRT/Yoke Assembly     The CRT/yoke assembly contains both the cathode ray tube and the yoke that deflects the electron beam.




Figure 2-1 Four Major Modules

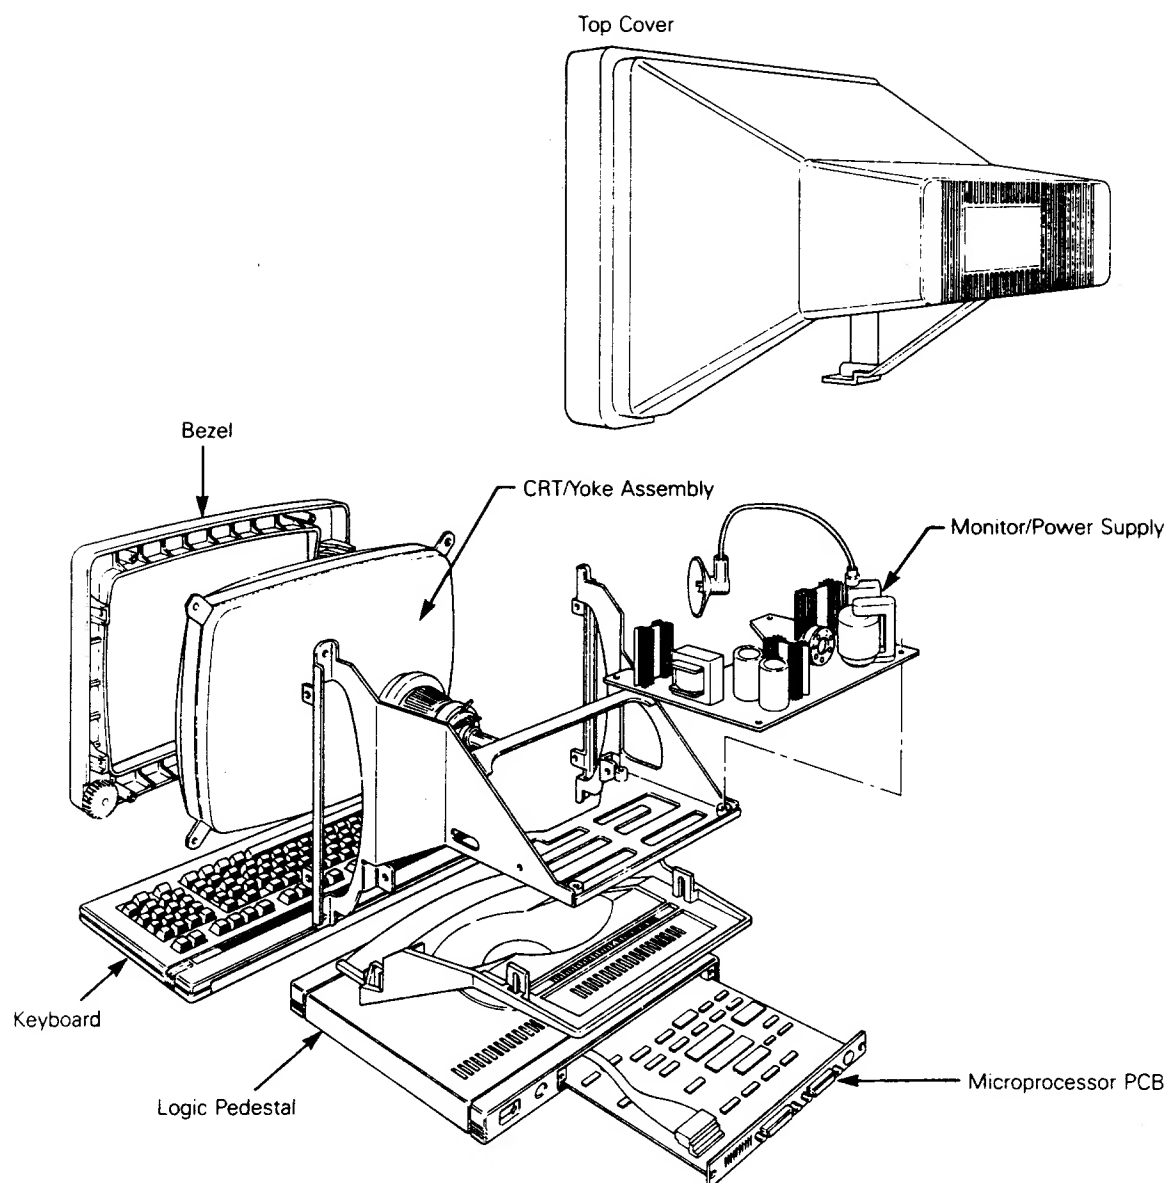



All modules within the terminal can be removed for repair or replacement by the service technician without any special tools.

Figure 2-2 Orientation View of Terminal and Components

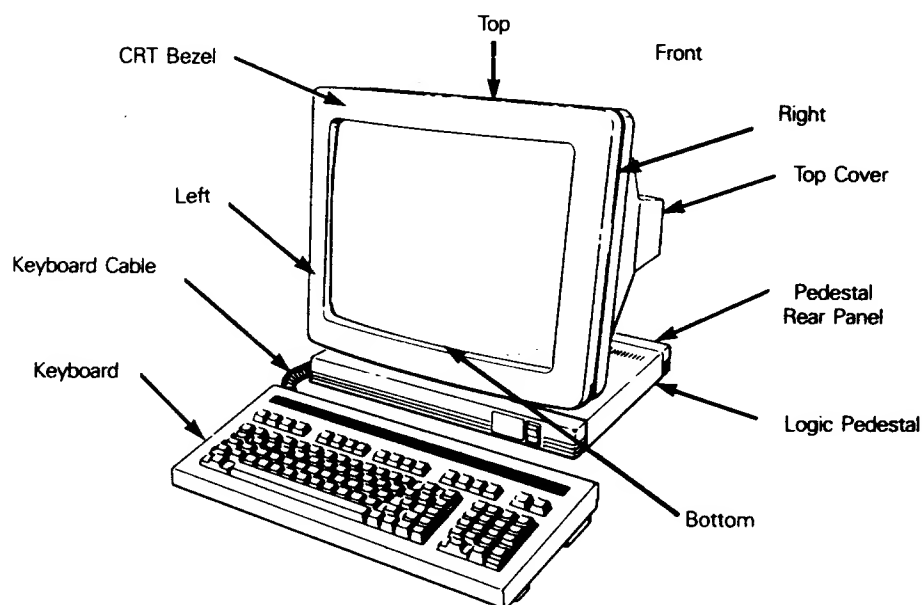

**WARNING**--There are high voltages present. Only qualified service technicians should open up the terminal housing.

The following paragraphs describe removal and replacement procedures for these components and modules:

- o Fuse
- o Keyboard
- o Keyboard cable
- o Keyboard PCB
- o Monitor/power supply PCB
- o CRT/yoke assembly
- o External brightness potentiometer (operator control)
- o AC power switch
- o Microprocessor PCB

If you have the materials and tools listed here, you will be prepared to remove and replace any of the parts or assemblies in this chapter.

**Materials:**

- Standard fuse, 250 volts, 2 amperes
- Tie wraps

**Required Tools:**

- Insulated slotted screwdriver, 12"



No. 1 Phillips screwdriver, 12"  
No. 2 Phillips screwdriver


Recommended Tools:  
Ohmmeter  
Shorting stick

#### FUSE REPLACEMENT

Tools Required:  
Slotted screwdriver  
Standard fuse, 250 volts, 2 amperes  
Ohmmeter (recommended)



Figure 2-3 Line Fuse Location

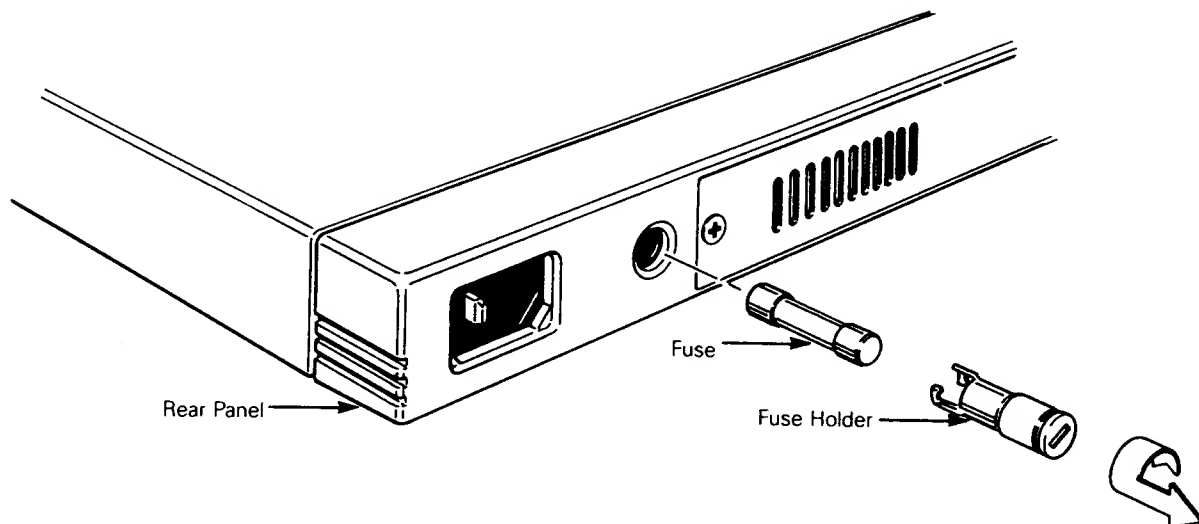


1. Disconnect the terminal from its power source.
2. Push the fuse holder in with a slotted screwdriver. Twist it counterclockwise until it releases.
3. Inspect the fuse. If it is broken or blackened, replace it with a new fuse in the fuse holder. (Check continuity of the new fuse with an ohmmeter.)
4. Push the fuse holder and new fuse back into the fuse socket with a slotted screwdriver. Twist the fuse holder clockwise until it locks in place.

#### KEYBOARD REPLACEMENT

Tools Required:  
None



Figure 2-4 Keyboard Assembly

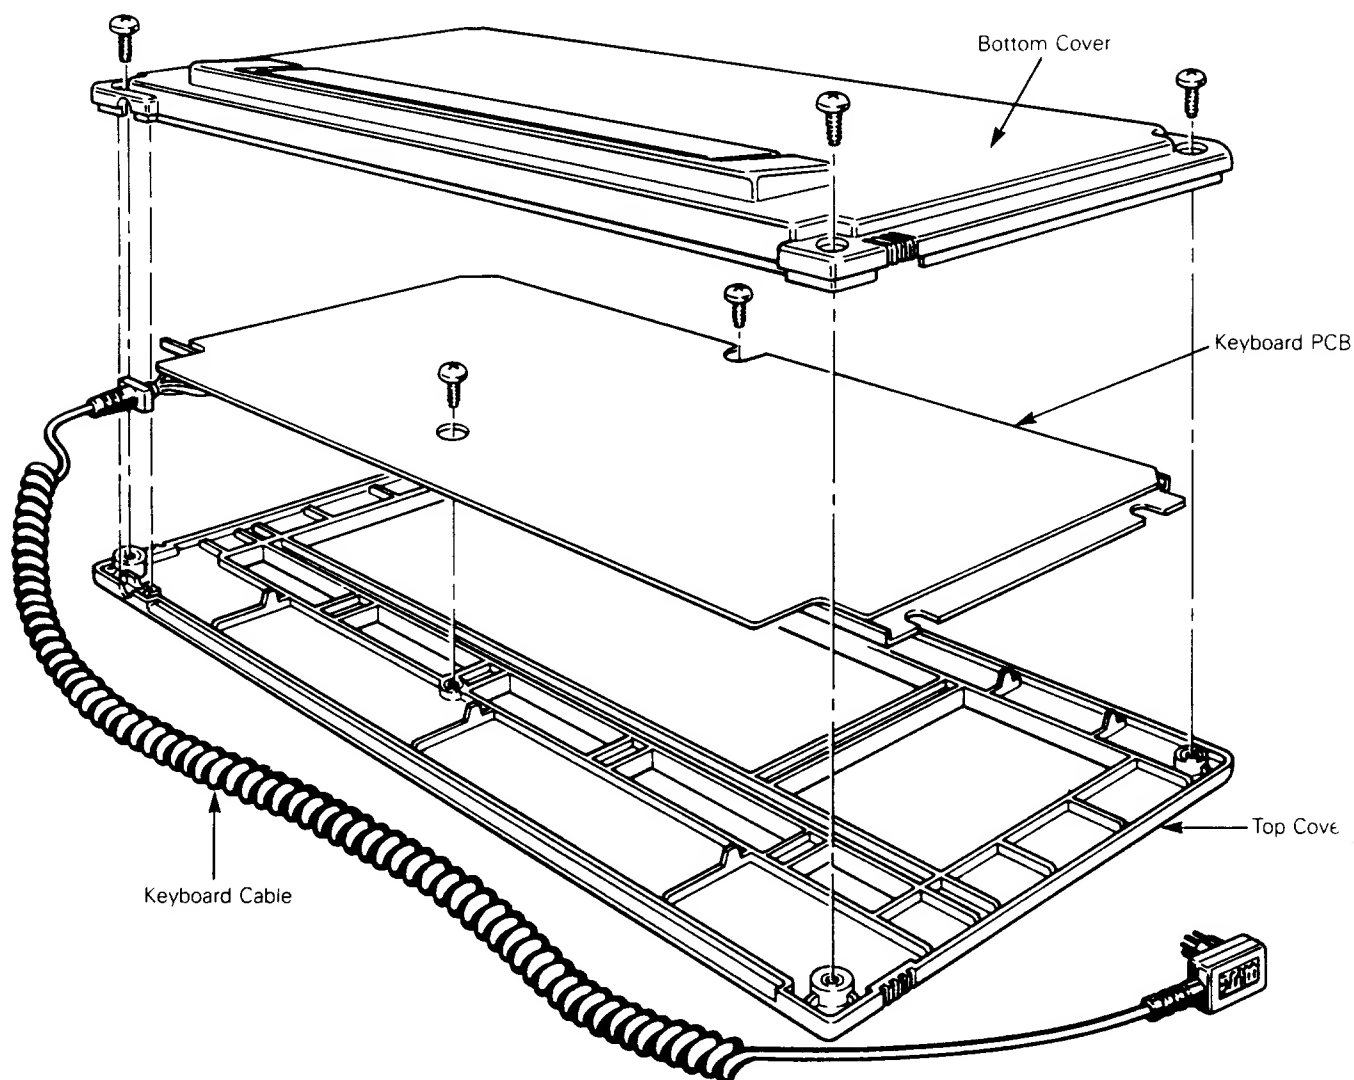

1. Disconnect the terminal from its AC power source.
2. Unplug the keyboard cable from the keyboard connector at the rear panel.
3. Plug the new keyboard into the rear panel.

#### KEYBOARD CABLE REPLACEMENT

Tools Required:

No. 2 Phillips screwdriver

See Figure 2-4.



This is the procedure to replace the keyboard cable:

1. Disconnect the terminal from its AC power source.
2. Unplug the keyboard cable from the rear panel.
3. Turn the keyboard over and remove the four No. 2 Phillips head screws holding the keyboard bottom cover (one screw in each corner).
4. Lift the keyboard bottom cover off of the keyboard assembly.
5. Remove the two No. 2 Phillips head screws holding the keyboard top cover to the metal frame and PCB assembly. Lift the PCB assembly out of the keyboard.
6. Unscrew the No. 1 Phillips screw holding the keyboard cables shielded grounding strap to the keyboard.
7. Unplug the keyboard cable from the keyboard.
8. Connect the new keyboard cable to the connector on the PCB. Reconnect the grounding strap. (A few older keyboards do not have compatible connectors. You may have to replace both the cable and the PCB.)
9. Fit the keyboard PCB assembly back into the keyboard top cover. Make sure that the cable fits properly through the edge of the keyboard assembly, then replace the two No. 2 Phillips head screws that hold the PCB in place.
10. Reattach the rear cover of the keyboard assembly.

#### KEYBOARD PCB REPLACEMENT

##### Tools Required:

No. 2 Phillips screwdriver

See Figure 2-4.

This is the procedure to replace the keyboard PCB:

1. Disconnect the terminal from its AC power source.
2. Unplug the keyboard cable from the rear panel.
3. Turn the keyboard over and remove the four No. 2 Phillips head screws holding on the keyboard bottom cover (one screw in each corner) to the keyboard assembly.
4. Lift the keyboard bottom cover off of the keyboard assembly.



5. Remove the two No. 2 Phillips head screws holding the keyboard top cover to the metal frame and PCB assembly. Lift the PCB assembly out of the keyboard.
6. Unscrew the No. 1 Phillips screw holding the keyboard cables shielded grounding strap to the keyboard.
7. Unplug the keyboard cable from the keyboard.
8. Connect the keyboard cable to the keyboard connector on the new PCB. Reconnect the grounding strap.
9. Fit the keyboard PCB assembly back into the keyboard top cover. Make sure that the cable fits properly through the edge of the keyboard assembly, then replace the two No. 2 Phillips head screws that hold the PCB in place.
10. Reattach the bottom cover of the keyboard assembly.

#### TOP COVER REPLACEMENT

Tools Required:

No. 1 Phillips screwdriver, 12"

This is the procedure to remove and replace the top cover:

1. Turn the terminal off. Disconnect it from its AC power source.
2. Remove four No. 1 screws holding the top cover in place (one behind each of the four corners of the bezel).
3. Lift the cover up and away from the terminal.
4. Replacement is the reverse order of removal.

#### REPLACING THE MONITOR/POWER SUPPLY PCB

Tools Required:

No. 1 Phillips screwdriver, 12"

Insulated slotted screwdriver, 12"

See Figure 2-5.

**CAUTION--High voltage is present.** Only qualified service personnel should service the terminal.

#### Changing Power Requirements on the Terminal

The terminal operates at either 115 VAC, 60 Hz, or 230 VAC, 50 Hz. The operating voltage is controlled by a jumper located on



the monitor/power supply logic card. Look at Figure 2-5 for the jumper location.


Before you change the monitor/power supply PCB, make sure the power on the new PCB is strapped correctly.

Here is the procedure to strap the power for 115 VAC (domestic):

1. Connect the crimp-on connector with the black wire to the pin marked 115 on the monitor/power supply PCB (see Figure 2-5).
2. Connect the crimp-on connector with no wire, to the pin marked 230 on the monitor/power supply PCB.



Figure 2-5 Monitor/Power Supply and Chassis

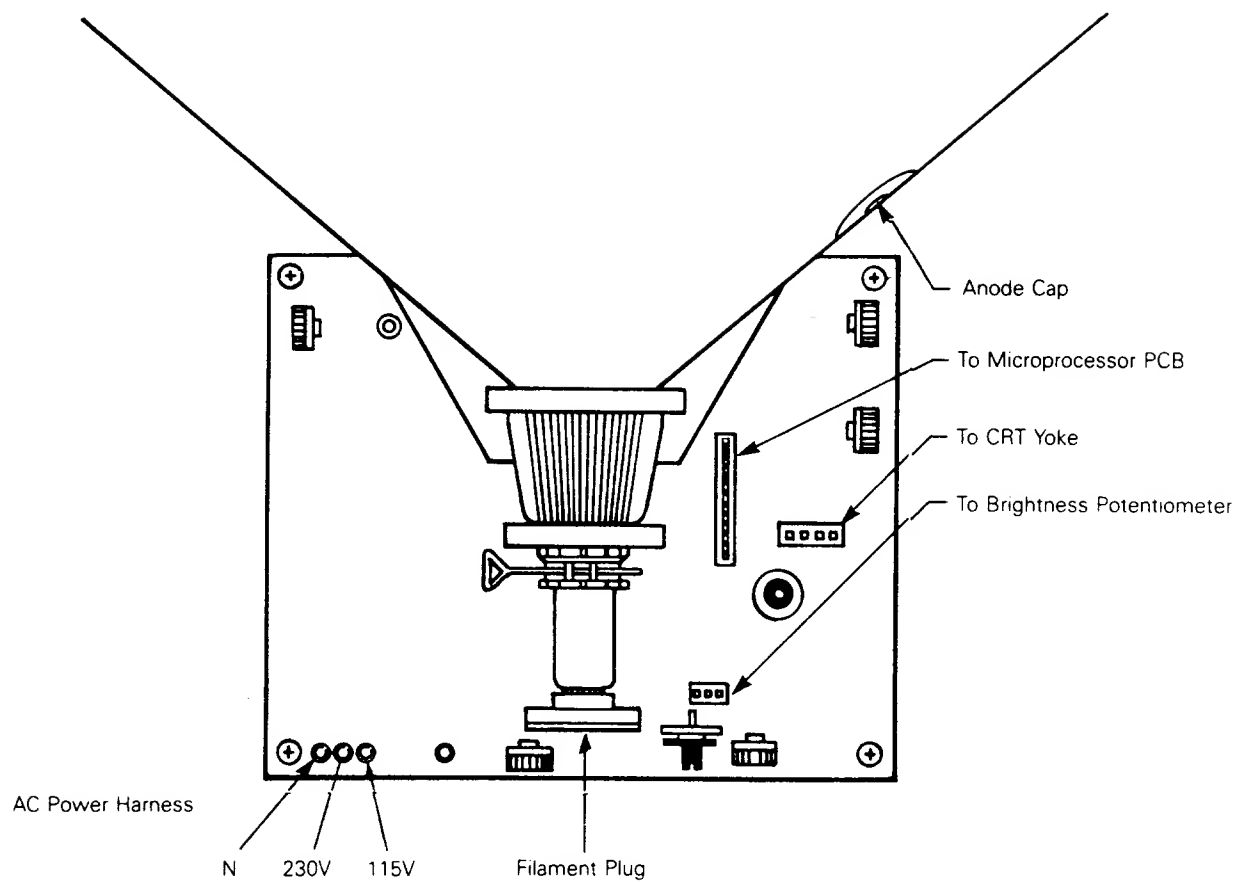



## APPENDIX D SERVICING THE WY-50+

### INTRODUCTION TO WY-50+ MAINTENANCE

Servicing the WY-50+ is nearly the same as servicing the WY-50. Major feature differences include the amber screen, additional compatible modes, a bi-directional AUX port, Wyseword standard, and multiple pages of memory (two standard, four optional). New servicing features include an expanded set of field diagnostics, a keyboard function test, a test to check all character sets, and two new built-in test patterns for display alignment.

### TROUBLESHOOTING

Added troubleshooting features include an improved self-test, a new diagnostic self-test, a communication port test, a keyboard function test, an attribute/character font test, and a new display to check all attributes.

**Note**--Running the diagnostic tests described here (other than the power-on self-test) defaults all setup parameters and function keys.

#### Power-On Self-Test

When a user turns the terminal on, it performs a self-test of the logic PCB. If the self-test discovers a failure, an alphanumeric error code indicating failure type will appear in the lower-right corner of the display. An error code usually indicates logic PCB replacement. Table D-1 lists and explains the error codes.

Table D-1 Power-On Self-Test Error Codes

Error Message	Error Type
0	RAM bank 0
1	RAM bank 1
K	Reinitialize EARAM (Press the SETUP key to continue or turn off the terminal, then on again. Replace logic PCB only if error appears repeatedly.)
P	Code ROM checksum
Z	Processor RAM



The self-test checks RAM, EAROM, and the CPU. The RAM test is a read/write test that checks all 8K of RAM, or all 16K if additional memory is installed on the logic PCB. The CPU test checks 128 bytes of RAM in the CPU, the data lines, and the address lines. The EAROM test calculates the EAROM's checksum, and compares it to the checksum bit stored in the ROM.

## FIELD DIAGNOSTICS

The WY-50+ contains four new field diagnostics:

- o The System Diagnostic Test, an expanded version of the diagnostic self-test on page 3-2 of the WY-50 Maintenance Manual.
- o A Transmit/Receive Test for the communications ports.
- o A Keyboard Function Test.
- o An Attribute/Character Font Test

The following sections describe the diagnostic procedures, the new error codes, and the new test connectors and cables.

### System Diagnostic Test

This test is an expanded version of the power-on self-test. It checks memory, buffers, the CPU, and communications.

Follow these steps to perform the system diagnostic test:

1. Turn off the terminal.
2. Install the system diagnostic test connectors on the AUX and MODEM ports (see page D-4 for connector definitions).
3. Turn on the terminal.
4. Hold down the SHIFT key, then press the SETUP key.
5. Press the cursor DOWN key until the TEST parameter appears on the bottom line of the screen.
6. Press the cursor LEFT key once. The cursor highlights the TEST field.
7. Press the spacebar. This toggles the test field on.
8. Leave setup mode by holding down the SHIFT key and pressing the SETUP key again.
9. Save the selection by pressing the Y key. This starts the diagnostic self-test.



If the system diagnostic test doesn't find any errors, a flashing pattern should appear on the screen.

If it does find an error, the screen will blank and an error code will appear in the lower-right corner of the display. Replace the logic PCB.

Table D-2 lists and describes the system diagnostic test error codes.

**Table D-2 System Diagnostic Test Error Codes**

Error Message	Error Type
0	Buffer RAM, IC 0
1	Buffer RAM, IC 1 (if memory is expanded)
9	EAROM
R	Row Buffer
K	No initialization on power-up
A	Modem, RTS to CTS
C	Modem, DTR to DCD
E	AUX Ready to AUX RTS
P	Control PROM
Z	8031 processor
X	MODEM port loopback
Y	AUX port loopback

**Caution**--If you save the ON test parameter, turn off the power, and remove the test connectors, an error condition will result the next time someone turns on the terminal. Remember to default the terminal before returning it to the user.

Follow these steps to stop the system diagnostic test:

1. Hold down the space bar until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.



**System Diagnostic Test Connector Definitions**--The diagnostic self-test connectors for both the MODEM and the AUX ports are made from 25-pin, male, D-type connectors. (You can find information to order ready-made connector sets under Parts List on page D-10.)

Connect these pins:

**MODEM Port**

Pin 2 to Pin 3 (TxD to RxD)  
Pin 4 to Pin 5 (RTS to CTS)  
Pin 8 to Pin 20 (DCD to DTR)

**AUX Port**

Pin 2 to Pin 3 (TxD to RxD)  
Pin 6 to Pin 20 (DSR to DTR)

**Transmit/Receive Communication Port Test**

This test transmits data between the MODEM and AUX ports. If either port doesn't receive or recognize the data from the other port, an error code will appear on the screen.

Follow these steps to perform the test:

1. Turn off the terminal.
2. Install the communication port test cable on the AUX and MODEM ports (see page D-5 for a cable definition).
3. Turn on the terminal.
4. Hold down the SHIFT key, then press the SETUP key.
5. Press the cursor DOWN key until the TEST parameter appears on the bottom line of the screen.
6. Press the cursor LEFT key once. The cursor highlights the TEST field.
7. Press the spacebar. This toggles the test field on.
8. Leave setup by holding down the SHIFT key and pressing the SETUP key again.
9. Save the selection by pressing the Y key. This starts the communications port test.

If the communication port test doesn't find any errors, a flashing test pattern should appear on the screen.

If the communication port test does find an error, the screen will blank and an error code will appear in the lower-right corner of the display. Replace the logic PCB. Table D-3 lists and describes the error codes.



**Table D-3 Transmit/Receive Communication Port Test Error Codes**

Error Message	Error Type
W	Xmit/Rcv error, MODEM to AUX
Z	Xmit/Rcv error, AUX to MODEM

**Note**--Error messages listed on other tables may appear when this test runs, but most errors will be those listed above.

**Caution**--If you save the ON test parameter, turn off the power, and remove the test connectors, an error condition will result the next time someone turns on the terminal. Remember to default the terminal before returning it to the user.

Follow these steps to stop the test:

1. Hold down the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test cable. Default the terminal.

**Transmit/Receive Communication Port Test Cable Definitions**--The transmit/receive communication port test cable requires two 25-pin, male, D-type connectors, and wire to connect pins on each connector and to connect the two connectors together. (You can find information to order ready-made cables under Parts List on page D-10.)

Connect these pins:

MODEM Port (DTE)		AUX Port (DCE)
Pin 2 (TxD)	to	Pin 2 (RxD)
Pin 3 (RxD)	to	Pin 3 (TxD)
Pins 4 to 5		Pins 6 to 20
Pins 8 to 20		

### **Keyboard Function Test**

The keyboard function test checks the keyboard.

**Note**--The keyboard function test does not test the following keys: SHIFT, FUNCT, CAPS LOCK, SETUP, BREAK, or CTRL. If you press ENTER, the terminal will return to the system diagnostic test. Pressing function keys F1 through F16 will change attributes on portions of the test screen.



Follow these instructions to perform the keyboard test:

1. Start the system diagnostic test described on page D-2.
2. Hold down the space bar until the test pattern stops flashing.
3. Hold down the CTRL key, then press the A key until you see the screen in Figure D-1.
4. Find the bottom line of "m"s. Press the letter keys that you are testing, and watch the letters change in the middle of the bottom line.


If the letter keys in question don't work, replace the keyboard PCB.

If the letters do change during the test, but fail to respond during normal operation, check the logic PCB or the computer.

Follow these steps to stop the test:

1. Press the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.

**Figure D-1 Keyboard Function Test Pattern**

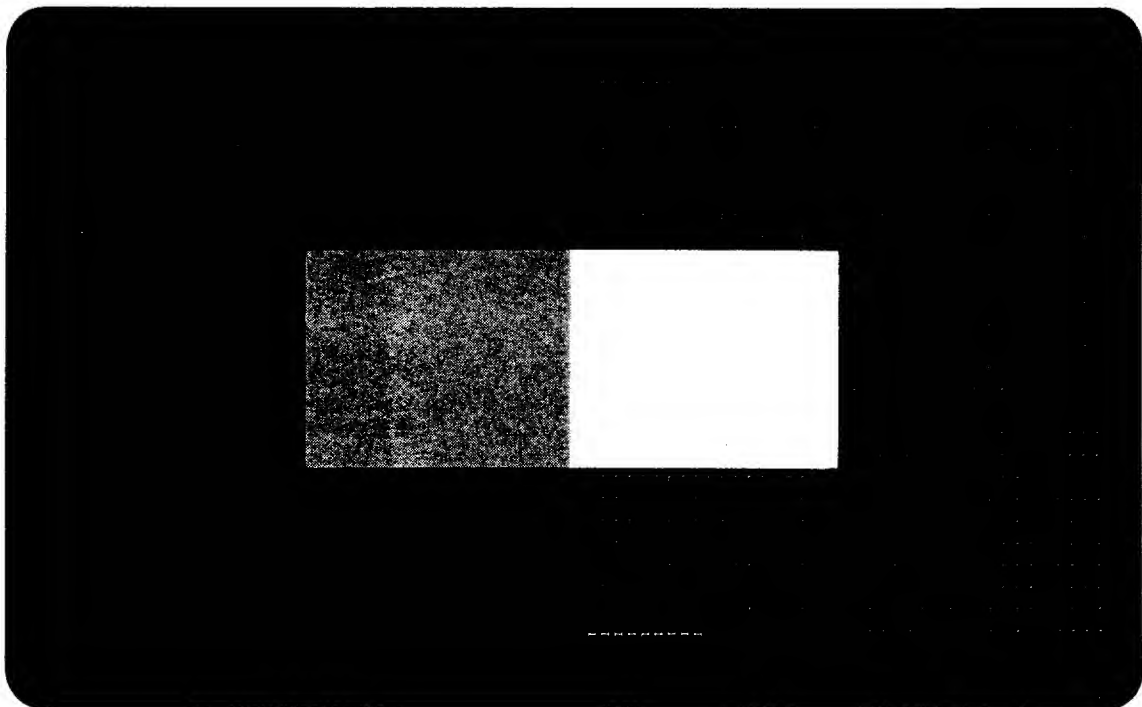



## Attribute/Character Font Test

This test allows you to check all the attributes and the character font.

Follow these steps to perform the test:


1. Start the system diagnostic test described on page D-2.
2. Hold the SETUP key down until the test pattern stops flashing.
3. Hold the CTRL key down, then press the A key until you see the screen in Figure D-2.
4. Look for the following features:

Attributes: Normal, Blank, Blink, Underline, Dim, and Reverse

A full character set

If one or more of the features doesn't appear, replace the logic PCB.

Figure D-2 Attribute/Character Font Test Pattern

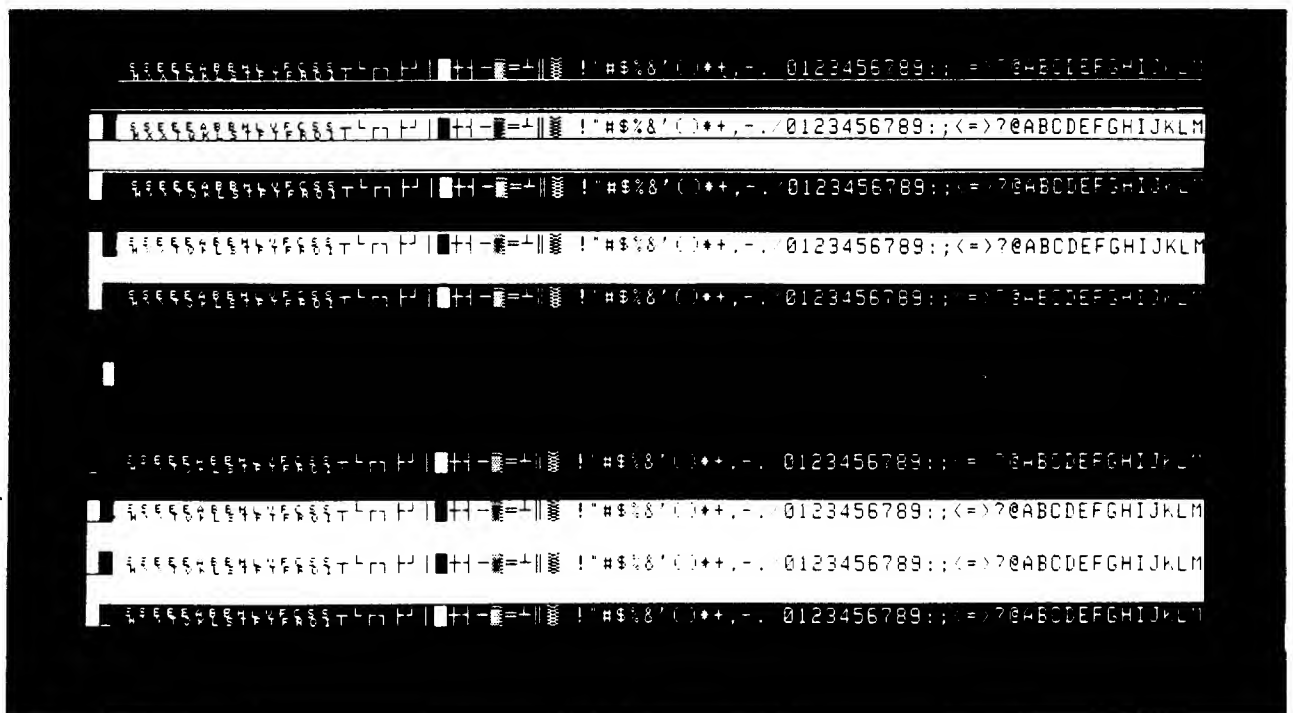



Follow these steps to stop the test:

1. Press the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.


## ALIGNMENT AND ADJUSTMENT

This terminal has two new test patterns, which you can call to align the display more accurately and quickly: Pattern M and Pattern O.

### Pattern M

Pattern M helps you detect and correct linearity, brightness, and focus (see Figure D-3). This pattern is an 80-column display of characters. Two blocks in the center of the pattern indicate brightness: dim and normal.

Figure D-3 Pattern M

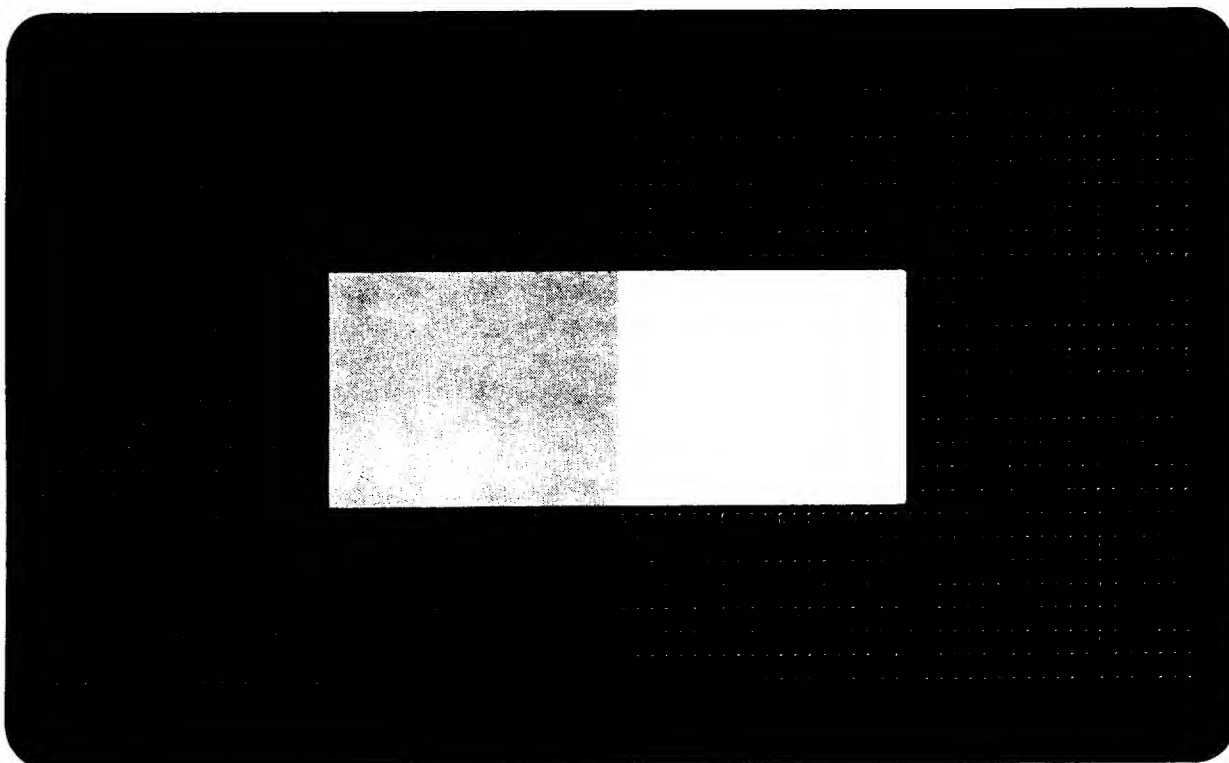



## Pattern 0

Pattern 0 helps you detect and correct pincushion, tilt, centering, and size problems (see Figure D-4). This pattern is a full-reverse, normal brightness display in 80-column format. Two pairs of parallel lines cross in the center, making four quadrants. Two additional vertical lines, one on either side of the pattern, indicate brightness intensity levels.

**Note**--You can verify the display tolerances using a display reticle, available from WYSE, Part No. 09-001-03. Instructions to use the reticle are included with it.

Figure D-4 Pattern 0

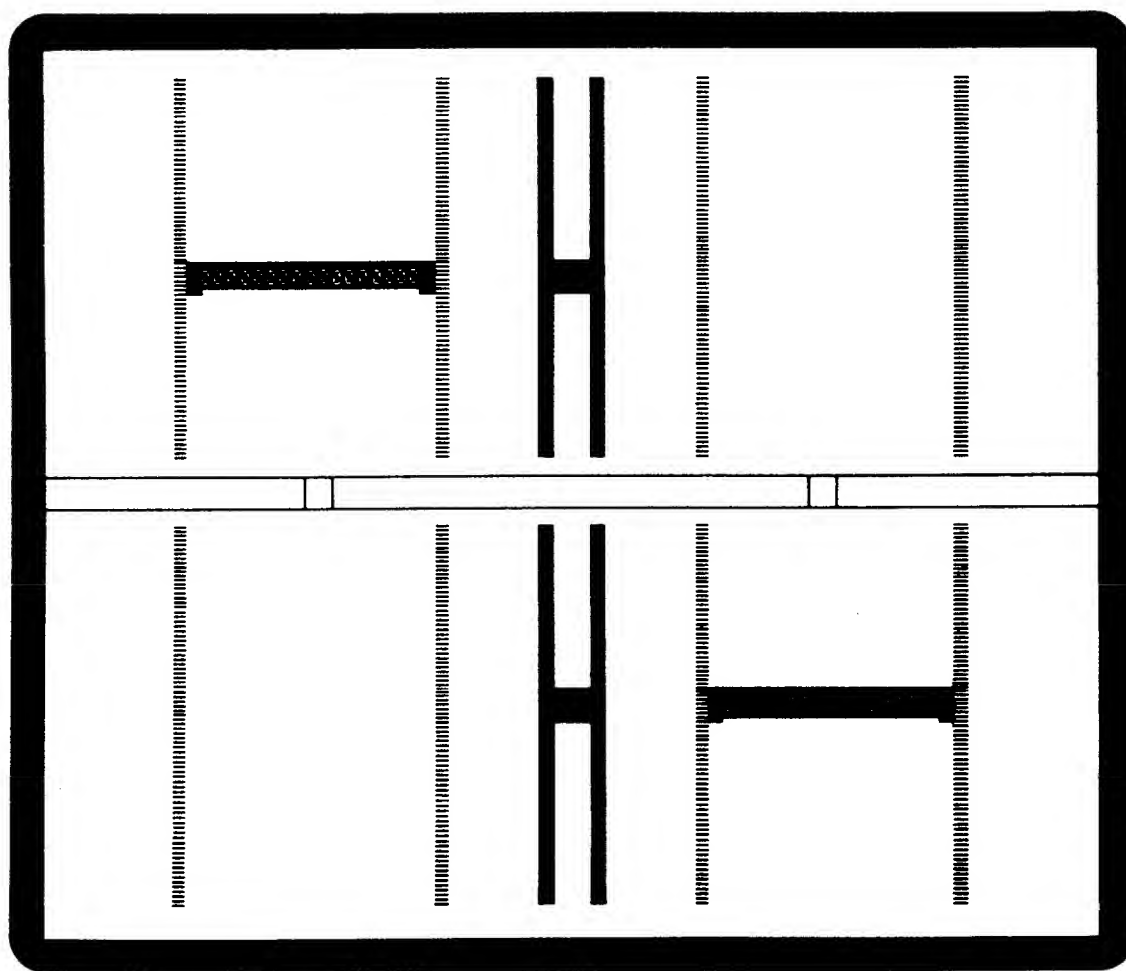


Table D-4 lists adjustments, display problems, and the pattern that is best suited to make the adjustment.



**Table D-4 Test Pattern Problems and Adjustments**

<b>Test Pattern</b>	<b>Display Problems</b>	<b>Adjustments</b>
M	Letters at the top of the display aren't the same height as those at the bottom of the display	Linearity
M	Fuzzy letters	Focus
M	Too bright; too dim; raster scan lines show	Brightness
O	Too short or too tall	Height
O	Too wide or too narrow	Width
O	Not centered	Centering
O	Not level	Yoke Lock
O	Pincushioning, barreling, crooked edges, corners sag or move out of tolerance	Display magnets

#### **PARTS LIST**

The WY-50+ contains three new assemblies that differ from the standard WY-50 terminal: the Logic PCB, the Monitor/Power Supply PCB, and the Amber CRT. The terminal also comes with test connectors and cables. You can order all other replaceable units with the spare part numbers assigned to the WY-50.

<b>Part Number</b>	<b>Description</b>
840293-01	WY-50+ Logic PCB
99-019-02	WY-50+ Monitor/Power PCB
780026-01	WY-50+ Amber CRT
94-0233-01	WY-50+ System Diagnostic Test Connector Set
94-0238-01	WY-50+ Transmit/Receive Comm Port Test Cable
09-001-03	WY-50+ Display Reticle

#### **SCHEMATICS**

See Appendix C, "Schematics," to find schematic diagrams of the WY-50+ Logic PCB and Monitor/Power Supply PCB.



## INDEX

### A

- Address Decoder, 6-5
- Adjustment
  - display, 4-4, D-8, D-10
  - display magnets, 4-8, D-10
  - focus, 4-5, D-8
  - height, 4-5, D-10
  - linearity, 4-5, D-8
  - sub-brightness, 4-8
  - width, 4-6, D-10,
  - yoke lock, 4-6, D-10
- Alignment
  - display, 4-4, D-8, D-10
- Altitude
  - operational range, A-3
- Attribute Bit Assignments, 6-19
- Attribute/Character Font Test, D-6
- Attribute Controller, 6-19
- Attribute Decoding Logic, 6-6
- Attribute Latches, 6-7
- Attributes
  - video, A-1
- Auxiliary Port, 6-16
  - handshake, A-3
- Auxiliary
  - baud rate, A-2

### B

- Bandwidth
  - video, A-1
- Baud Rate
  - auxiliary port, A-2
  - MODEM port, A-2
- Bidirectional Bus Driver, 6-6
- Bit Assignments
  - attribute, 6-19
- Bit Length
  - MODEM port, A-2
- Blanking
  - horizontal, 6-1
  - vertical, 6-1

### C

- Cathode Ray Tube, 6-1
- Character, 6-7
  - set, A-1
- Character Cell, 6-19
- Character Generator, 6-7



Character Matrix, 6-1, A-1  
Circuits  
    row decoder/key closure detection, 6-14  
    video clock, 6-17  
Column Decoder, 6-14  
Command Latch, 6-7  
Communications Mode, A-2  
Compatible Terminal Mode, A-3  
Component Diagram  
    monitor/power supply, 4-1  
Component Identification  
    x-y axis, 6-2  
Connections for  
    TCOM Test Plug, 3-2  
Control  
    attribute, 6-18  
Controller  
    CRT, 6-5  
    programmable video, 6-18  
    video, 6-17  
Converters  
    DC to AC, 6-9  
    level (EAROM), 6-7  
    level (EIA to TTL), 6-8  
    level (TTL to EIA), 6-8  
    parallel to serial, 6-7  
CPU Clock Generator, 6-8  
CRT, 1-4, 6-1, 6-11  
CRT Controller, 6-5  
Cursor  
    type, A-2

## D

DC to AC Converter, 6-9  
Decoder  
    address, 6-5  
    column, 6-14  
Diagnostic Self-Test, 3-2, D-1  
Disable, 6-1  
Display  
    color, A-1  
    capacity, 1-6  
    margins, size of, 4-3  
    measurement, tools required, 4-3  
    RAM, 6-5  
    specification, 4-3  
    WY-50+, A-1, D-1  
Display Alignment, 4-4, D-8, D-10  
    tools required, 4-4  
Display Magnets  
    adjustment, 4-8, D-10  
    screen areas affected by, 4-9  
Domestic Power Requirements, 2-8  
Dot Stretcher, 6-7



Doubler  
voltage, 6-8

Driver  
bidirectional bus, 6-6  
line, 6-14  
video, 6-7, 6-11

## E

Environmental Considerations  
air flow, 1-7  
temperature, 1-7

## Error Messages

power-on self-test, 3-1, D-1  
system diagnostic test, D-3  
transmit/receive communication port test D-5

## F

Field, 6-1  
Flyback Transformer, 6-11  
Focus Adjustment, 4-5  
Frequency  
horizontal, A-1  
Fuse Requirements, 1-8

## G

Generator  
character, 6-7, 6-19  
CPU clock, 6-8  
TCOM clock, 6-8  
video clock, 6-7

## H

Handshake  
AUX port, A-3  
MODEM port, A-2  
Height Adjustment, 4-5, D-10  
Horizontal Blanking, 6-1  
Horizontal Frequency, A-1  
Horizontal Oscillator, 6-11  
Horizontal-Synchronization Signal  
how to check, 3-3  
Humidity  
operational range, A-3

## I

Installation, 1-7  
communications cable, 1-8  
fuse, 1-8  
keyboard, 1-8  
power cord, 1-8  
printer, 1-8



## Interface

- asynchronous, 1-6
- cables, A-2
- communication, 6-16
- keyboard, 6-17
- modem, 1-6
- primary, 1-6
- RS-232C, 1-6

International Power Requirements, 2-8

## K

- Key Closure Detection, 6-14
- Key Switch Matrix, 6-14
- Keyboard, 1-4
  - specifications, A-1, A-2
- Keyboard Codes
  - language, A-1
- Keyboard Function Test, D-5
- Keyboard Latch, 6-6

## L

Language Keyboard Codes, A-1

### Latch

- attribute, 6-7
- character generator address, 6-7
- command, 6-7
- keyboard, 6-6
- low buffer, 6-6
- low order address, 6-6
- memory bus control, 6-6
- row address, 6-6
- row buffer data latch, 6-6
- row buffer diagnostic, 6-6
- Level Converters (EAROM), 6-7
- Level Converters (EIA to TTL), 6-8
- Level Converters (TTL TO EIA), 6-8
- Line Drivers, 6-14
- Linearity Adjustment, 4-5
- Logic
  - attribute decoding, 6-6
- Logic Specifications, A-3
- Low Buffer Latch, 6-6
- Low Order Address Latch, 6-6

## M

- Main Switching Power Transformer, 6-9
- Major Replaceable Units
  - WY-50/WY-50+, 2-1
- Materials Needed
  - WY-50/WY-50+ removal and replacement, 2-3
- Matrix
  - character, 6-1
  - key switch, 6-14



- Memory
  - display, 6-16
  - nonvolatile, 6-7, 6-17
  - screen, A-2
- Memory Bus Control, 6-19
- Memory Bus Control Latch, 6-6
- Microprocessor
  - single component, 6-5
- Mode
  - communications, A-2
  - compatible terminal, A-3
  - native, A-3
- MODEM Port, 6-16
  - baud rate, A-2
  - bit length, A-2
  - handshake, A-2
  - parity bit, A-2
  - stop bit, A-2
- Multiplexer
  - pass-thru, 6-8
  - RAM address, 6-5
- N
- Native Mode, A-3
- Net Weight, A-1
- Nonvolatile Memory, 6-7
- O
- Operator Controls
  - brightness, 1-8
  - power, 1-8
  - setup parameters, 1-9
- Orientation
  - WY-50/WY-50+, 2-1
- Oscillator
  - horizontal, 6-11
  - vertical, 6-11
- P
- Parallel-to-Serial Converter, 6-7
- Parity Bit
  - MODEM port, A-2
- Pass-Thru Multiplexer, 6-8
- in Assignments
  - 8031, 6-14
- Port
  - AUX, 6-16
  - MODEM, 6-16
- Power, A-3
- Power Requirements
  - how to change, 2-8
- Power Supply
  - how to adjust, 4-1
  - adjustment, tools required, 4-2
  - voltages, 6-8



Power Supply Quick-Reference Procedure, 3-3  
Power-On Self-Test Error Messages, 3-1, D-1  
Problems and Adjustments, 4-4, D-10  
PROM, 6-5  
Protected Characters, 6-19

## R

RAM  
    display, 6-5  
    row buffer, 6-6  
RAM Address Multiplexer, 6-5  
Register  
    row buffer diagnostic, 6-20  
    video shift, 6-20  
Reverse Video Functions, 6-19  
Row Address Latches, 6-6  
Row Buffer Data Latch, 6-6  
Row Buffer Diagnostic Latch, 6-6  
Row Buffer RAM, 6-6  
Row Decoder/Key Closure Detection Circuit, 6-14  
Row Decoding, 6-14

## S

Scan Lines, 6-1  
    total, A-2  
    total active, A-2  
Schematics, C-1  
Screen  
    format, A-1  
    memory, A-2  
    size, A-1  
Self-Test  
    diagnostic, 3-2  
    power-on, 3-1  
Setup Mode, 1-8, 1-9  
Single Component Microprocessor, 6-5  
Specifications, A-1  
    display, 4-3  
    display margins, 4-3  
Stop Bit  
    MODEM port, A-2  
Sub-Brightness Adjustment, 4-8  
Supply  
    +12 volt, 6-11  
    +24 volt, 6-11  
    +5 volt, 6-11  
    -12 volt, 6-11  
    -23 volt, 6-11  
Swivel, A-1  
System Diagnostic Test, D-2  
System Firmware, 1-3



## T

TCOM Clock Generator, 6-8

TCOM Test Plug, 3-2

Telecommunications Interfaces, 1-4

Temperature

operational range, A-3

Terminal

clearances, 1-6

compatible mode, A-3

placement of, 1-6

specifications, A-1

Test Pattern

alignment, 4-3, D-8, D-10

attribute/character font, D-7

Pattern M, D-8

Pattern O, D-9

problems and adjustments, 4-4, D-10

Tilt, A-1, D-9

Tools Needed

WY-50/WY-50+ removal and replacement, 2-3, 2-4

Tools Required for Display Alignment, 4-4

Tools Required for Display Measurement, 4-3

Tools Required for the Power Supply Quick Reference Check, 3-8, 4-2

Tools Required to Check Horizontal Synchronization, 3-9

Transformer

flyback, 6-11

main switching power, 6-9

Transmit/Receive Communications Port Test, D-4

Troubleshooting Flowchart, 3-3

how to use, 3-3

WY-50+, D-1

## U

UART, 6-5

## V

Vertical Blanking, 6-1

Vertical Hold

early terminals, 3-9

how to adjust, 3-9

Vertical Oscillator, 6-11

Video

attributes, A-1

Video Bandwidth, A-1

Video Clock Generator, 6-7

Video Drivers and Dot Stretcher, 6-7, 6-11

Voltages

specifications, A-3

power supply, 6-8

+12 volt supply, 6-11

+24.5 volt supply, 6-11

+5 volt supply, 6-11

-12 volt supply, 6-11

-23 volt supply, 6-11



Voltage Doubler, 6-8  
VR201, 4-2

**W**

Width Adjustment, 4-6

**WY-50+**

Attribute/Character Font Test, D-7

test pattern, D-7

Characteristics, D-1

Display (amber), A-1, D-1

alignment and adjustment, D-8

Keyboard Function Test, D-5

Part Numbers, D-10

Power-On Self-Test, D-1

error messages, D-1

Schematics, C-31, C-33, C-35, D-10

System Diagnostic Test, D-1

error messages, D-3

connector definitions, D-4

Test Patterns

attribute/character font, D-7

Pattern M, D-6, D-8

Pattern O, D-9

problems and adjustments, D-10

Transmit/Receive Communication Port Test, D-4

error messages, D-5

cable definitions, D-5

Troubleshooting, D-1

**Y**

Yoke Lock Adjustment, 4-6, D-10



Here is the procedure to strap the power for 230 VAC (international):

1. Connect the crimp-on connector with the black wire to the pin marked 230 on the monitor/power supply PCB (see Figure 2-5).
2. Connect the crimp-on connector with no wire, to the pin marked 115 on the monitor/power supply PCB.

This is the procedure to remove and replace the monitor/power supply:

**WARNING--High voltage is present.** Do not touch the CRT or CRT anode unless you are a qualified service technician.

1. Disconnect the terminal from its AC power source.
2. Remove the four No. 1 Phillips screws holding the CRT cover in place (one screw in each corner).
3. Hold the CRT cover by both ends and pull it off.
4. Disconnect the microprocessor PCB wiring harness.
5. Ground the shaft of the slotted screwdriver on the metal chassis of the terminal. Slip the blade of the screwdriver under the anode cap. Discharge the CRT anode with an insulated slotted screwdriver.
6. Disconnect the brightness pot wiring harness (Figure 2-5).
7. Disconnect the AC power harness (Figure 2-5).
8. Disconnect the filament plug from the neck of the CRT.
9. Disconnect the yoke wiring harness plug.
10. Disconnect the anode cap from the CRT.
11. Remove the four Phillips screws that hold the monitor/power supply PCB to the CRT frame (one in each corner).
12. Slide the PC board out the rear of the CRT frame.

**CAUTION--**Before you reattach the anode cap to the CRT or the microprocessor PCB wiring harness to the monitor/power supply assembly, discharge the CRT anode again. Because of the capacitive coating inside the CRT, it can recharge itself. The terminal has a common ground. If there is a residual charge and the microprocessor PCB wiring harness is reconnected, it may damage components on that PCB.




13. Install the monitor/power supply PCB in reverse order from removal.
14. When you replace the monitor/power supply PCB, realign the CRT. See "Theory of Operations," Chapter 6 for alignment information.

### CRT/YOKE ASSEMBLY REPLACEMENT

#### Tools Required:

- No. 1 Phillips screwdriver, 12"
- Slotted screwdriver, 12"

Figure 2-6 CRT/Yoke Assembly

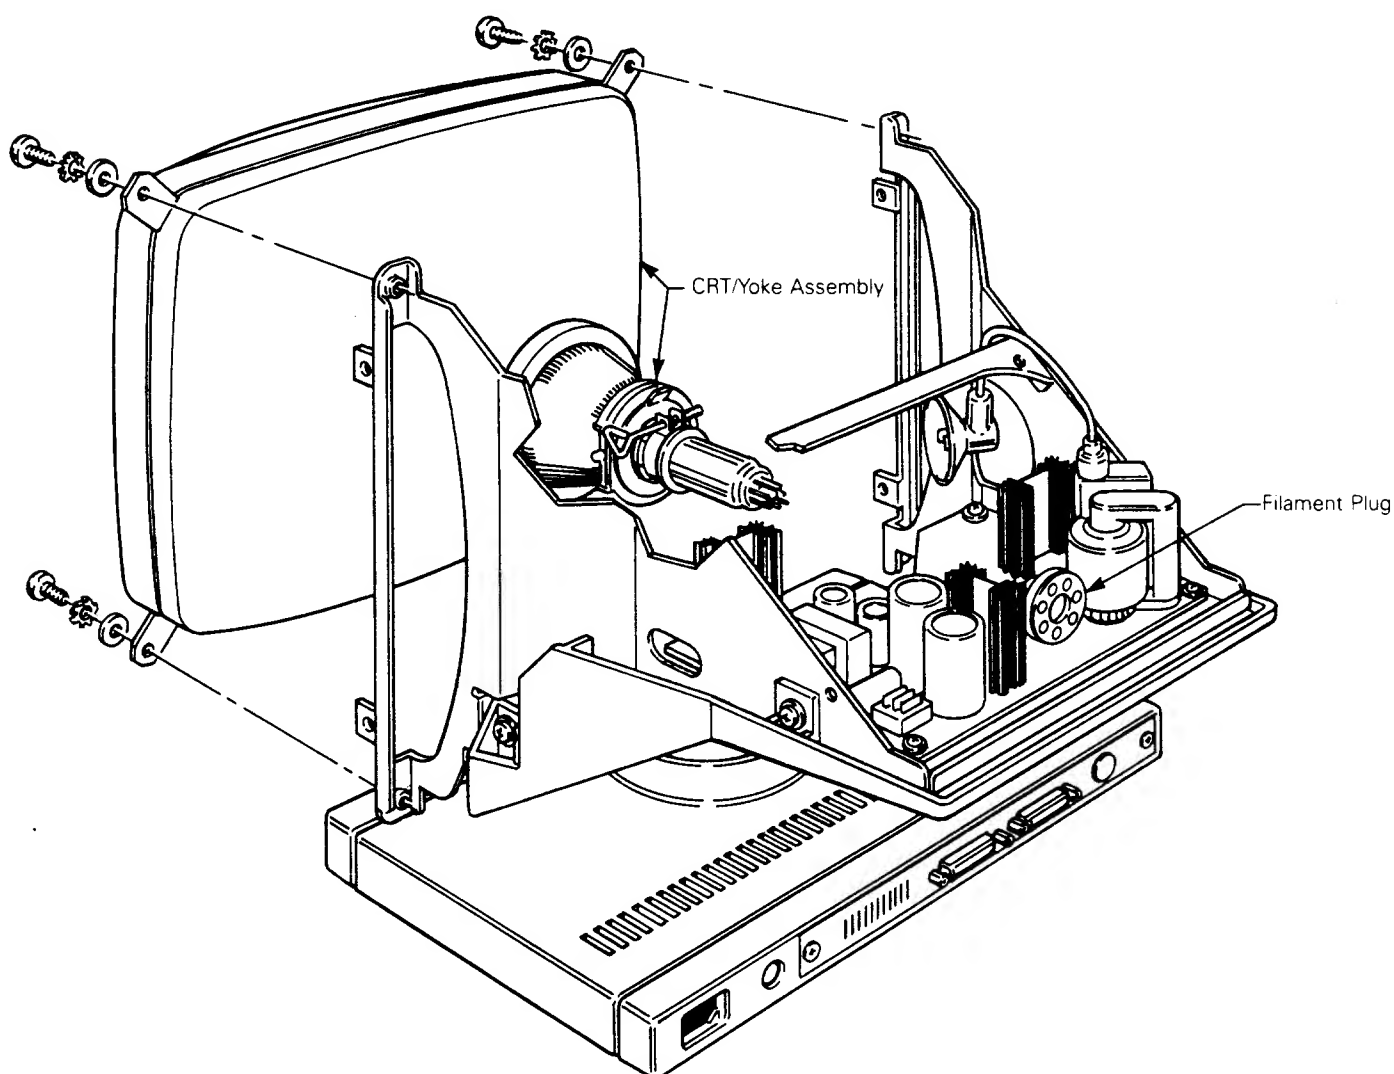



**WARNING--High voltage is present.** Only qualified service personnel should service this device.

This is the procedure for replacing the CRT/yoke assembly:

1. Disconnect the terminal from its AC power source.
2. Remove the four Phillips screws that hold the CRT cover in place (one screw in each corner).
3. Hold the CRT cover by both ends and pull it off.
4. Discharge the CRT anode with an insulated standard screwdriver.
5. Disconnect the anode cap from the CRT.
6. Disconnect the filament plug from the neck of the CRT.
7. Disconnect the yoke wiring harness plug.
8. Disconnect the microprocessor PCB wiring harness.

**WARNING--High voltage is present.** Do not touch the CRT or CRT anode unless you are a qualified service technician.

9. Remove the four Phillips screws that hold the bezel to the CRT. Remove the bezel.

**WARNING--**When you hold the CRT, make sure the screen faces the floor and the neck faces the ceiling. Don't bend over the CRT. If it implodes, the neck will shoot through the CRT screen. If the neck breaks off, it could fly in your face.

10. Remove the four Phillips screws, and assorted hardware at each corner of the CRT face that hold the front of the CRT/yoke assembly in the chassis.
11. Remove the CRT/yoke assembly from the chassis.

**CAUTION--**Before you reattach the anode cap to the CRT or the microprocessor PCB wiring harness to the monitor/power supply assembly, discharge the CRT anode again. Because of the capacitive coating inside the CRT, it may recharge itself. The terminal has a common ground. If there is a residual charge and the microprocessor PCB wiring harness is reconnected, it may damage components on that PCB.

12. Install the CRT/yoke assembly in the reverse order from removal.
13. When you replace the monitor/power supply PCB, you must realign the CRT. See "Theory of Operations," Chapter 6 for alignment information.




## BRIGHTNESS POTENTIOMETER REPLACEMENT

### Tools Required:

No. 1 Phillips screwdriver, 12"  
Tie wraps

Figure 2-7 Operator Brightness Potentiometer

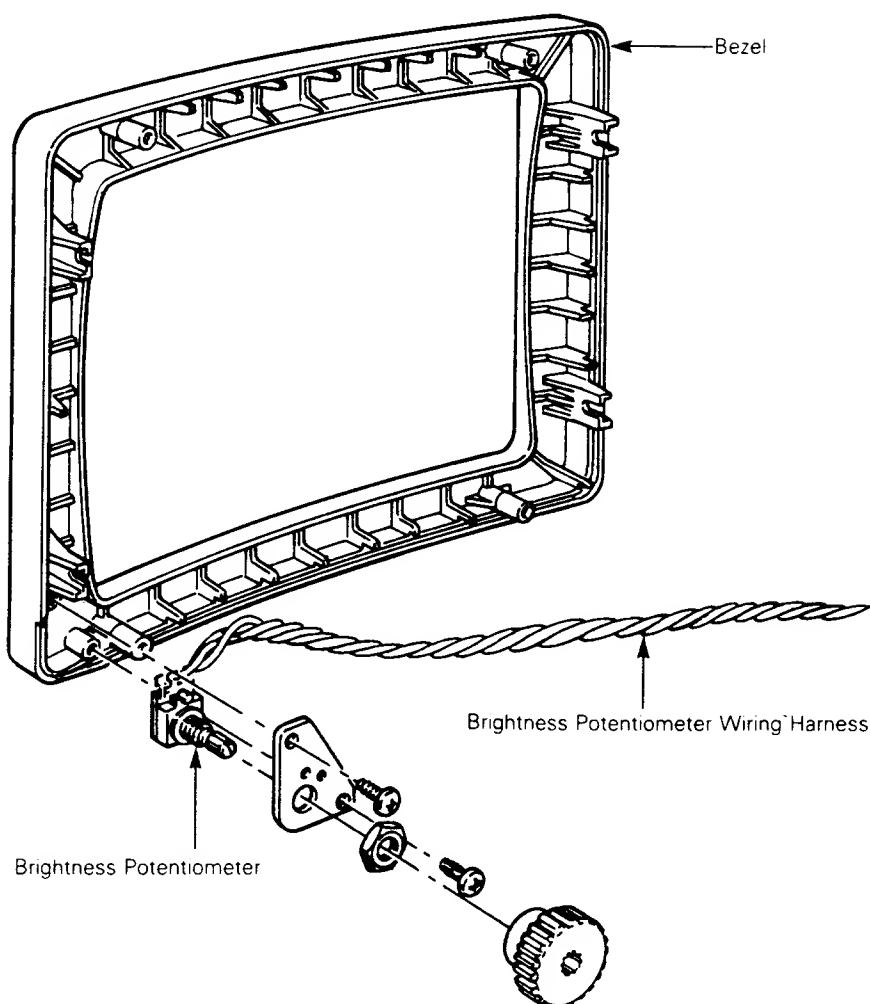

1. Disconnect the terminal from its AC power source.
2. Remove four No. 1 Phillips screws holding the CRT cover in place.
3. Hold the CRT cover by both ends and pull it off.
4. Disconnect the brightness potentiometer wiring harness from the monitor/power supply PCB.



5. Clip the tie wraps holding the brightness potentiometer harness to the chassis.
6. Remove four No. 2 Phillips screws that hold the CRT bezel.
7. Remove the bezel.
8. Remove two No. 1 Phillips screws that hold the brightness potentiometer to the bezel.
9. Install the new potentiometer.
10. Assemble the CRT in the reverse order from disassembly.


#### AC POWER SWITCH REPLACEMENT

##### Tools Required:

No. 1 Phillips screwdriver  
Tie wraps



Figure 2-8 AC Power Switch Removal

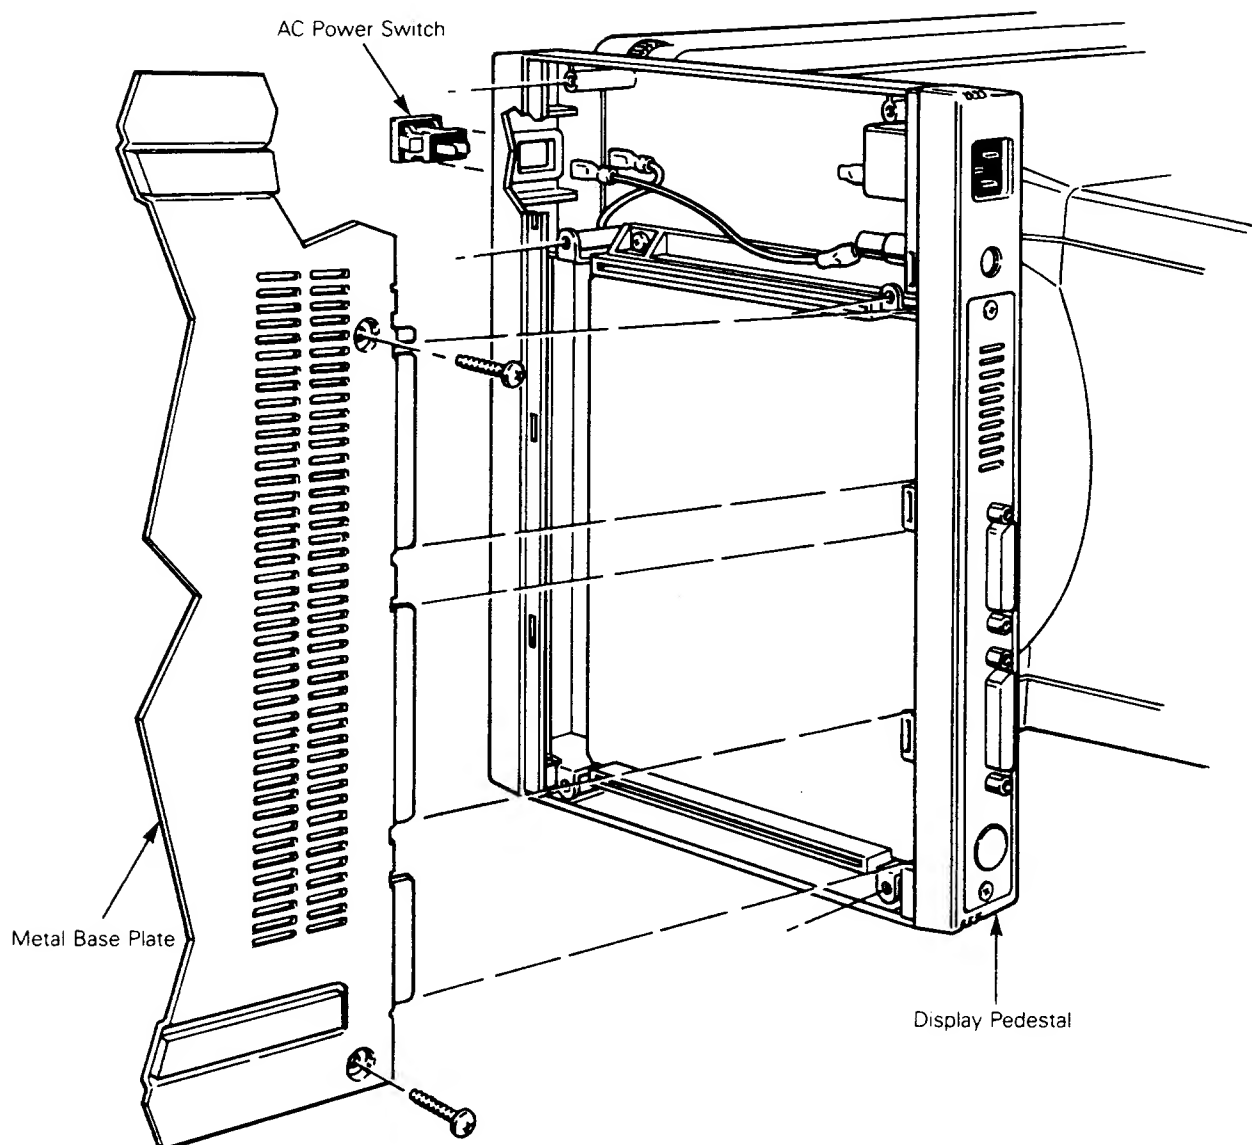

1. Disconnect the terminal from its AC power source.
2. Lay the terminal on its side.
3. Remove six No. 1 Phillips screws that hold the metal base plate to the display pedestal.
4. Lift the metal base plate free.

**CAUTION**--The metal base plate tabs can break the display console plastic if they aren't handled carefully.



5. Disconnect the slip-on connectors from the rear of the switch.
6. Push the power switch out of the front of the display pedestal. This is a snap-in switch; you may have to squeeze the snaps to remove it.
7. Install the new switch.
8. Assemble in the reverse order from disassembly.

#### MICROPROCESSOR PCB REPLACEMENT

Tools required:


No. 1 Phillips screwdriver

See Figure 2-9.

1. Disconnect the terminal from its AC power source.
2. Disconnect the keyboard from the rear panel.



**Figure 2-9 Microprocessor PCB Removal**

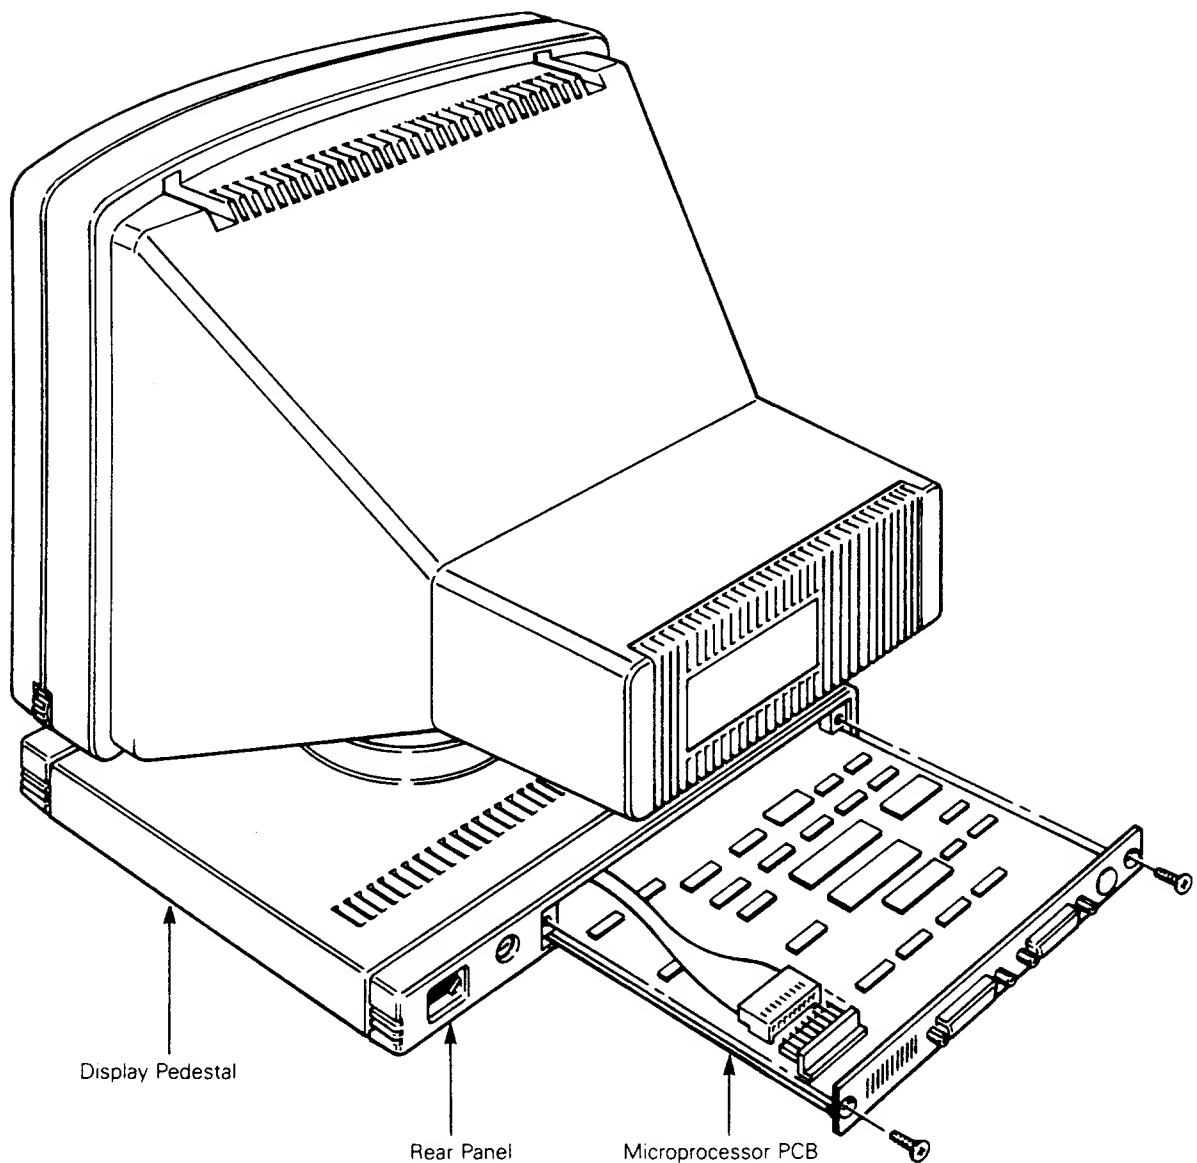

3. Disconnect the printer and modem communications cables.
4. Remove two No. 1 Phillips screws holding the rear panel in place on the display pedestal.
5. Pull the rear panel 2 inches out of the unit.
6. Disconnect the monitor/power supply cable from the microprocessor PCB (Figure 2-9).
7. Remove the microprocessor PCB.



8. Install the new microprocessor PCB.
9. Assemble in the reverse order of disassembly.



### 3 TROUBLESHOOTING

#### INTRODUCTION

This terminal is easy to troubleshoot. Chapter 3 describes its self-test, diagnostics, and hardware problems. It also explains how to fix problems at the board level.

#### POWER-ON SELF-TEST

Note--Self-test returns the terminal to default values.

The power-on self-test checks the terminal's RAM, CPU, and EAROM. The RAM test is a Write/Read test that checks all 4K of RAM. The CPU test checks 128 bytes of RAM in the CPU as well as the data and address lines. The EAROM test calculates the EAROM's checksum and compares it to the checksum bit stored in the ROM.

Each time a user turns the terminal on, the power-on self-test executes. If the test detects an error, an error message appears in the lower right-hand corner of the display. Table 3-1 defines these error messages. If any of these messages do appear, replace the microprocessor board.

Table 3-1 Error Message Definitions

Error Message	IC Location	Definition
0	1E	RAM failure in the first 2K block
1	1D	RAM failure in the second 2K block
P	1J	Control PROM error
R	3F or 1C	Display row buffer error
9	6J (TTL PCB) 5J (Gate Array PCB)	EAROM checksum error
X	NA	MODEM port error
Y	NA	AUX port error
Z	3K	CPU failure




## DIAGNOSTIC SELF-TEST

You can start the terminal diagnostic self-test routine in setup. This test routine includes the power-on self-test and the telecommunications circuitry tests. Two special jumpers allow the communications test to function (see Figure 3-1 for jumper definitions). After you start it, the diagnostic test continues to run until you stop it. If the test detects an error, an error message appears in the lower right-hand corner of the CRT (see Table 3-1 for error message definitions).

Follow these steps to start the diagnostic self-test:

1. Plug in the terminal.
2. Install a test jumper on both the AUX and MODEM ports.
3. Turn the power switch ON.
4. Hold down SHIFT, then press SETUP.
5. Press ESC. This returns the terminal to default parameters.
6. Press ▼ key until the TEST parameter appears on the bottom row of the screen.
7. Press ► key until the cursor highlights the TEST parameter field.
8. Press the spacebar. This toggles the TEST parameter field to ON.
9. Start the self-test by holding SHIFT, while you press the SETUP and y keys. The test runs until you stop it.
10. To stop the self-test, hold down SHIFT, then press SETUP again, then remove the jumpers.

Figure 3-1 Test Jumper

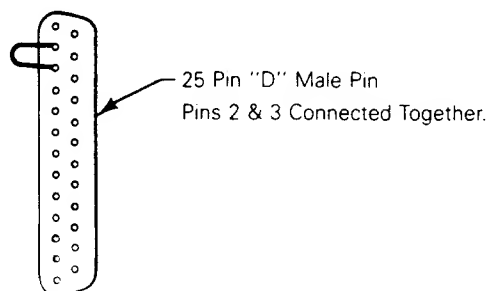



## TROUBLESHOOTING


This section contains the troubleshooting flowchart, a power supply quick-reference procedure, a procedure to check the horizontal-synchronization signal, and a vertical-hold procedure for revision A monitor/power supply PCBs.

### Troubleshooting Flowchart


The troubleshooting flowchart can help you locate faulty modules. Start at the beginning, and follow the questions in the decision boxes. If any step requires a special procedure, you can find a reference number next to the block. We have keyed the reference numbers that appear in the flowchart to the legend at the bottom of the page. If the flowchart doesn't cover the symptoms the terminal shows, look at "Theory of Operations," Chapter 6 and Appendix C, "Schematics."





Figure 3-2 Troubleshooting Flowchart

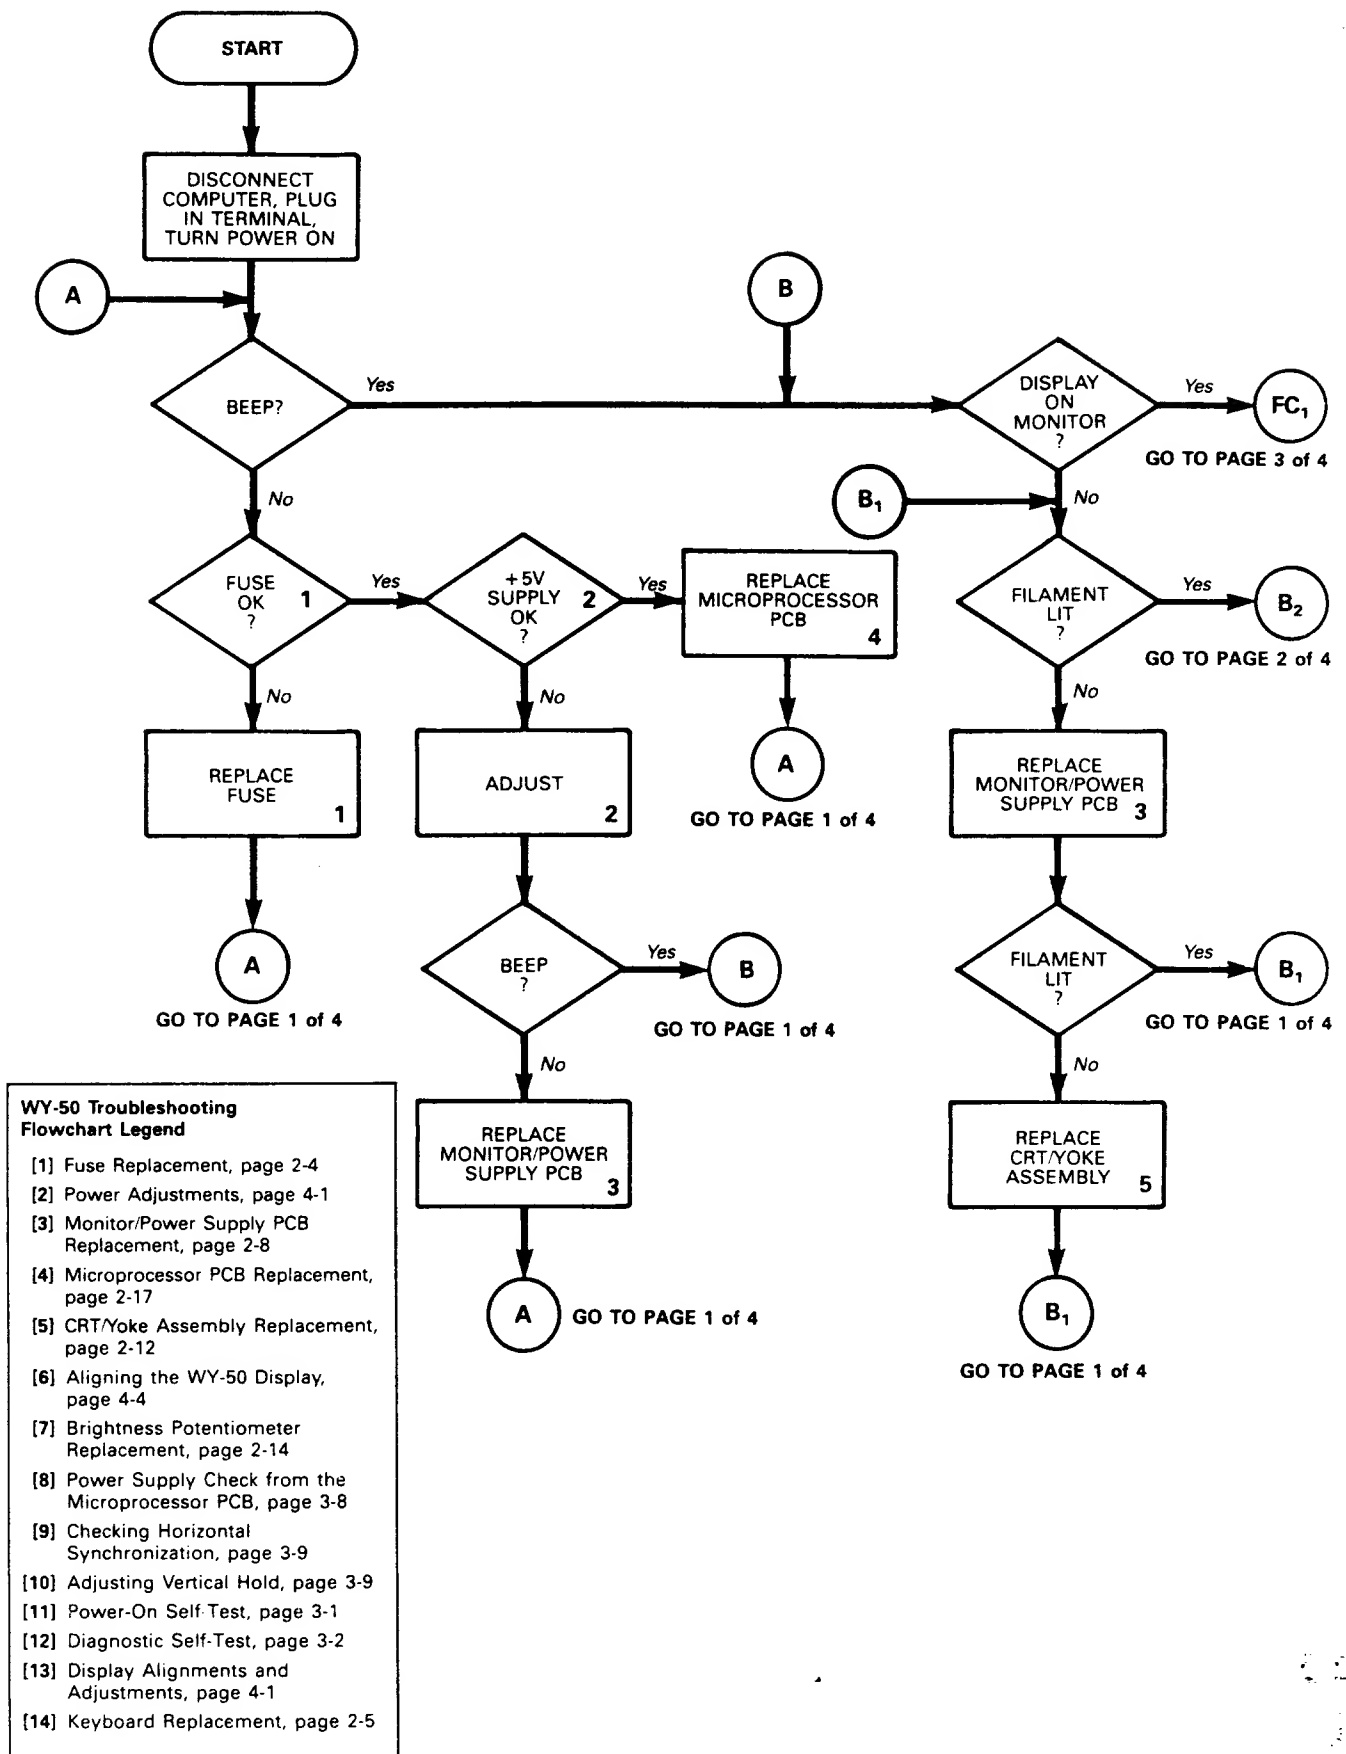




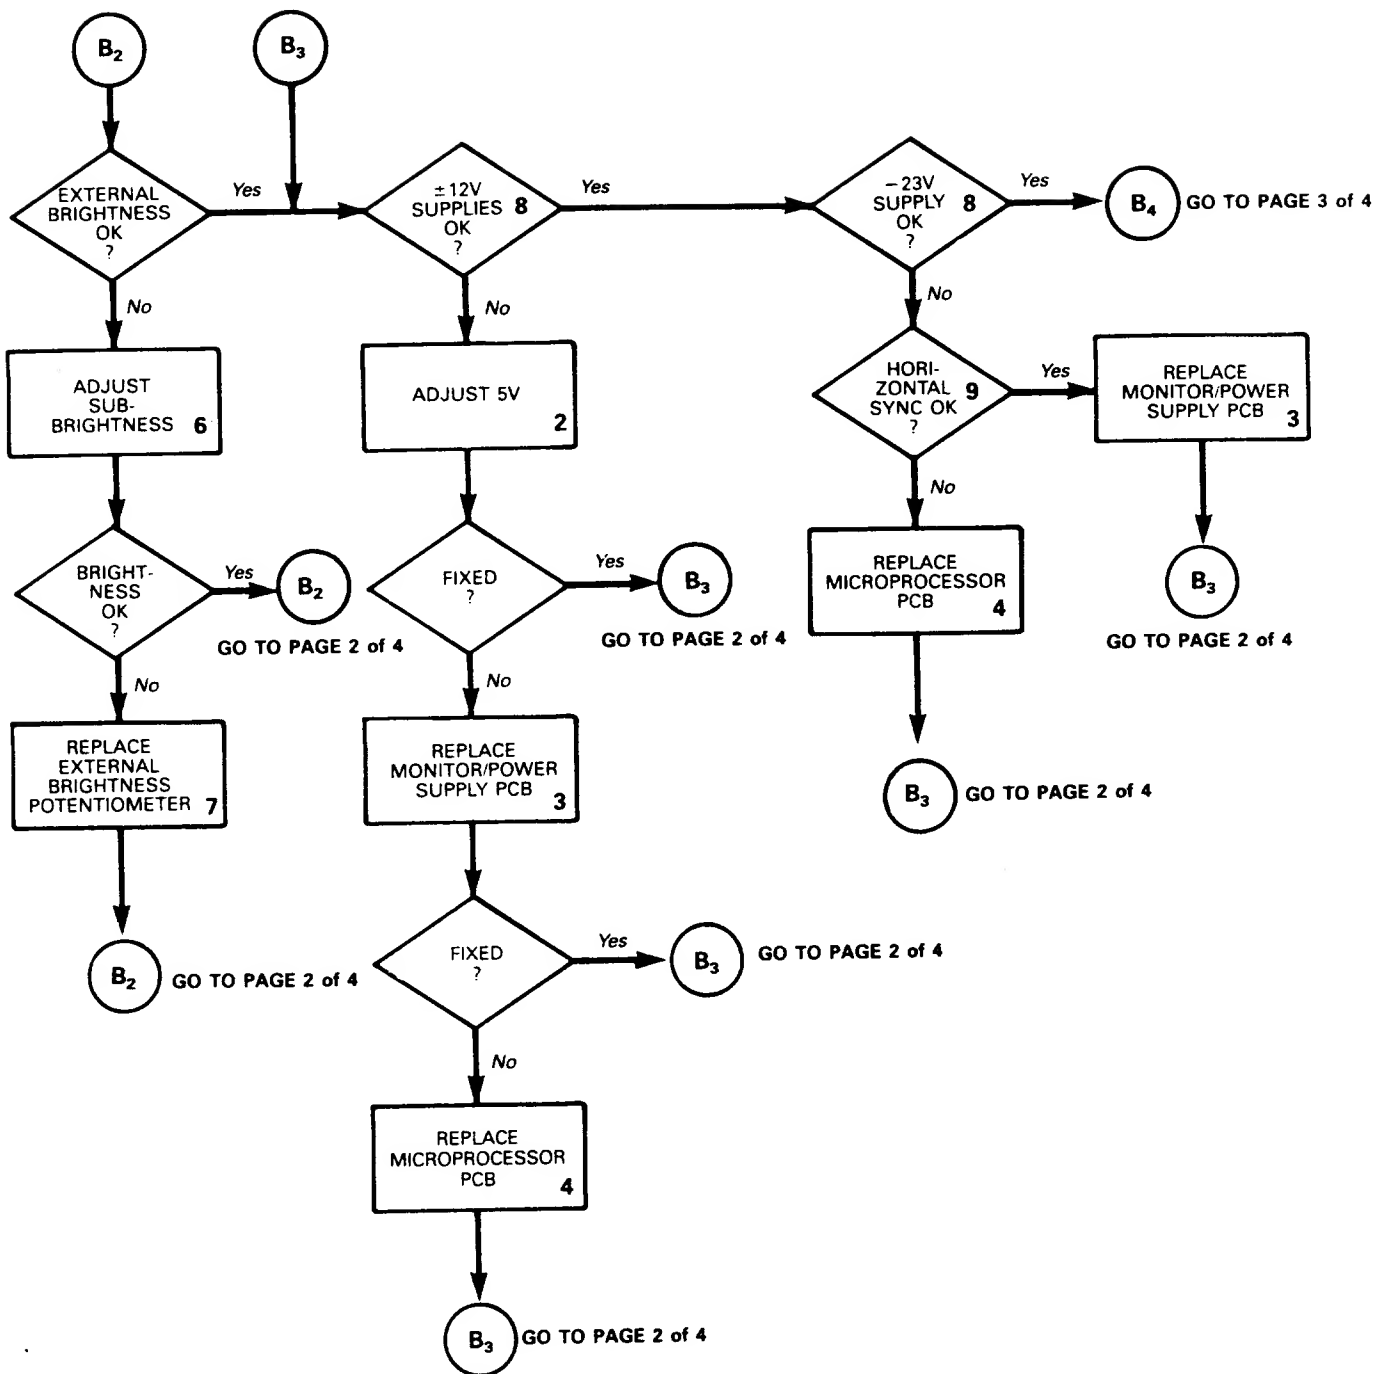



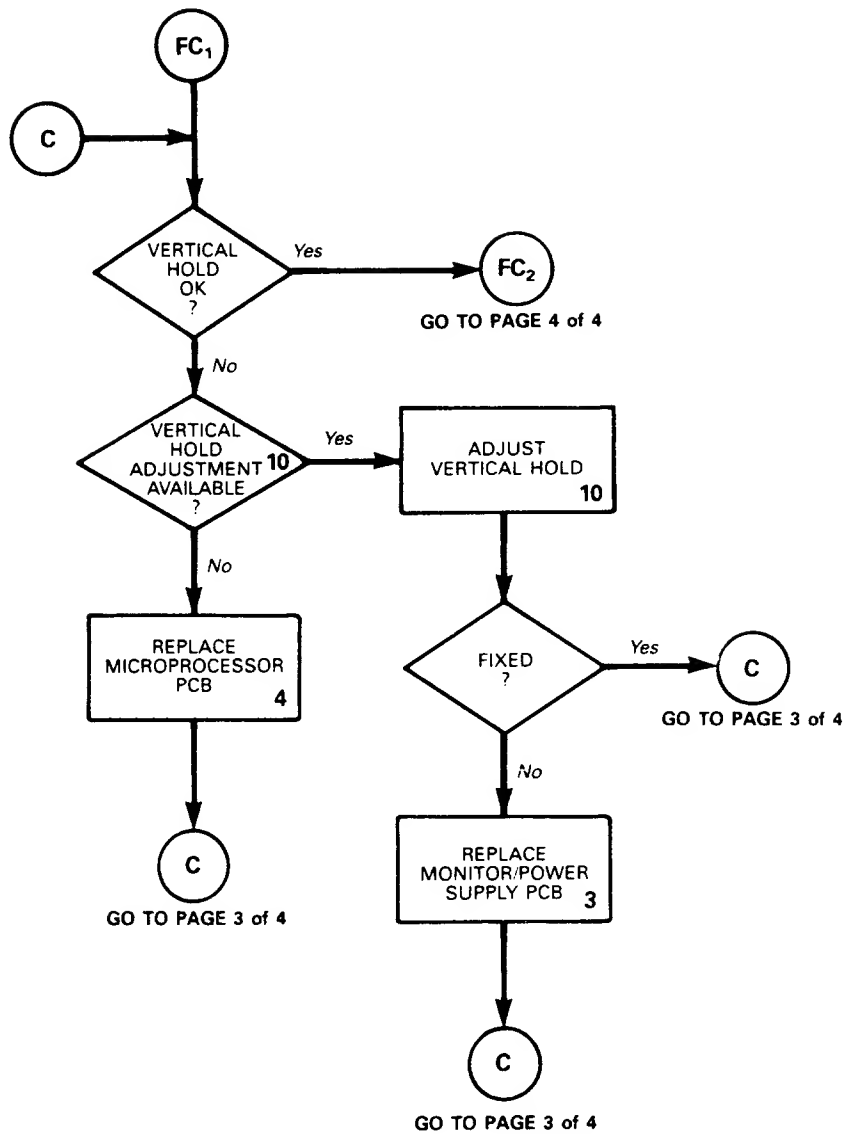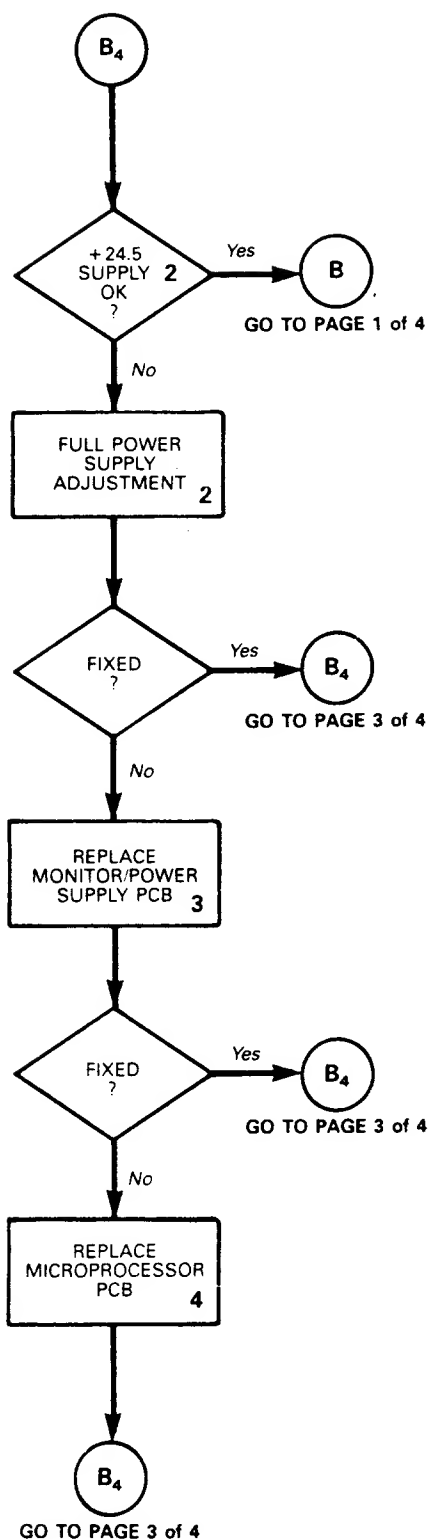



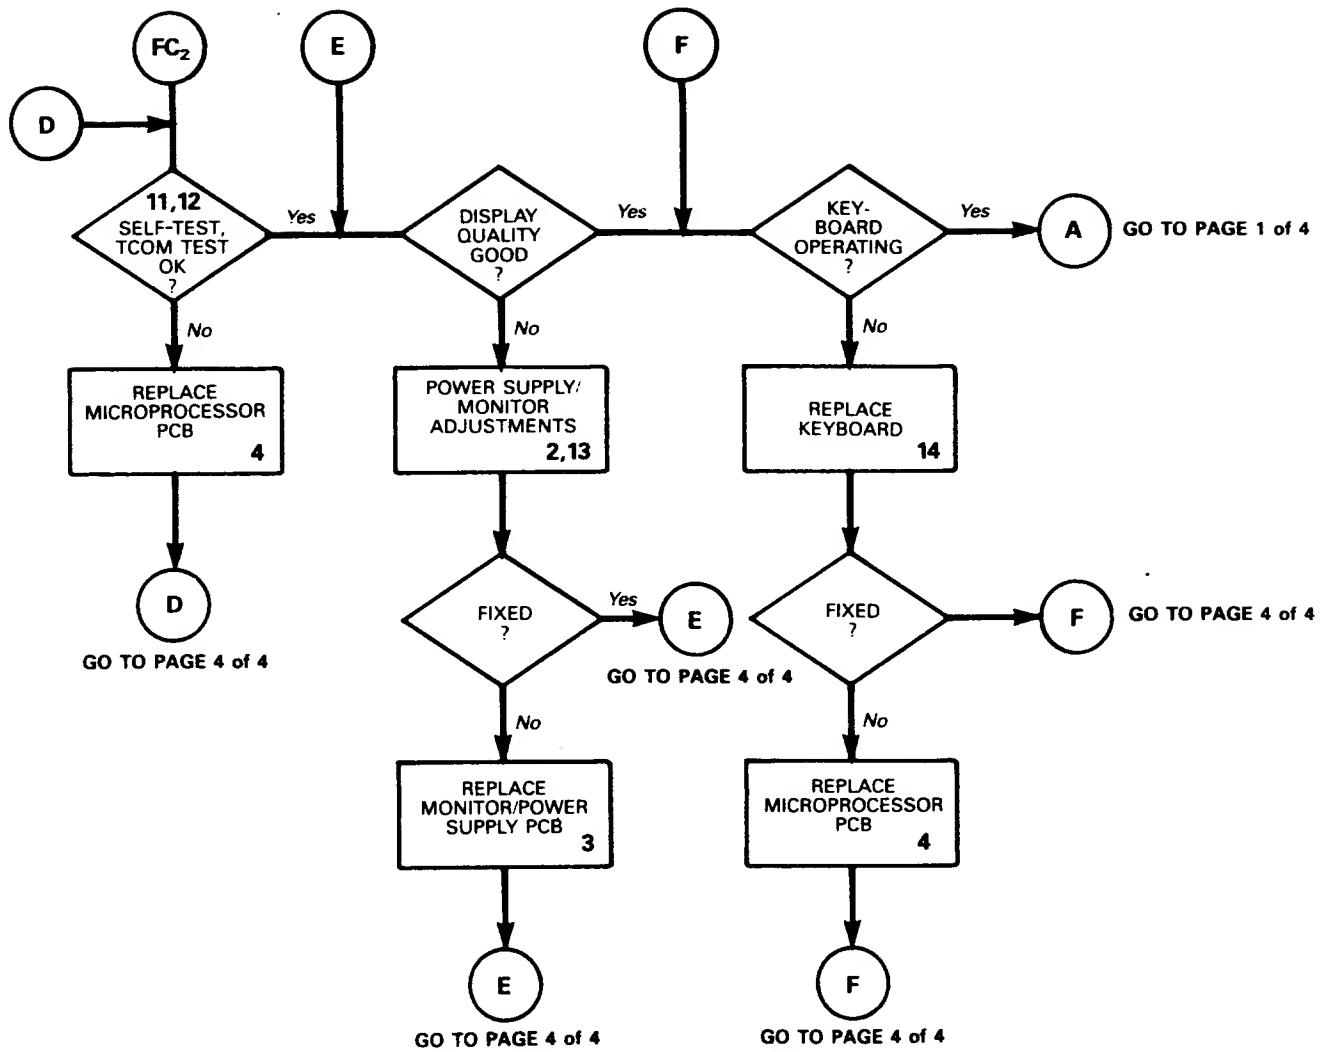




### Power Supply Check from the Microprocessor PCB

You can quickly isolate problems if you check voltages on the microprocessor board. If all voltages at connector J4 are within tolerance, the microprocessor board is at fault (Figure 3-3). If they aren't within tolerance, go to "Adjustments and Alignments," Chapter 4, and adjust the power supply. If you can't adjust the power supply to meet the tolerances, you may need to replace it.

For quick reference, you can check four of the five power supply voltages on the microprocessor board without opening the cover on the monitor (the fifth, +24.5V, never reaches the microprocessor PCB).

Figure 3-3 Power Connector at the Microprocessor PCB

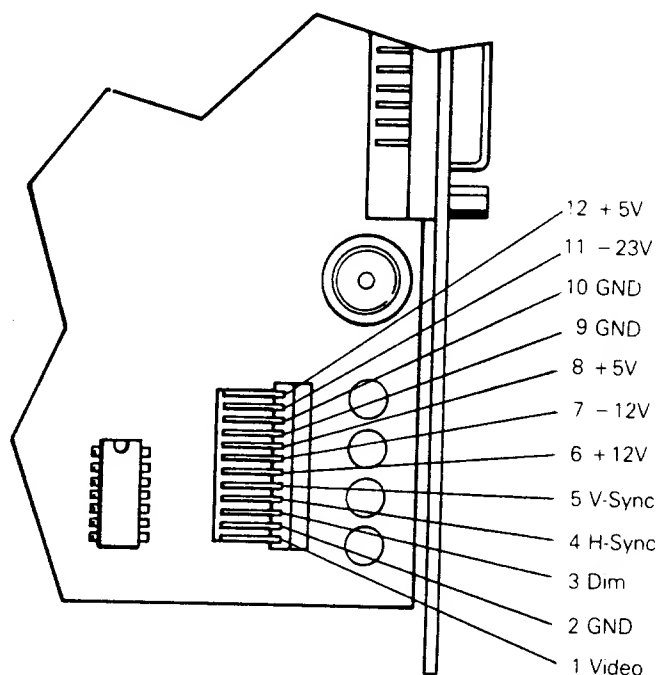

#### Tools required:

Voltmeter, Phillips screwdriver

1. Turn the monitor OFF.
2. Remove two No. 1 Phillips screws holding the rear panel in place. Pull the microprocessor PCB two inches out of the unit.
3. Find connector J4 on the microprocessor board.
4. Attach one lead from the DVM to J4-10, ground.



5. Turn the monitor on.
6. Check the +5V power supply on J4-12. Look for +5V,  $\pm 2$  percent. See the troubleshooting flowchart if the signal isn't within tolerance.
7. Check the +12V power supply on J4-6. Look for +12V,  $\pm 5$  percent. See the troubleshooting flowchart if the signal isn't within tolerance.
8. Check the -12V power supply on J4-7. Look for -12V,  $\pm 5$  percent. See the troubleshooting flowchart if the signal isn't within tolerance.
9. Check the -23V power supply on J4-11. Look for -23V,  $\pm 5$  percent. See the troubleshooting flowchart if the signal isn't within tolerance.

### Checking Horizontal Synchronization

Checking the horizontal synchronization helps determine which PCB to replace: either the microprocessor PCB or the monitor/power supply PCB.

Tools Required:  
Oscilloscope

1. Find connector J4 on the microprocessor PCB (see Figure 3-3).
2. Touch J4-4 with the oscilloscope probe. Look for a 44  $\mu$ s,  $\pm 10$  percent, pulse, 4.8 to 5Vp-p. If the horizontal synchronization signal is within tolerance, replace the monitor/power supply PCB. If it isn't within tolerance, replace the microprocessor PCB. See the troubleshooting flowchart.

### Adjusting Vertical Hold

On a few early terminals, the monitor/power supply PCB has an extra potentiometer to adjust vertical hold. You can find it next to HGT, VR302, directly below the anode cap. If you need to adjust it, this is the procedure:

1. Display a full screen of E's (see "Adjustments and Alignments," Chapter 4).
2. Turn the vertical hold potentiometer until the display rolls in one direction.
3. Turn the vertical hold potentiometer until the display rolls in the other direction.



4. Center the potentiometer; the display should be steady.  
If it isn't steady, see the troubleshooting flowchart.



## 4 ADJUSTMENTS AND ALIGNMENTS

This chapter describes adjustments and alignments for the terminal. In particular, it discusses power adjustments, and monitor alignment and adjustments. Before you align the monitor, check the power supply voltages. Adjust them if they aren't in tolerance. You should complete a full monitor/power supply adjustment and alignment whenever you replace the monitor/power supply PCB or the CRT/yoke assembly.


**WARNING--CRT/yoke has high voltages. Only qualified service personnel should adjust it.**

### POWER ADJUSTMENTS

The monitor/power supply PCB provides all of the voltages for the microprocessor PCB (+5V, -12V, +12V, and -23V). It also supplies +24.5V for the CRT monitor. You can adjust the +24.5V and +5V supplies.

**Note--**You can find the locations of all components and test points referred to in this chapter in Figure 4-1.

Figure 4-1 Monitor/Power Supply Component Layout

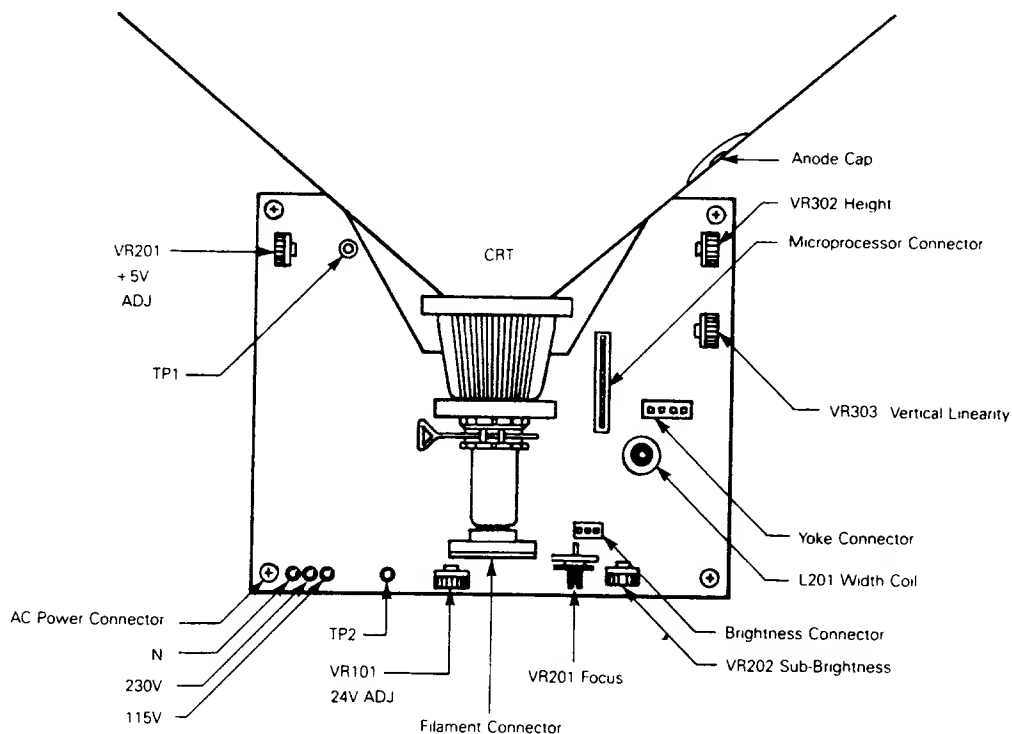



#### Tools Required:

No. 1 Phillips screwdriver  
voltmeter  
Nonconductive alignment tool

1. Turn the terminal OFF.
2. Unplug the terminal from its power source. If communications cables are attached to the back of the terminal, detach those too.
3. Remove the four No. 1 Phillips screws that hold the CRT cover in place (one in each corner).
4. Gently pull the CRT cover up and away from the terminal.
5. Plug the terminal into a power source.
6. Turn the terminal ON.
7. Check the +5V supply at TP1 on the monitor/power supply PCB, using the chassis as ground.

**Note**--The monitor/power supply PCB holds two VR201 components. Look for the VR201 in the left front of the PCB to adjust the power supply voltages.

8. Adjust VR201 until the digital voltmeter reads +5V  $\pm 2$  percent.
9. Check the +24.5V supply at TP2 on the monitor/power supply PCB, using the chassis as ground.
10. Adjust VR101 until the digital voltmeter reads +24.5V  $\pm 2$  percent.

**Note**--If you can't bring either the +5V supply or the +24.5V supply into tolerance, see "Troubleshooting," Chapter 3.

11. Check the -12V supply at the gray wire on JP3.7 (microprocessor board wiring harness). The digital voltmeter should read -12V  $\pm 5$  percent. If the -12V supply is not within tolerance after you have adjusted the +5 and +24.5V supplies, see "Troubleshooting," Chapter 3.
12. Check the +12V supply at the blue wire on JP3.6 (microprocessor board wiring harness). The digital voltmeter should read +12V  $\pm 5$  percent. If the +12V supply is not within tolerance after you have adjusted the +5 and +24.5V supplies, see "Troubleshooting," Chapter 3.
13. Check the -23V supply at the purple wire on JP3.11 (microprocessor board wiring harness). The digital voltmeter should read -23V  $\pm 5$  percent. If the -23V supply is not within tolerance after you have adjusted the +5 and



+24.5V supplies, see "Troubleshooting," Chapter 3.

14. Check to see if the display needs alignment. See "Does the Terminal Meet the Display Specification?" If it doesn't need alignment, turn the terminal OFF, unplug it, and replace the top cover.

If the display does need alignment, continue to "Aligning the Terminal Display."

#### Does the Terminal Meet the Display Specification?

Before you adjust the display on the monitor, measure the screen margins and study the display. Use the following procedures:

Note--If you have just finished checking and adjusting the power supplies, go to step 4.

##### Tools Required:

Millimeter ruler  
Nonconductive alignment tool

1. Turn the terminal OFF.
2. Detach any communications cables from the back of the terminal.
3. Turn the terminal ON.
4. Hold down SHIFT, then press BREAK on the terminal keyboard. You should see BLK displayed above the status line. If you see anything else, hold down SHIFT, then press BREAK again until you see BLK.
5. Press ESC . (period).
6. Then press E. This displays 24 rows of E (an excellent test pattern for display alignment).
7. Hold down SHIFT, then press SETUP. This adds lines 0 and 25.
8. Margins on the top, bottom, and both sides should measure 12mm  $\pm$ 3mm. If they don't, see the next section.
9. Look at the display. If there is barreling or pincushioning; if the letters on the top aren't the same size as letters on the bottom; if any of the display edges aren't straight; or, if there are brightness or focus problems, see "Aligning the Terminal Display."
10. If the display is within specification and looks regular, turn off the terminal. Now you can close the terminal and reattach the communications and power cables.



## Aligning the Terminal Display

The monitor has several alignments and adjustments. Perform these procedures only if the display is out of tolerance and doesn't match the specification.

**WARNING--The CRT/yoke assembly has high voltages.** Only qualified service personnel should perform adjustments to it.

### Tools Required:

- No. 1 Phillips screwdriver
- Nonconductive alignment tool

**Note--**If you already have an E alignment pattern on the screen, go to step 5. This procedure assumes that you have just checked or adjusted the power supply voltages, the top cover is off, and the power is ON.

1. Hold down SHIFT, then press BREAK on the terminal keyboard. You should see BLK displayed above the status line. If you see anything else, hold down SHIFT, then press BREAK again until you see BLK.
2. Press ESC . (period).
3. Press E. This displays 24 rows of E.
4. Hold down SHIFT, then press SETUP. This adds lines 0 and 25.
5. Look at the display, then at Table 4-1. Table 4-1 lists display problems, the adjustments that fix them, and where to go for further instructions.

**Table 4-1 Problems and Adjustments**

Display Problems	Adjustments
Display too short or too tall	Height, p. 4-6
Letters at the top of the display aren't the same height as those at the bottom of the display	Linearity, p. 4-6
Fuzzy letters	Focus, p. 4-6
Too wide or too narrow	Width, p. 4-6
Not centered	Yoke Lock, p. 4-7
Too bright, too dim,	Sub-Brightness,



raster scan lines show

p. 4-9

Pincushioning, barreling,  
crooked edges, corners  
that sag or move out  
of specification

Display Magnets,  
p. 4-9

6. Adjust the display. Check Figure 4-1 for component locations.

Note--If you finish both the power and display adjustments, and the display is still not within tolerance, see "Troubleshooting," Chapter 3.

7. When the display is within specification, and looks regular, turn off the terminal. Now you can close the terminal and reattach communications and power cables.

## ADJUSTMENTS

### Height

The height adjustment is labeled HGT VR302 on the monitor/power supply board.

Adjust VR302 until the top edge and the bottom edge of the display are both 12mm  $\pm$ 3mm from the edge of the bezel.

### Linearity

The linearity adjustment is labeled LIN VR303 on the monitor/power supply board.

Adjust VR303 until characters on the bottom of the display are the same height as those on the top.

### Focus

Note--Do not use the focus control to adjust the outer extremities of the screen. Some focus distortion happens in all CRTs.

The focus adjustment is labeled FOCUS VR201 on the monitor/power supply board.

Adjust VR201 until the characters halfway between the center of the display and the bezel are distinct and clear.



## Width

**CAUTION**--Do not use a metal tool to adjust the width coil. The magnetic properties of a metal tool will affect the adjustment.

The width adjustment is labeled L201 on the monitor/power supply board.

Adjust L201 until either side of the display is 12mm  $\pm$ 3mm from the edge of the bezel.

## Yoke Lock


**CAUTION**--Do not tighten the yoke lock too much or the neck of the CRT will break.

The yoke lock is located on the neck of the CRT (See Figure 4-2).

- o Loosen the yoke lock on the neck of the CRT.
- o Rotate the yoke until the display is centered.
- o Tighten the yoke lock.



Figure 4-2 Yoke Lock on the CRT Neck

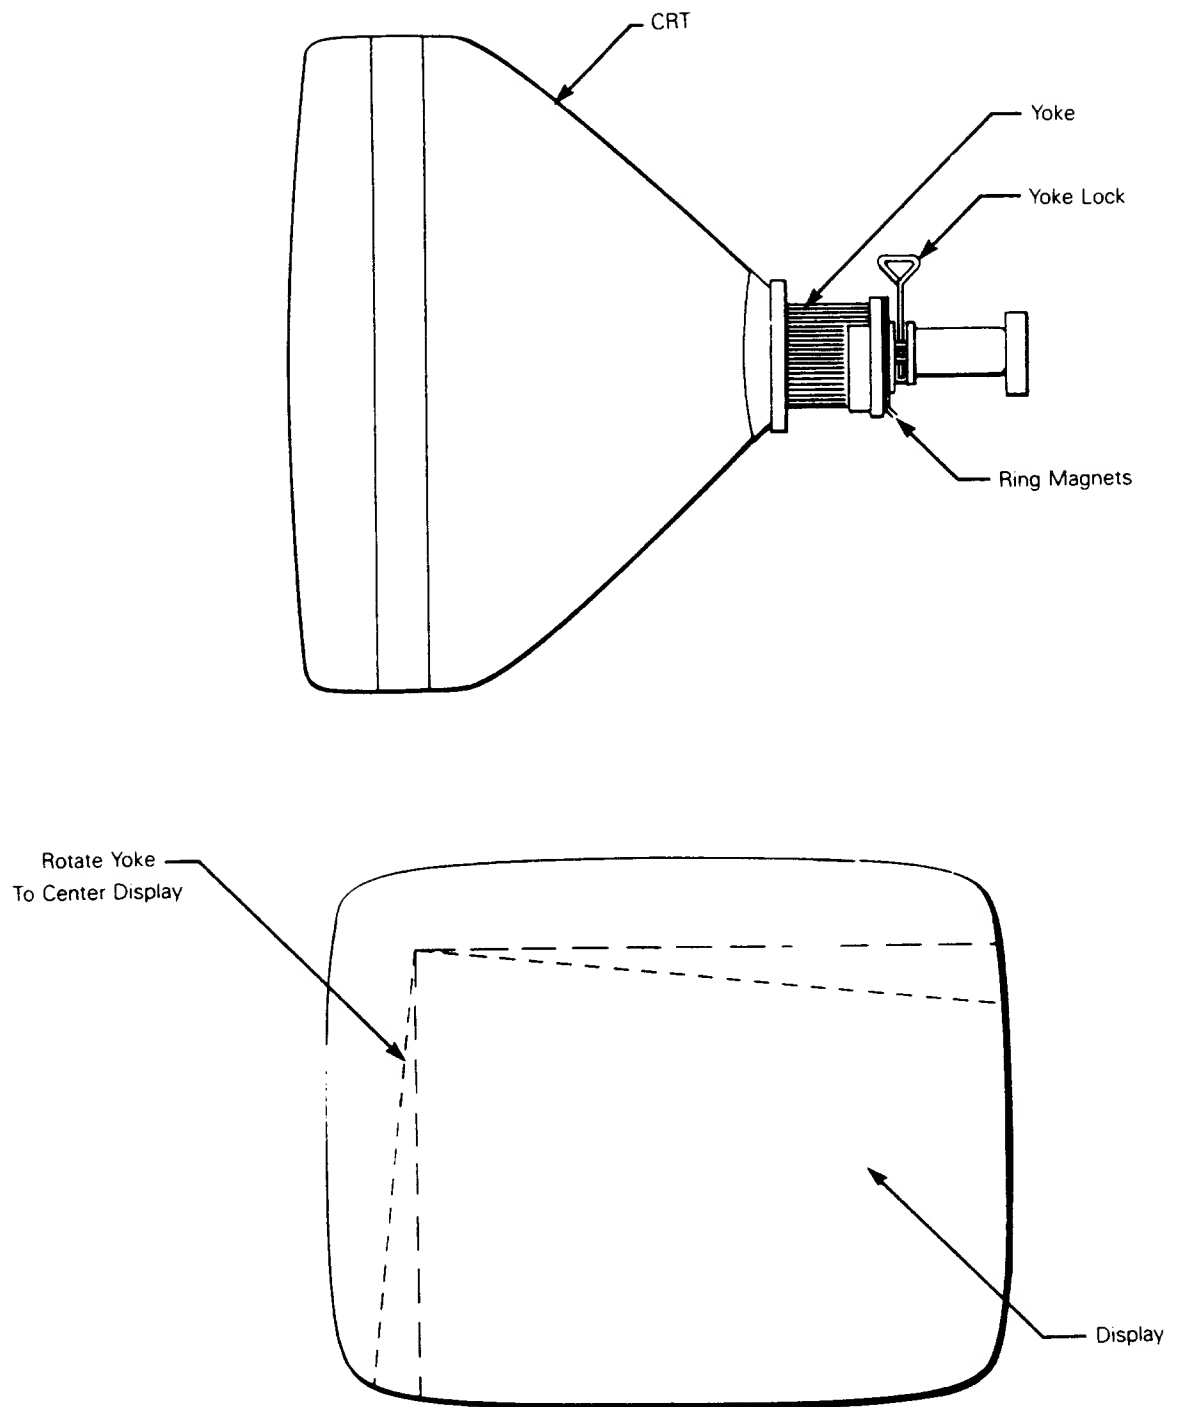



### Sub-Brightness


The Sub-brightness potentiometer is labeled SUB-B on the monitor/power supply board.

- o Turn the operator brightness control as far clockwise as possible.
- o Turn SUB-B on the monitor/power supply board as far counterclockwise as possible. You should see the raster lines on the screen.
- o Slowly turn SUB-B clockwise, just until the raster is no longer visible.

### Display Magnets

There are eight display magnets on a ring around the yoke. When turned, they change the screen area they correspond to. They can also affect adjacent areas. Figure 4-3 identifies each magnet; Table 4-2 identifies which portion of the screen each changes.

Figure 4-3 Display Magnets

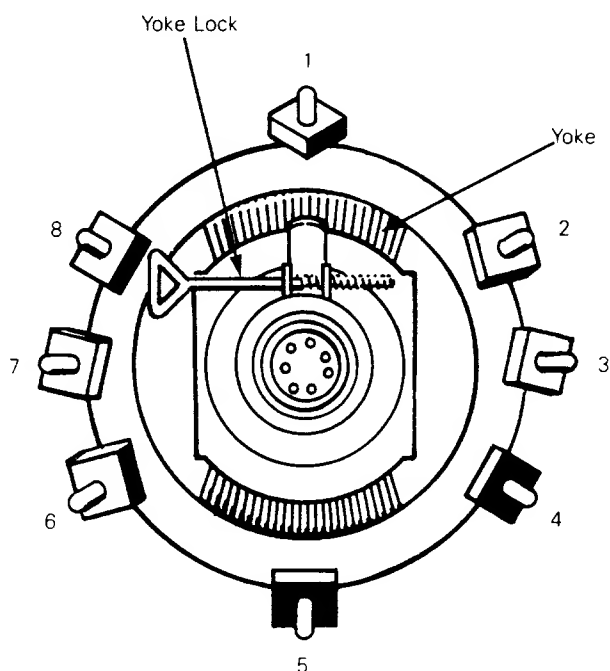



**Table 4-2 Screen Areas Affected by Display Magnets**

<b>Magnet Number</b>	<b>Area Affected</b>
1	Top
2	Upper left corner
3	Left
4	Lower left corner
5	Bottom
6	Lower right corner
7	Right
8	Upper right corner



## 5 ILLUSTRATED PARTS LIST

This chapter provides the information you need to order parts for the WY-50 terminal.


You will find numbered parts lists opposite each assembly drawing in this chapter. The item numbers correspond to the numbers in the circles on the assembly drawings. The part name indicates Wyse's description of the part. The part number is the official Wyse stock number. When you order replacement parts, please use both the part name and part number.



# WY-50 Display Assembly Parts List

Item	Part Name	Part
1.	WY-50 Logic PCB (Microprocessor PCB, gate array)	32-005-02
2.	WY-50 Display Assembly	32-006-01
3.	WY-50 Top Cover	44-002-03
4.	WYSE Plate with adhesive	44-009-03
5.	Label, 115 VAC (domestic)	45-006-03
	Label, 220 VAC (international)	45-006-04
6.	Label, "REV B"	45-013-02
7.	Screw, CBM M4 x 8	50-005-21
8.	Screw, CBM M3 x 6	50-005-22
9.	Screw, CFM M3 x 5, black	50-005-57
10.	Fuse, 2 amp, 250V, fast blow	80-009-08
11.	PVC sheet, 188 x 160mm	80-806-09
12.	Adhesive, silicone rubber	82-002-04
13.	WY-50 Monitor/Power Supply PCB	99-019-01



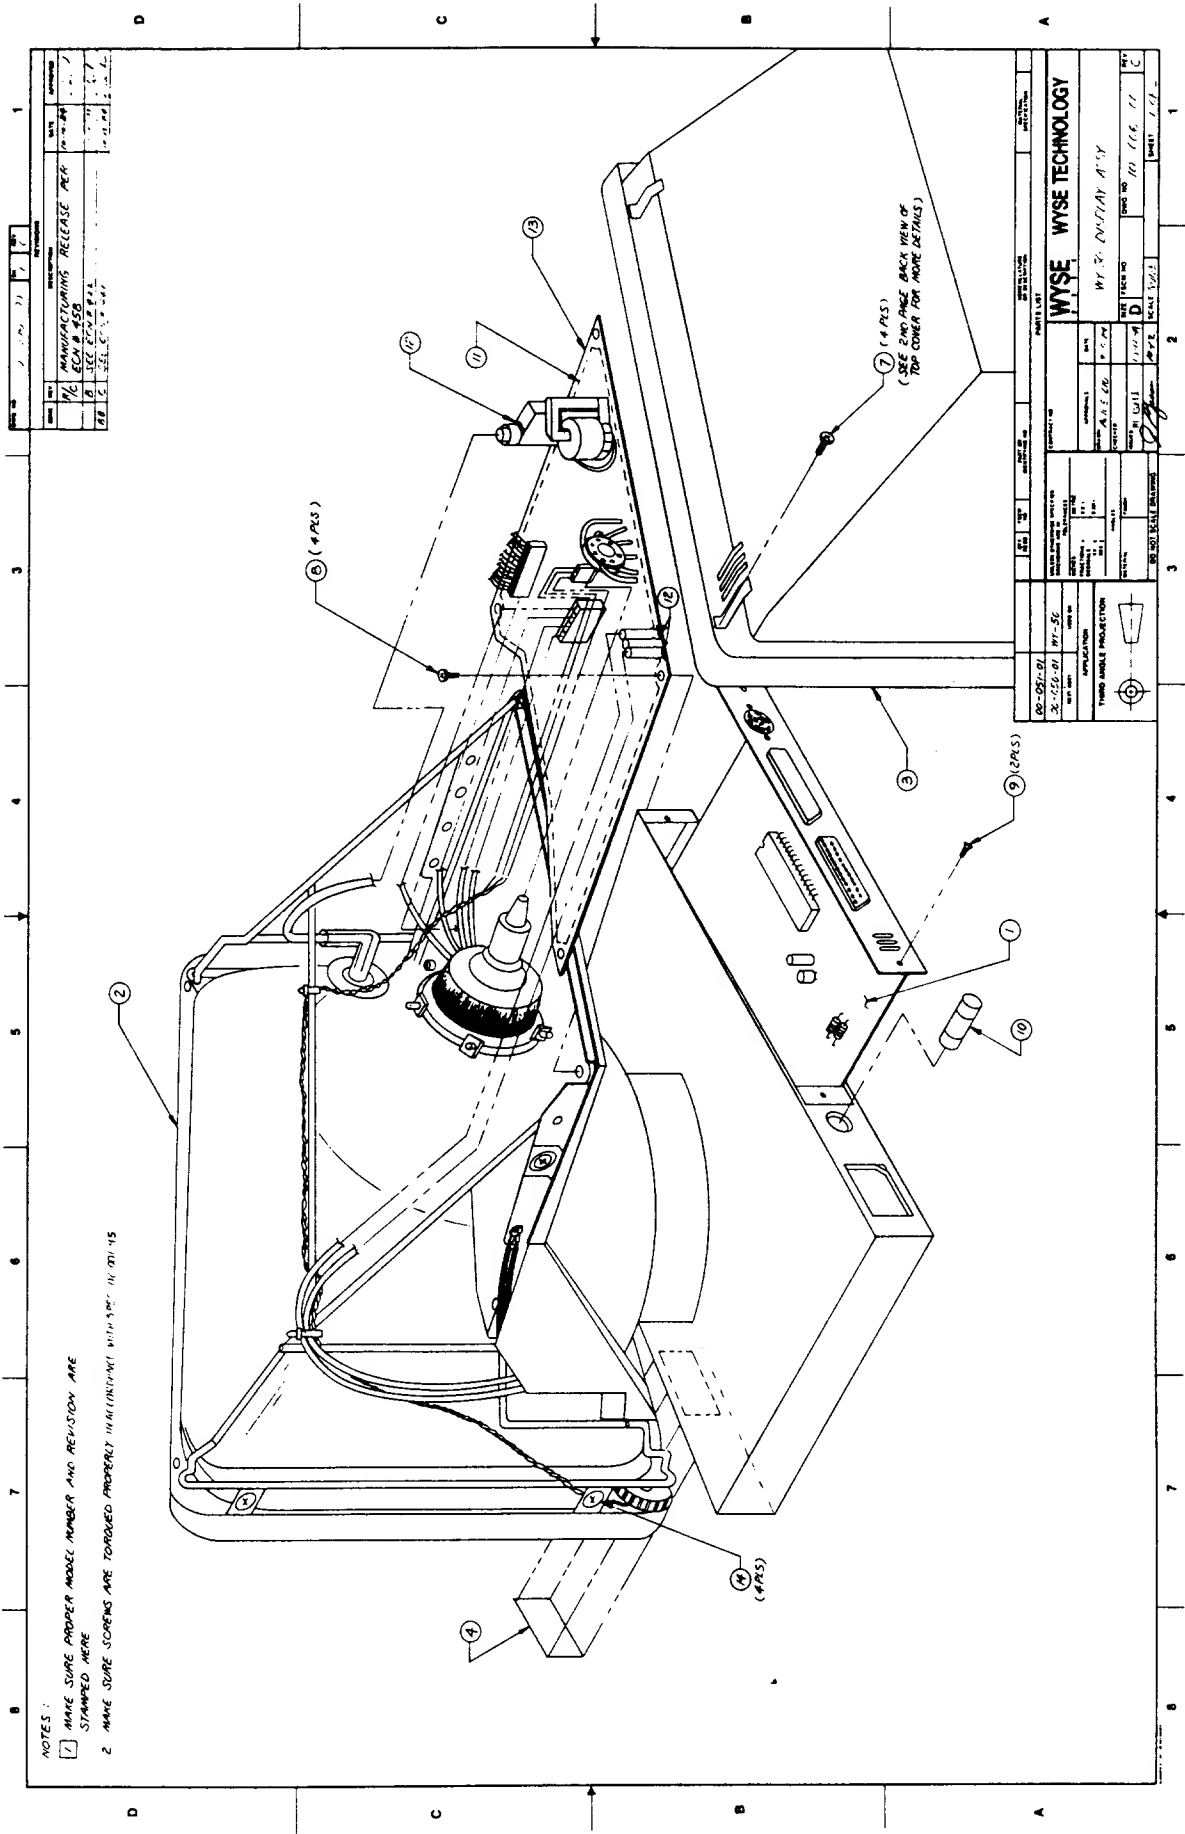

NOTES:

- 1 MAKE SURE PAPER MODEL NUMBER AND REVISION ARE STAMPED HERE
- 2 MAKE SURE SCREWS ARE TORQUED PROPERLY IN ALL INSTANT WITH 500 INCH LBS

REV	DATE	DESCRIPTION
1	10-10-68	MANUFACTURING RELEASE PER 1/2 ECA # 450
2	11-10-68	1/2 ECA # 450
3	11-10-68	1/2 ECA # 450
4	11-10-68	1/2 ECA # 450
5	11-10-68	1/2 ECA # 450
6	11-10-68	1/2 ECA # 450
7	11-10-68	1/2 ECA # 450
8	11-10-68	1/2 ECA # 450
9	11-10-68	1/2 ECA # 450
10	11-10-68	1/2 ECA # 450
11	11-10-68	1/2 ECA # 450
12	11-10-68	1/2 ECA # 450

<b>WYSE TECHNOLOGY</b> WYSE TECHNOLOGY 1000 WYSE DRIVE FOLSOM, CA 95630 (916) 438-1000	
PROJECT NO. 30-051-01 REV. 01 WY-50	DRAWING NO. 30-051-01 REV. 01 WY-50
TITLE WYSE 30-051-01 WY-50	SCALE 1:1
DESIGNED BY J. L. LEE	CHECKED BY J. L. LEE
DATE 11-10-68	BY J. L. LEE
APPROVED BY J. L. LEE	DATE 11-10-68
WYSE TECHNOLOGY 1000 WYSE DRIVE FOLSOM, CA 95630 (916) 438-1000	SHEET NO. 1000 11 00







## WY-50 Keyboard Assembly Parts List

Item	Part Name	Part
1.	WY-50 Keyboard with Cable	32-008-01
2.	Keyboard Bottom Cover	32-009-01
3.	WY-50 Keyboard Top Cover	44-003-02
4.	WY-50 Keyboard Label	45-007-01
5.	WY-50 Keyboard Serial No. Label	45-008-01
6.	Screw, CBM M4 x 8	50-005-21
7.	Screw, CBM M4 x 6	50-005-71
8.	Tape, double sided,	82-003-03







## 6 THEORY OF OPERATIONS

### INTRODUCTION

This section describes the terminal's basic logic functions. For technicians unfamiliar with raster scan techniques, a brief explanation of terms is given below.

### RASTER SCAN TERMINOLOGY

The terminal has a 14-inch cathode ray tube (CRT) display. Because the terminal is a video display, most of its circuitry provides appropriate inputs for the CRT (i.e., clocks and video information).

An electron beam sweeps the face of the CRT. The CRT displays data by controlling this beam. The electron beam begins in the upper left-hand corner of the display and sweeps from left to right. One sweep of the beam is called a scan line. When the beam returns from the right side of the screen to the left side, beginning the next scan line, it must be disabled (turned off). This prevents a streak from appearing on the face of the CRT. Disabling the beam is called horizontal blanking. At the end of 338 scan lines, the electron beam arrives at the lower right-hand corner of the display. In order to return to the upper left-hand corner, the beam must be disabled again so a vertical streak doesn't appear on the face of the CRT. Disabling the beam at this time is called vertical blanking. The amount of time it takes the beam to move from the upper left-hand corner of the display and return is a field. By convention, field time normally equals the period of the AC power source [e.g., in the United States, field time is 1/60 of a second (60 Hz) and in Europe, 1/50 of a second (50 Hz)]. The terminal uses a 60 Hz field rate in either 60 Hz or 50 Hz AC input.

In the terminal characters are constructed within a 10 x 13 dot matrix (80 columns). The field must then be broken into vertical and horizontal axes: The vertical axes consist of scan lines and the horizontal axes consist of bit times. Thirteen scan lines and 10 bit times are used to define the character matrix (10 x 13) in an 80-column display. Thirteen scan lines and nine bit times are used to define the character matrix (9 x 13) in a 132-column display.




## PRINTED CIRCUIT BOARD LAYOUT AND COMPONENT IDENTIFICATION

When you study the theory of operations for the terminal, you may want to identify certain components as you read about them. The text identifies each component with the X-Y coordinate system that you use on all printed circuit boards. This system can help you locate components on the PCB that are referred to in the schematics as well. Here is a brief explanation of the coordinate system:

A set of alphabetical coordinates (A, B, C, etc.) runs the length of the microprocessor board. A set of numerical coordinates (1, 2, 3, etc.) runs along the width of the microprocessor board. These coordinates form an X-Y grid. Each component's X-Y coordinate is printed next to it on the PCB. Look at Figure 6-1 for an example of coordinate identification.

Figure 6-1 Microprocessor PCB

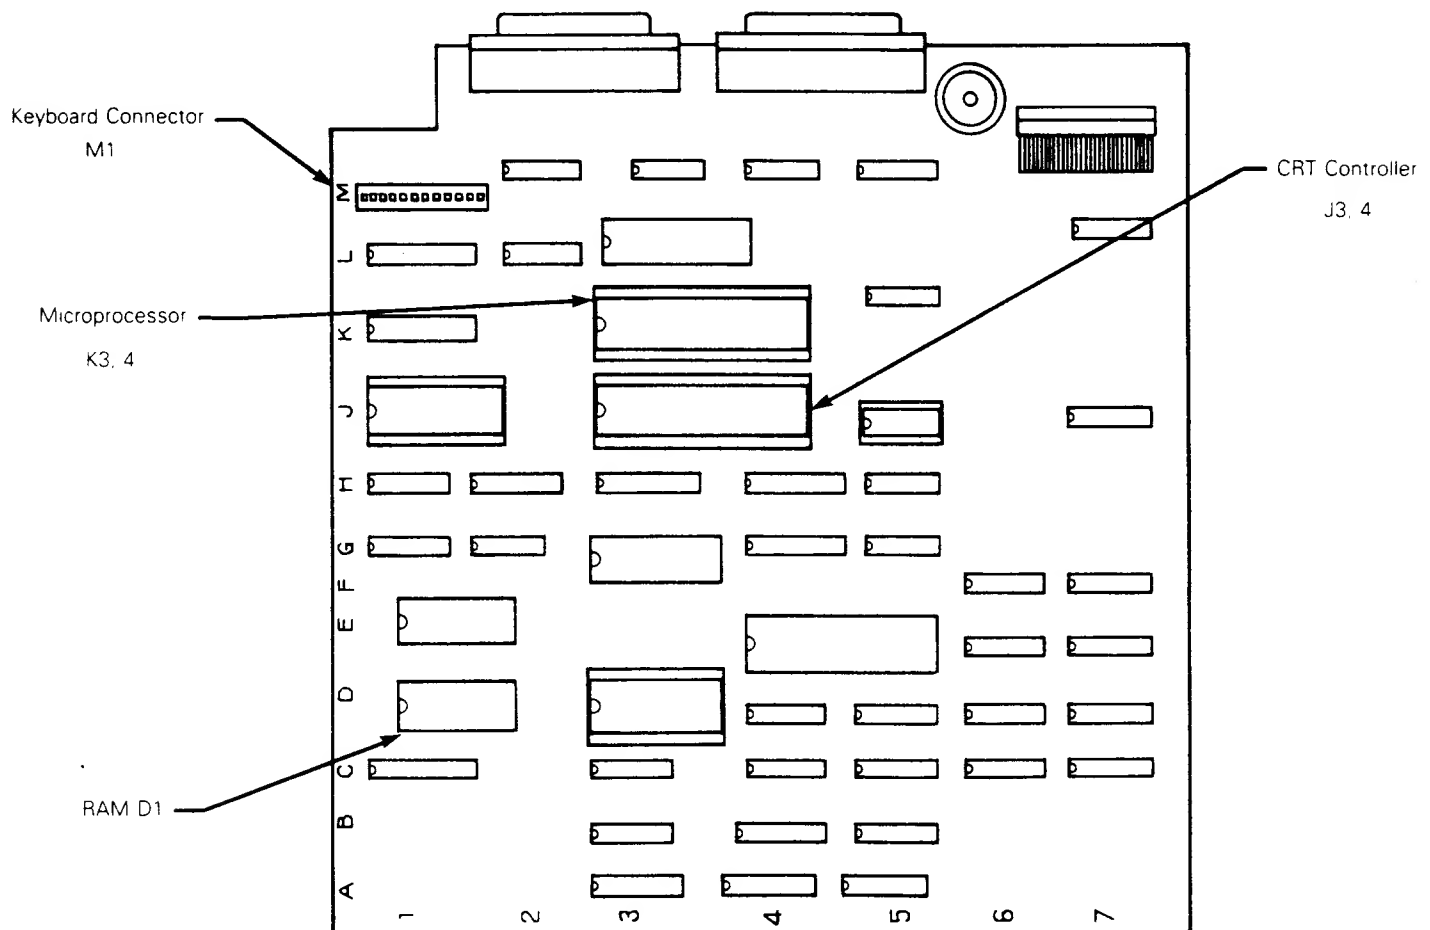



## MICROPROCESSOR PCB BLOCK DIAGRAM

Figure 6-2 is a block diagram of the microprocessor PCB. All of the logic (except the display and power supply) is located on the microprocessor PCB. Note that each block on the block diagram is numbered. This number corresponds to the item numbers given in the following descriptions.



**Note**--There are two versions of the microprocessor PCB in the field. One uses TTL logic throughout; the other replaces some TTL functions with a gate array integrated circuit. You will find notes in the text for any differences between the two configurations.

**Single component microprocessor (1)**--The terminal has a single-component microprocessor which contains 128 bytes of RAM, 32 I/O lines, two 16-bit counter/timers, and UART. It has integral interrupt and clock circuitry. The microprocessor IC uses eight data lines that are multiplexed with the lower eight address lines. Address information appears on these lines only when the ALE (address latch enable) signal is present. The upper address lines (A8-A15) are nonmultiplexed single-direction lines. The UART on the microprocessor PCB drives an RS-232C compatible printer.

**CRT controller (2)**--The programmable video timing controller IC is initialized by the microprocessor chip when you turn on the power. The CRT controller interfaces to the video display buffer (RAM) on a direct-memory access basis. Display data is then sent to the character generation circuitry for processing. The CRT controller chip generates the cursor and also provides the necessary timing and control information for the display logic (scan line count, horizontal synchronization, vertical synchronization, and blank).

**UART (3)**--The UART takes parallel data from the microprocessor and converts it to a bit-serial format for external communication equipment. In addition, the UART converts bit-serial information received from an external source, to parallel information usable by the microprocessor. The UART flags the microprocessor when it needs an interrupt.

**Display RAM (4)**--The display RAM consists of two 2K by 8-bit static RAM chips. RAM is used as a volatile storage medium for display information and telecommunications (TCOM) buffers. The RAM can be accessed by either the microprocessor or the CRT controller.

**PROM (5)**--The PROM is nonvolatile memory for program storage. Every routine resides in the PROM. The terminal PROM can be either 4K, 8K, or 16K bytes. The PROM does not reside within the normal memory map because it has a unique enable line (PSEN).

**RAM address multiplexer (6)**--The RAM address multiplexer allows address information from either the microprocessor or the CRT controller to access the RAM. The multiplexer is selected by the memory bus control (MBC) signal, which is generated by the CRT controller.

**Address decoder (7)**--The address decoder decodes the high order address bits (A13, A14, A15) and the Read and Write control lines



( $\overline{RD}$  and  $\overline{WR}$ ) from the microprocessor. From these signals the decoder generates enable signals for the RAM, UART, CRT controller, electrically alterable ROM (EAROM) keyboard, and diagnostic row buffer register.

**Low order address latch (8)**--This integrated circuit latches the lower order address information presented to it by the microprocessor at address latch enable time. This is necessary because the lower address lines also serve as the bidirectional data bus.

**Bidirectional bus driver (9)**--This driver gates data from the microprocessor to RAM, or data from RAM to the microprocessor.

**Keyboard latch (10)**--The microprocessor tests to see if a key has been pressed on the keyboard by addressing each key and then examining the keyboard return line (Pl.4 on the CPU). The keyboard latch latches this address information so the keyboard can use it.

**Row buffer RAM (11)**--The row buffer RAM is loaded with display information from the display RAM. This display data is read out of the RAM 13 times (once for each scan line) and presented to the character generation circuit for decoding.

**Low buffer latch (12)**--The row buffer latch holds the display data from the video buffer (part of the display RAM) until it can be loaded into the row buffer RAM.

**Row buffer diagnostic latch (13)**--This latch is used for diagnostics only. It latches data during DMA transfers from the row buffer RAM to the row buffer data latch. At the end of each DMA transfer it retains the last byte transferred. This byte can be read by the CPU (prior to the next DMA transfer) and is useful in diagnosing failures in the data path between the video buffer and the character generation circuitry.

**Memory bus control latch (14)**--The memory bus control latch latches the CNTRL 3 signal from the CRT controller. This output is the memory bus control signal. This signal selects the RAM address multiplexer and enables the row buffer latch. It is used when the CRT controller reads in a row of characters with DMA.

**Row address latches (15)**--When the CRT controller initiates a DMA transfer, it outputs the address of the data in the video buffer it wishes to display. This address information (RA0-RA13) is latched into the row address latches for use by the RAM address multiplexer.

**Row buffer data latch (16)**--The row buffer data latch stores each character to be displayed (one at a time) for use by the attribute decoding and character generation circuitry.

**Attribute decoding logic (17)**--Each character read out of the row buffer RAM is examined to see if it is an attribute (blink, dim,



reverse video, etc). Attribute characters are distinguishable: bit 7 must be high, and bits 5 and 6 must be low. If an attribute code is detected, the display blanks at the attribute's location and all subsequent characters exhibit the enabled attribute.

**Attribute latches (18)**--The attribute latches comprise a current attribute and a row attribute latch. These latches ensure that each character displayed has the correct attribute and that each scan line within a row starts with the correct attribute.

**Character generator (19)**--The character generator is a PROM that has been programmed to provide a unique bit pattern output for each displayable character.

**Character generator address latch (20)**--The CRT controller outputs are multiplexed. One of the outputs is scan line information. This scan line information is presented to the address latch, where it will (in conjunction with data from the row buffer RAM) serve as address information to the character generator.



**Level converters (EIA to TTL) (28 and 33)**--These level converters change the EIA RS-232C logic levels to TTL levels for use by the UARTs.

**Level converters (TTL TO EIA) (29 and 32)**--These level converters change the TTL logic levels from the UARTs to RS-232C levels for use with external equipment.

**TCOM clock generator (30)**--The telecommunications (TCOM) clock generator circuit consists of a crystal oscillator that provides the basic clock for the UART. The UART is then programmed (by the user in the setup) for the appropriate baud rate.

**Pass-thru multiplexer (31)**--The pass-thru multiplexer can be enabled so that data received by the main UART can be passed through to the output of the secondary UART (inside the microprocessor). This allows received data to be sent directly to a printer without CPU intervention.

(32)--See item 29

(33)--See item 28

**CPU clock generator (34)**--The CPU clock generator consists of a 11.000 MHz crystal connected to the XTAL input to the CPU. The CPU has its own internal clock generation circuitry that divides the basic crystal frequency into frequencies usable by the CPU.

#### **CRT AND POWER SUPPLY BLOCK DIAGRAM**

The terminal contains a combination monitor/power supply assembly. The power supply provides the voltages for all the logic. These voltages are +12V, -12V, +5V, -23V, and +24.5V. The -23V is used exclusively by the EAROM. Only the monitor/power supply uses the +24.5V supply. Figure 6-3 is a block diagram of the combination monitor/power supply. Note that each block is numbered. This number corresponds with the item number in the following descriptions.

**Voltage doubler (1)**--The terminal operates with either a 115 VAC or 230 VAC input. The voltage doubler circuit provides 350 VDC to the oscillator circuit when 115 VAC is applied, and is passive when the 230 VAC input strap is installed. This assures that the oscillator (DC to AC converter) always has a 350 VDC input regardless of the AC input voltage.




DC to AC converter (2)--The converter consists of a pair of switching transistors. It sends AC input voltage to the main power transformer. The DC to AC inverter is synchronized with the horizontal oscillator to eliminate beat frequencies.

Main switching power transformer (3)--The main power transformer provides taps for the power supply regulator circuitry and the horizontal oscillator.



Figure 6-3 Monitor/Power Supply Block Diagram

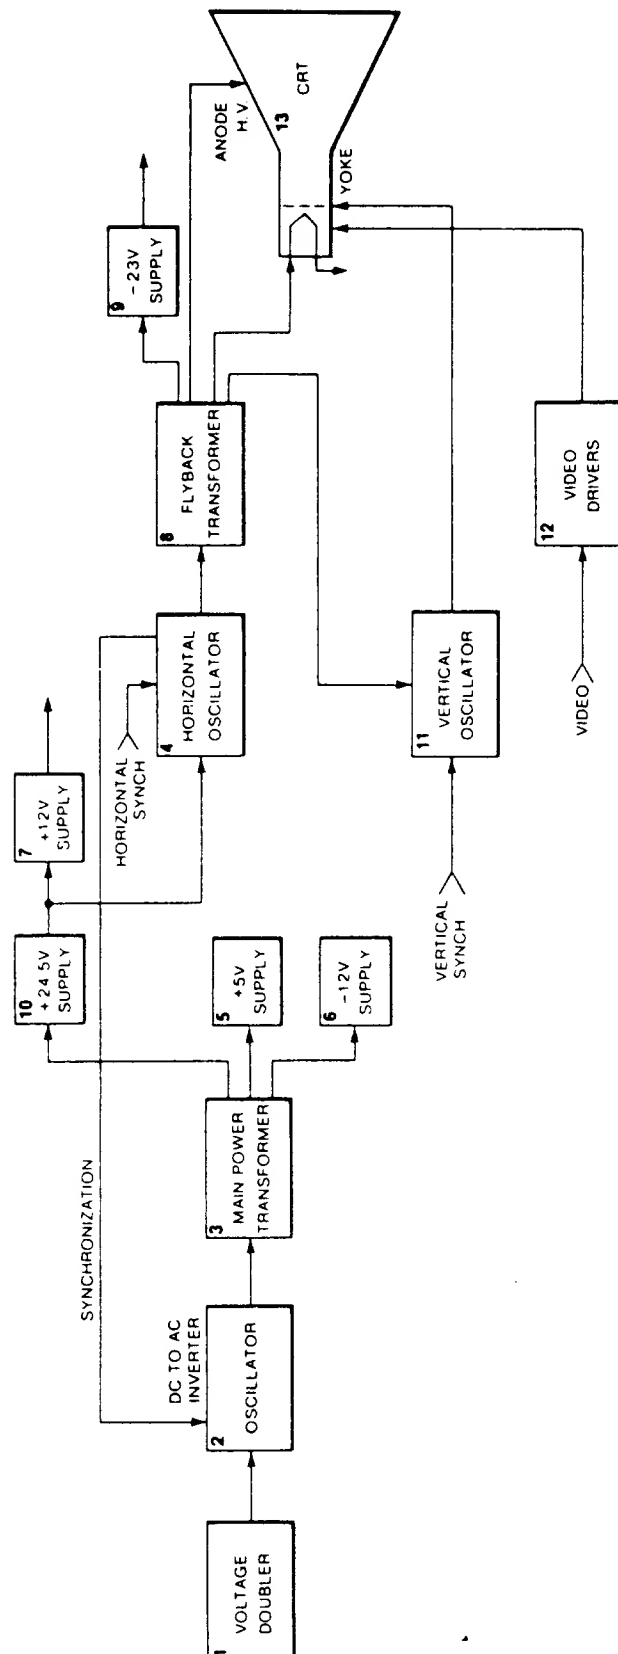



**Horizontal oscillator (4)**--The horizontal oscillator provides the signal to drive the flyback transformer at the correct frequency. It also makes sure that the yoke is driven at the correct frequency so that the electron beam sweeps from left to right at the correct rate. Refer to Figure 6-4 for the horizontal oscillator timing information.

**+5 volt supply (5)**--The +5V is derived directly from one of the main transformer taps which provides low voltage AC. The output of this tap is rectified and regulated. Regulation is accomplished by optically coupling a signal back to the DC to AC inverter which controls its duty cycle, and hence the output voltage of the main switching power transformer.

**-12 volt supply (6)**--The -12V supply is derived from one of the main transformer taps. The low voltage AC output is rectified and regulated.

**+12 volt supply (7)**--The +12V supply is derived from the +24.5 VDC. It uses a linear regulator.

**Flyback transformer (8)**--The flyback transformer steps up the output of the horizontal oscillator to provide the high voltage for the CRT itself. In addition, the flyback transformer has taps that provide filament power and low voltage AC input to the -23V supply.

**-23 volt supply (9)**--The -23V supply receives its low voltage AC input from the flyback transformer. This voltage is then rectified and filtered to provide the -23V for the EARM.

**+24.5 volt supply (10)**--The +24.5V supply is derived from one of the main transformer taps. The low voltage AC output is rectified and then regulated by a linear regulator.

**Vertical oscillator (11)**--The vertical oscillator provides the yoke with the correct vertical drive frequency to ensure that the electron beam scans the face of the CRT at the correct vertical repetition rate. Refer to Figure 6-5 for vertical timing information.

**Video drivers (12)**--The video drivers provide the video input to the CRT with the correct voltage to bias the CRT grid.

**CRT (13)**--The cathode ray tube (CRT) displays data by modulating the electron beam with the video signal while the beam moves across the face of the screen. The horizontal and vertical drive signals determine the rate of movement.



Figure 6-4 Horizontal Oscillator Timing



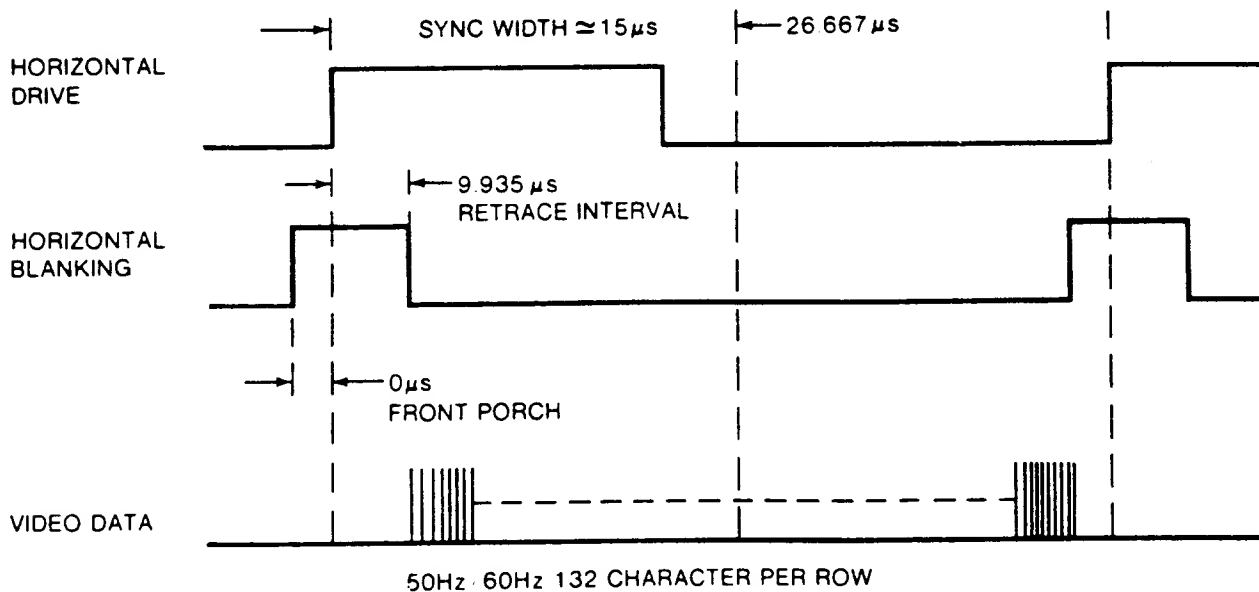





Figure 6-5 Vertical Timing

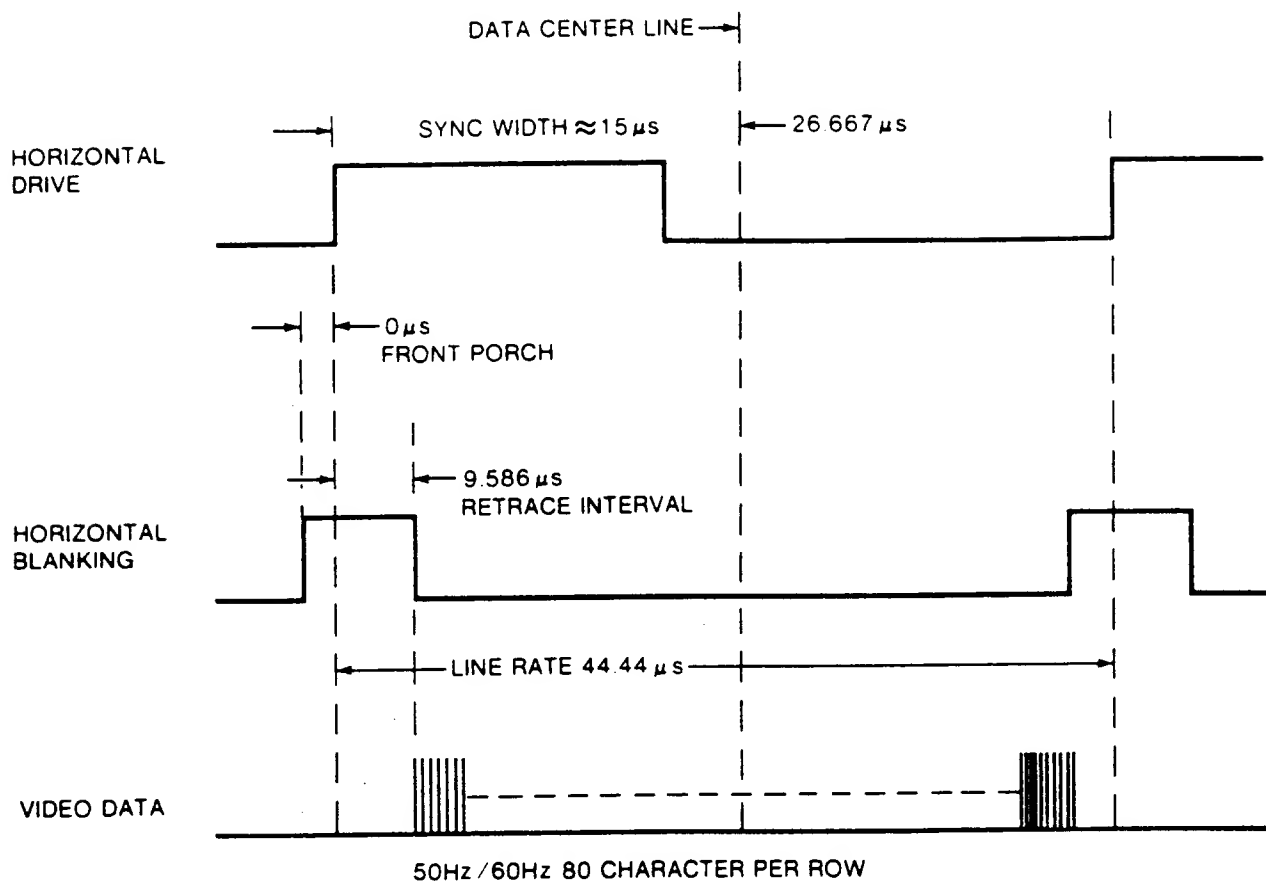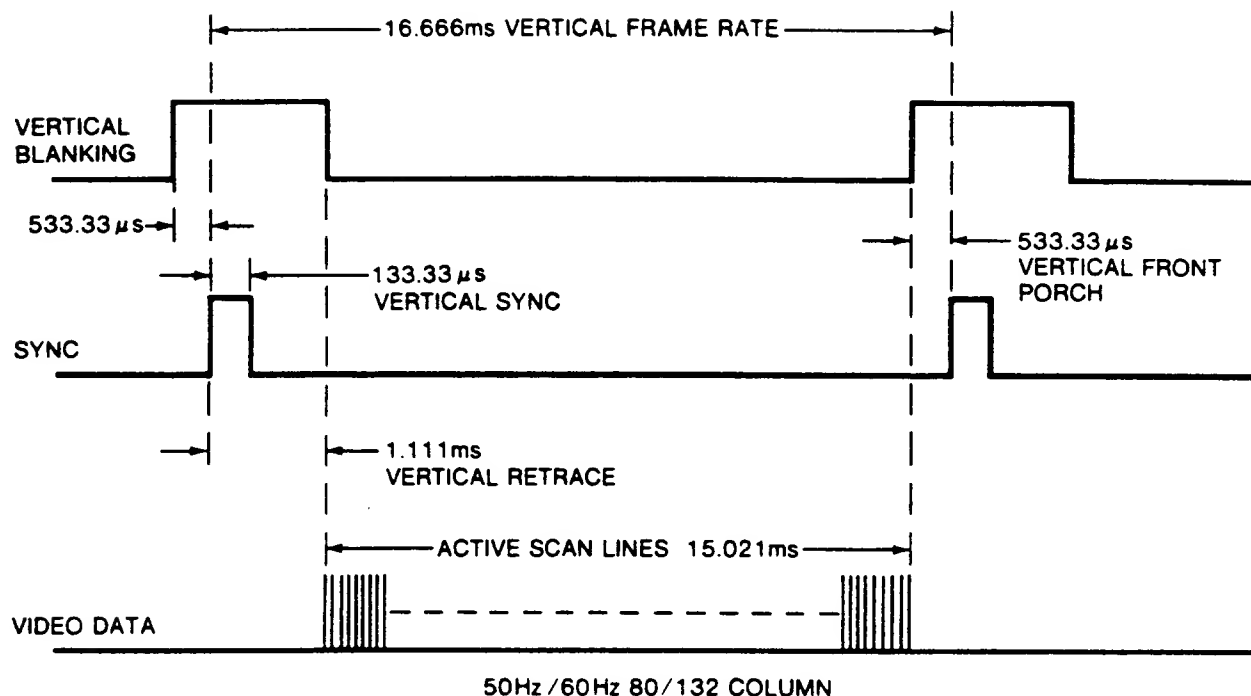

### KEYBOARD BLOCK DIAGRAM

Figure 6-6 is a block diagram of the terminal keyboard. The logic that interfaces with the keyboard resides on the microprocessor PCB. Note that each block on the diagram is numbered. This number corresponds to the item numbers given in the following descriptions.

Figure 6-6 Keyboard Block Diagram

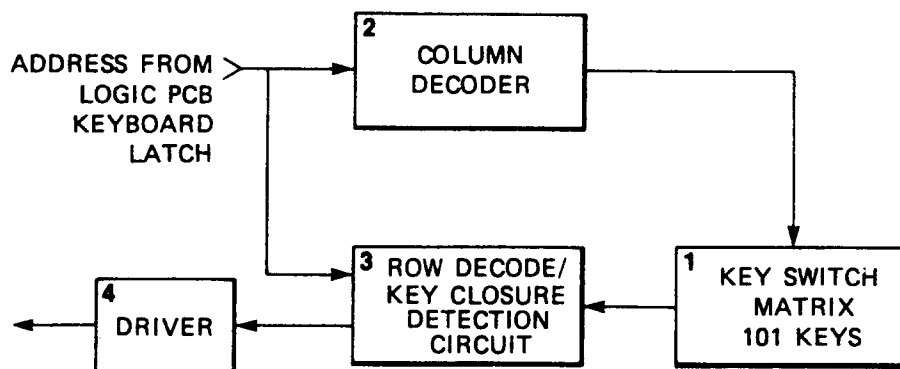



**Key switch matrix (1)**--The key switch matrix is divided into 16 columns and 8 rows. Each row is pulled up to +5V with a pull-up resistor. A key switch is located at each intersection of a row and a column. Pressing a KEY switch results in a unique column and row juncture.

**Column decoder (2)**--The column decoder is driven by the keyboard address latch on the microprocessor PCB. The microprocessor selects each column. When the microprocessor selects a column, the column decoder drives the selected column line low. Because the row lines are all pulled high, a key closure results in the column line pulling the row line low (logic 0).

**Row decoder/key closure detection circuit (3)**--The microprocessor addresses the row decoder, which in turn examines each row in the keyboard switch matrix. If a key has been pressed, the row decoder encounters a logic low on its input line (because the column line pulled the row line low). When this occurs, the key closure detection circuit informs the CPU of a key closure.

**Line drivers (4)**--The keyboard line drivers provide adequate output to minimize the signal decrease between the keyboard and the microprocessor PCB.

## FUNCTIONAL DESCRIPTION

The logic board consists of six sections: microprocessor, communications interface, display memory, nonvolatile memory, keyboard interface, and video control.

### Microprocessor

The 8031 microprocessor contains 128 bytes of RAM, two counter/timers, a full duplex serial port, and two parallel ports. The processor operates at 11 MHz. This allows most instructions to execute in 1.1 microseconds.

The 8031 has separate addresses for program storage and I/O. Program storage is selected with signal PSEN. The terminal uses 8K of program storage but can be expanded to 16K with no jumpers or to 32K with one jumper. The I/O address space is selected by  $\overline{RD}$  (read) or  $\overline{WR}$  (write).

There is an 8-bit data bus, which has the eight lower order address bits multiplexed during bus cycles. The lower address bits are latched into an 8-bit latch by the ALE signal (address latch enable). The upper eight address bits have a dedicated output port on the 8031.

Table 6-1 is a list of 8031 pin assignments.



Table 6-1 8031 Pin Assignments

Pin	Assignment
P0.0-P0.7	Data bus and lower byte of address bus.
P1.0	<u>AUX READY</u> . Input from auxiliary serial port. Indicates DTR line is asserted.
P1.1	<u>NVDOUT</u> . Input from nonvolatile memory. Data is shifted in serially from memory.
P1.2	Pass-thru. Output from 8031 sends data received from the MODEM port out through the AUX port.
P1.3	<u>AUX RTS</u> . Input to 8031 from AUX port. Indicates RTS is being asserted by AUX device.
P1.4	Key return. Input from the keyboard to the CPU. Signal is high if currently addressed key is pressed.
P1.5	BELL. Output by 8031 to sound tone generator.
P1.6	<u>DIM/REV</u> . Output by 8031 to define presentation of protected characters on CRT. Low is dim. High is reverse video.
P1.7	<u>80/132</u> . Output by 8031. Selects 80-column or 132-column display.
P2.0-P2.7	Address bits 8-15 output by 8031 during bus cycles.
P3.0	RXD. Received data from AUX serial port.
P3.1	TXD. Transmitted data from 8031 to AUX port.
P3.2	<u>INT0</u> . ( <u>BRE0</u> ). Interrupt input from CRT controller during DMA transfers.
P3.3	<u>INT1</u> . ( <u>SI0IR</u> ). Interrupt input from MODEM port UART. Indicates data in the receive buffer.
P3.4	<u>T0</u> . ( <u>VTIR</u> ). Timer 0 input. Generates interrupts by CRT controller.
P3.5	<u>T1</u> . ( <u>GRAPHICS</u> ). Output by 8031 to turn on graphics interface signals.



P3.6	$\overline{\text{WR}}$ . I/O Write signal output by 8031.
P3.7	$\overline{\text{RD}}$ . I/O Read signal output by 8031.
RST	Reset. High input resets 8031.
EA	$\overline{\text{External access}}$ . Low signal forces 8031 to make program fetches from external ROM.
ALE	Address latch enable. Latches multiplexed lower order address bits from data bus into address latch.
PSEN	$\overline{\text{Program store enable}}$ . Enables external ROM during program fetch.

### Communications Interface

Both independent serial ports [the MODEM port and the AUX (auxiliary) port] are asynchronous. The MODEM port connects to a terminal or a modem. The AUX port usually connects to a printer.

The MODEM port is implemented with a 2661-B UART. The UART derives its baud rate clock from a 4.9152 MHz crystal. The 1488 and 1489 buffers provide the voltage level conversion for interfacing RS-232 lines. Noise filtering is provided by the 220 pF capacitors.

The AUX port uses the UART in the 8031. The 11 MHz processor clock is divided internally by timer one to provide baud rates.

In addition to operating independently of the MODEM port, the AUX port may operate in a pass-thru mode. In the pass-thru mode, the data received by the MODEM port is retransmitted from the AUX port. The DTR signal received by the AUX port is passed through to the MODEM port.

### Display Memory

The display memory in the terminal is dual-ported between the CRT controller and the 8031 processor. Normally, there are two 2K RAM chips installed for single-page operation.

The PCB can be expanded by one or two 8K x 8 byte RAMs, but this expansion is not supported by the firmware.

During the first scan line of each character row, the 2672 CRT controller sends an interrupt to INT0 of the 8031 nine microseconds before starting a DMA transfer from the display RAM. The 8031 may not access the display RAM while this signal is asserted. The 8031 does not stop during the DMA transfer and may service any other devices at this time.



## Nonvolatile Memory

The terminal stores configuration parameters in the 100 x 14-bit nonvolatile memory. The memory operates from +12V and -23V. To generate these voltages, the monitor power/supply should receive a horizontal frequency signal 250 milliseconds before trying to read from or write to the nonvolatile RAM.

The EAROM requires a command code on the C1, C2, and C3 inputs in order to erase, read, or write. Address and data information are clocked into the EAROM through the bidirectional D pin.

The 8031 controls the EAROM through a control latch (4H on the TTL PCB, 5G on the gate array PCB). The control latch signal levels are translated by 7406 open collector inverters to the 12 volt levels required by the ER1400 EAROM. Data read out of EAROM is translated to TTL levels by a comparator before being read by the 8031 on Pl.1.

## Keyboard Interface

Each key on the keyboard is tested for key depression by presenting its address to a latch, then testing the line at Pl.4 on the 8031. At least 6 microseconds elapse between outputting an address and testing the key return.

Debouncing and multiple key depressions are handled by the 8031.

## Video Controller

The video controller consists of the dot and character clock section, the 2672 programmable video timer controller, attribute control, character font, and video shift register.

## Video Clock Circuitry

A 68.85 MHz oscillator provides the basic timing for the dot clock and character clock. A 68.85 MHz crystal provides the positive feedback around a 74F04 inverter (2B, TTL; 3B, gate array). The crystal is used in a series resonant overtone mode. A T-network consisting of resistors (R3 and R44, TTL; R2 and R3, gate array) and a capacitor (C9, TTL; C11, gate array) provide DC feedback around the inverter for proper biasing while blocking AC. An inductor and capacitor (L1 and C72, TTL; L1 and C14, gate array) form a parallel resonant circuit to reduce the oscillator's feedback if it attempts to oscillate at the wrong overtone frequency. Another capacitor (C8 on both boards) provides an AC path to ground for the resonant circuit.

The output from the oscillator is buffered by another 74F04 and then applied to a divider (2A, TTL; 3A, gate array). The divider circuit divides by 2 for 132-column operation or by 3 for 80-



column operation. The dot clock from the divider goes to the video shift register and the character clock generator.

The character clock generator consists of a Johnson counter (3B, 4B, and 3A, TTL; 4A, 4B, and 5A, gate array) which divides the dot clock by 10 in 80-column mode and by 9 in 132-column mode. The character clock generator also provides a properly phased load enable signal for the video shift register.

### Programmable Video Controller

The 2672 programmable video timing controller (PVTC) provides all the timing and control signals for displaying characters on the CRT (3J). The 8031 initializes the 2672 with the display parameters when a user turns the terminal ON. Before each displayable character row, the 8031 gives the 2672 the beginning character address for that row. The 2672 fetches characters from the display RAM during the first scan line of each displayable character row. During the following 12 scan lines the characters are retrieved from the row buffer.

The 2672 warns the 8031 of an impending DMA transfer by asserting BREQ 9 microseconds before the DMA transfer begins. After 9 microseconds, the 2672 asserts memory bus control (MBC) which ports the display RAM into the row buffer RAM and disconnects the display RAM from the 8031 bus. Since the DMA transfers do not stop the 8031, there is an additional 1.17 milliseconds of program execution time available during each video frame (26 row x 45 microseconds horizontal period).

In addition to providing the character addressing, the 2672 also generates the scan line count and attribute control signals. The scan line count, blink rate, and underscore signals are multiplexed on the 2672's character address lines. At the beginning of each scan line these multiplexed signals are clocked by the falling edge of the blank signal into a latch (4D).

### Attribute Control

Attribute control determines the way the CRT displays characters. There are five attributes: blink, blank, underscore, reverse, and dim. Reverse and dim are hidden, the attribute is not embedded in the display data and doesn't occupy a character location. The rest of the attributes are "not hidden." Not hidden means that the attribute is embedded in the display data and occupies a character location on the screen.

As data is presented to the character generator (3D, TTL; inside the gate array), it is simultaneously decoded by the attribute controller to determine if it is display data or an attribute. If bit 7 is high and bits 6 and 5 are low, then the data byte is interpreted as an attribute byte.



## APPENDIX A SPECIFICATIONS

### PHYSICAL

Dimensions                      Video Module:  
                                 12"H x 12.3"W x 13"D  
                                 (30.48cm x 31.24cm x 33.02cm)

                                 Video Module Base:  
                                 1.25"H x 12.25"W x 10.25"D  
                                 (3.20cm x 31.12cm x 26.04cm)

                                 Keyboard:  
                                 2.25"H x 17.25"W x 7.6"D  
                                 (5.72cm x 43.82cm x 19.3cm)

Net Weight                      30 lbs. (13.5kg approx.)

Finish                           Two-tone gray

### CRT

Size                            14" diagonal  
                                 (35.56cm)

Display                        Nonglare, P138 green phosphor  
                                 Nonglare, P134 orange phosphor

Swivel: 270 degrees

Tilt: 15 degrees

Screen Format                   80 or 132 columns  
                                 (user selectable)

26 rows  
(two rows for terminal status and  
function key identification)

Character Matrix               80 column: 7 x 13 matrix, 10 x 13 cell  
                                 132 column: 7 x 13 matrix, 9 x 13 cell

Character Set                   128 characters  
                                 (96 displayable ASCII characters,  
                                 16 control code symbols, and 16  
                                 graphics characters)

Language                       U.S. (American), U.K. (British),  
Keyboard Codes                French, German, Spanish, Danish



Video Attributes	Normal, dim, blink, blank, underline, and reverse
Horizontal Frequency	22.9 KHz
Video Bandwidth	17.0 MHz
Total Active Scan Lines	338
Total Scan Lines	375
Total Pixel Resolution	800 by 338
Cursor	Block or line Blinking or nonblinking (user selectable)
Memory	One page

#### KEYBOARD

Type	Low-profile detached, with 6-foot coiled cable (1.83m)  Two-position tilt (low position meets DIN specification)
Keys	101, including 16 programmable function keys (shiftable to 32), and numeric keypad. N-key rollover with ghost key lockout

#### COMMUNICATIONS

Ports	Two independent EIA RS-232C interfaces
Mode	Asynchronous TTY compatible (block and conversational)
Baud Rates	MODEM: 50, 75, 110, 134.5, 150, 300 600, 1200, 1800, 2000, 2400, 4800, 9600, 19.2K, 38.4K bps  AUX: 110, 134.5, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, 9600, 19.2K bps



Here are the attribute bit assignments:

Bit	Value			
7	1	*	} Indicates byte is an attribute.	
6	0	*		
5	0	*		
4	A	Reverse Video	1-ON	0-OFF
3	B	Underscore	1-ON	0-OFF
2	C	Blank	1-ON	0-OFF
1	D	Blink	1-ON	0-OFF
0	E	Dim	1-ON	0-OFF

If a data byte is an attribute, it is routed through multiplexed 5D, 5A, 6A, and 7A into the current attribute latch 6C on the TTL PCB. The data byte is routed through the gate array on the gate array PCB. A new attribute always replaces the previous one and affects all the following displayed data until the next attribute is encountered. Whenever a new attribute is latched, the shift register (2C, 3C, and 4C, TTL; 3C, 4C, and 5C, gate array) is inhibited from loading the contents of the character font (3D); therefore, the screen location of an attribute is always blank (video off).

The outputs of the current attribute latch (6C, TTL; within the gate array) are decoded to create the different attributes. Blank and blink are created by inhibiting the shift register from loading. Underscore is exclusive OR'd with the reverse and cursor functions, and the shift register load is inhibited.

The reverse video functions (cursor, underscore, reverse, character) are exclusive OR'd with the serial video bit stream.

At the beginning of the first scan line of each character row, the attribute latch (6D, TTL; within the gate array) is loaded from the attribute latch (6C, TTL; within the gate array). This allows the last active attribute of each character row to propagate to subsequent character rows until a new attribute is encountered. Memory bus control (MBC) from the 2672 PVTC causes this transfer. At the beginning of every scan line (including the first scan line), the current attribute latch (6C, TTL; within the gate array) is loaded from the row attribute latch (6D, TTL; within the gate array). This action restores the current attribute latch to the initial value for this character row.

The attribute controller also detects protected characters and displays them as dim, reverse, or normal. A protected character is detected when D7 is 1 and either D6 or D5 (or both) is also 1.

### Character Generator

Each character cell is 10 dots (80-column) or 9 dots (132-column) wide by 13 scan lines high.



A 200ns 2732A EPROM stores the font. Address bits (A0 through A3) select the appropriate pattern for the current scan line. Address bits (A4 through A10) select the 128 ASCII and line drawing characters when A11 is low. All controls the lower or upper 128 characters select. Both lower and upper shift have the same characters. The firmware can select A11 for the protect attribute. This makes normal video one of the protect options.

### Row Buffer Diagnostic Register

The row buffer diagnostic register (4E, TTL; 4H, gate array) latches data during DMA transfers. At the end of a DMA transfer, this register contains the last byte of the transfer. The CPU can read this byte before the next transfer.

### Video Shift Register

The video shift register (2C, 3C, and 4C, TTL; 3C, 4C, and 5C, gate array) provides the serial bit stream to the video input of the monitor/power supply PCB. The shift register is controlled by the attribute control section by a single signal. The shift register can parallel load from the character font or it can shift right. Whenever the register shifts data out to the right, it also shifts in zeros from the left. In this way the shift register is automatically cleared to all zeros at the end of each character boundary. To create a blank character cell on the CRT, it is only necessary to inhibit the register from loading during that character cell boundary.

The output from the shift register goes to a dot stretcher composed of NPN transistor Q2 (Q3, gate array) and capacitor C30 (C61, gate array). The dot stretcher extends the on-time of the video dots so that vertical columns of single dots appear in equal intensity to the horizontal strings of dots.

After the dot stretcher, the video goes to an exclusive OR gate (7D, TTL; 6E, gate array) that creates reverse video for the cursor and reverse attributes. The video is next OR'd with any external video input (5E, TTL; 7E, gate array). Finally, the video is gated with the blanking signal (7G, TTL; 6C, gate array) from the CRT controller.



Bit Length	7 or 8 bits (user selectable)
Stop Bits	1 or 2 (user selectable)
Parity	Odd, even, mark, or none (user selectable)
Handshake Protocols	
MODEM port	XON/XOFF, DTR, both, or none
AUX port	DTR only

#### COMPATIBILITY

Native Mode	Wyse WY-100, Lear Siegler ADM-31
Compatible Mode	TeleVideo 910, 920, 925 ADDS Viewpoint Hazeltine 1500

#### POWER

Fuse	2a, 250V
Standard	90 to 130 VAC 50/60 Hz $\pm$ 5%
Optional	200 to 240 VAC 50/60 Hz $\pm$ 5%
Power	45 watts
Power Available	With Logic      Without Logic
+5V	500 ma      2000 ma
+12V	100 ma      200 ma
-12V	100 ma      200 ma
-23V	20 ma      40 ma

#### LOGIC

CPU	8031, 11 MHz
PUTC	2762
UART	2661



## ENVIRONMENT

Temperature

Operating: 32 to 113 degrees F  
(10 to 40 degrees C)

Storage: -40 to +140 degrees F  
(-40 to +60 degrees C)

Humidity

10% to 90% relative, noncondensing

Altitude

Sea level to 15,000 feet  
(0 to 4,572m)



## APPENDIX B CONNECTOR PIN ASSIGNMENTS

The MODEM and AUX (auxiliary) port connector pin assignments are listed below.

### MODEM RS-232C (DTE)

Pin No.	Signal
1	Shield Ground
2	Transmit Data (output)
3	Receive Data (input)
4	Request to Send (output)
* 5	Clear to Send (input)
6	Not Used
7	Signal Ground
* 8	Data Carrier Detect (input)
** 9	
10	Not Used
11	Not Used
12	Not Used
** 14	
** 18	
19	
20	Data Terminal Ready (output)
** 24	
** 25	

\* Don't connect these pins. If they receive low signals, the terminal will not operate.

### AUX RS-232C (DCE)

Pin No.	Signal
1	Shield Ground
2	Transmit Data (input, not used)
3	Receive Data (output)
4	Request to Send (input, not used)
5	Clear to Send (output, not used)
6	Data Set Ready (output)
7	Signal Ground
8	Data Carrier Detect (output, not used)
*** 20	Data Terminal Ready (input)

\*\* Leave these pins unconnected, they carry graphics input for the WY-1000.



\*\*\* For handshaking purposes. Busy/Ready Protocol:

Busy: -3 to -12 V  
Ready: +3 to +12 V



## APPENDIX C SCHEMATICS

This appendix contains schematic diagrams for the logic and monitor/power supply PCB. Use them to help you troubleshoot the terminal.

Schematic	Location
Keyboard, WY-50 96-013-01, 1 of 1	C-3
Logic Board, WY-50 96-012-01, 0 of 7	C-5
Logic Board, WY-50 96-012-01, 1 of 7	C-7
Logic Board, WY-50 96-012-01, 2 of 7	C-9
Logic Board, WY-50 96-012-01, 3 of 7	C-11
Logic Board, WY-50 96-012-01, 4 of 7	C-13
Logic Board, WY-50 96-012-01, 5 of 7	C-15
Logic Board, WY-50 96-012-01, 6 of 7	C-17
Logic Board, WY-50 96-012-01, 7 of 7	C-19
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. C, 1 of 2	C-21
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. C, 2 of 2	C-23
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. F, 1 of 2	C-25
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. F, 2 of 2	C-27



Logic Board, WY-50 Gate Array II Version 96-058-01, 1 of 2	C-29
Logic Board, WY-50 Gate Array II Version 96-058-01, 2 of 2	C-31
Monitor/Power Supply, WY-50 96-019-01 Rev. E, 1 of 1	C-33
Monitor/Power Supply, WY-50 96-019-01 Rev. F, 1 of 1	C-35
Logic Board, WY-50+ 96-058-05, 1 of 2	C-37
Logic Board, WY-50+ 96-058-05, 2 of 2	C-39
Monitor/Power Supply, WY-50+ 96-019-02, 1 of 1	C-41



**WY-50+ ADDENDUM  
TO THE WY-50 DISPLAY TERMINAL  
MAINTENANCE MANUAL**

Document 880155-01 Rev. A

January 1986

Wyse Technology  
3571 North First Street  
San Jose, CA 95134



**To:** Wyse Servicers

**From:** Wyse Customer Service

**Date:** January 1986

**Subject:** WY-50 Maintenance Manual Addendum Instructions

Now that the WY-50+ is available, you'll need to service both the WY-50 and the WY-50+ terminals. This addendum package enables you to convert your existing WY-50 Maintenance Manual to a WY-50/WY-50+ Maintenance Manual. Replace the outdated pages listed below with the enclosed revised pages and add the WY-50+ appendix (Appendix D), which explains in detail all servicing differences. We have also enclosed several new schematics. These include revisions of two schematics already in your WY-50 manual, as well as the following: the WY-50+ Logic Board, the WY-50+ Monitor/Power Supply Board, and a third version of the WY-50 Logic Board.

Old Pages	New Pages	Action
Title page through vii	New Title page through vii	Replace
A-1 to A-3	A-1 to A-4	Replace
C-1	C-1 and C-2	Replace
	C-25 to C-31 C-35 to C-41	Add according to page location list on new C-1 and C-2.
	Appendix D	Add, directly after the last schematic and before the Index.
Index	Index	Replace



**WY-50/WY-50+ DISPLAY TERMINAL  
MAINTENANCE MANUAL**

Document 880020-01 Rev. B

January 1986

Wyse Technology  
3571 North First Street  
San Jose, CA 95134



## **Copyright Notice**

©1985 Wyse Technology. All rights reserved.

This guide, its format, and the firmware described herein are copyrighted by Wyse Technology. The firmware described in this document is furnished under a license agreement. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate it into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, any part of this publication without the express written permission of Wyse Technology. Except for normal backup copies, you may not copy any part of the firmware provided with this product.

## **Trademark**

WYSE is a registered trademark of Wyse Technology.  
WY-50, WY-50+, and WY-1000 are trademarks of Wyse Technology.  
ADM-31 is a trademark of Lear Seigler/Data Products Division.  
TeleVideo is a registered trademark of TeleVideo Systems, Inc.  
ADDS Viewpoint is a trademark of Applied Digital Data Systems, Inc.  
Hazeltine 1500 is a trademark of Hazeltine Corp.

## **Disclaimer**

Wyse Technology makes no representations or warranties regarding the contents of this document. We reserve the right to revise this document or make changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or change.

## **FCC Warning**

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.



## **PREFACE**

This maintenance manual contains information on how to service and repair the WY-50 and WY-50+ terminals. Appendix D describes additional diagnostic firmware specific to the WY-50+ terminal, an enhanced version of the WY-50. We assume you are a qualified service technician with previous experience in terminal and computer repair. To take full advantage of this manual, we suggest you read the information in the order presented.

## **HOW TO USE THIS MANUAL**

This manual is divided into six chapters and four appendixes. Chapter one provides important information for the technician who has never serviced this terminal before. If you are already familiar with the terminal, the technical information in Appendix A can serve as an ongoing introduction. Here is a summary of this manual:

**Chapter 1, "Product Overview"** describes the terminal, including internal functions, I/O, telecommunications, environmental needs, and operator controls.

**Chapter 2, "Removal and Replacement Procedures,"** shows you how to take the terminal apart and put it back together again. It includes instructions on how to change power requirements on the terminal from domestic to international.

**Chapter 3, "Troubleshooting,"** tells you what to look for and how to fix problems on the terminal. It includes a list of tools needed for troubleshooting, a quick reference guide, and a flowchart.

**Chapter 4, "Adjustments and Alignments,"** describes power supply and monitor adjustments that control the quality of the display.

**Chapter 5, "Illustrated Parts List,"** includes a list of display and keyboard assembly parts.

**Chapter 6, "Theory of Operation,"** describes the terminal operation by function.



**Appendix A, "Specifications,"** lists the terminal's specifications.

**Appendix B, "Connector Pin Assignments,"** lists the signals on each pin of the MODEM and the AUX ports located on the rear panel of the terminal.

**Appendix C, "Schematics,"** includes schematics for the microprocessor PCB, keyboard, and monitor/power supply PCB.

**Appendix D, "Servicing the WY-50+,"** describes new diagnostic firmware included in the WY-50+, the enhanced version of the WY-50, and lists new part numbers.

## **REFERENCE MANUALS**

These publications provide additional information about the terminal.

WY-50 Display Terminal Reference Manual, Wyse 88-011-01

WY-50 Display Terminal Quick Reference Guide, Wyse 88-021-01

WY-50+ User's Guide, Wyse 880153-01

WY-50+ Programmer's Guide, Wyse 880154-01



## TABLE OF CONTENTS

<b>PREFACE.....</b>	<b>iii</b>
<b>1 GENERAL INFORMATION.....</b>	<b>1-1</b>
Introduction.....	1-1
High Level Functional Description.....	1-2
Microprocessor.....	1-2
Memory.....	1-2
Input/Output Devices.....	1-4
Keyboard.....	1-4
CRT Display.....	1-6
Telecommunications.....	1-6
Environmental Considerations.....	1-6
Operator Controls.....	1-7
Keyboard.....	1-8
Power Cord.....	1-8
Communications Cable.....	1-8
Fuse.....	1-8
Power Switch.....	1-8
Brightness Control.....	1-8
Setup Parameters.....	1-9
Cleaning.....	1-10
<b>2 REMOVING AND REPLACING COMPONENTS.....</b>	<b>2-1</b>
Modules.....	2-1
Fuse Replacement.....	2-4
Keyboard Replacement.....	2-5
Keyboard Cable Replacement.....	2-6
Keyboard PCB Replacement.....	2-7
Top Cover Replacement.....	2-8
Replacing the Monitor/Power Supply PCB.....	2-8
Changing Power Requirements on the Terminal....	2-8
CRT/Yoke Assembly Replacement.....	2-12
Brightness Potentiometer Replacement.....	2-14
AC Power Switch Replacement.....	2-15
Microprocessor PCB Replacement.....	2-17
<b>3 TROUBLESHOOTING.....</b>	<b>3-1</b>
Introduction.....	3-1
Power-On Self Test.....	3-1
Diagnostic Self Test.....	3-2
Troubleshooting.....	3-3
Troubleshooting Flowchart.....	3-3
Power Supply Check from the	
Microprocessor PCB.....	3-8
Checking Horizontal Synchronization.....	3-9
Adjusting Vertical Hold.....	3-9



4	<b>ADJUSTMENTS AND ALIGNMENTS.....</b>	4-1
	Power Adjustments.....	4-1
	Does the Terminal Meet the Display	
	Specifications?.....	4-3
	Aligning the Terminal Display.....	4-4
	Adjustments.....	4-5
	Height.....	4-5
	Linearity.....	4-5
	Focus.....	4-5
	Width.....	4-6
	Yoke Lock.....	4-6
	Sub-Brightness.....	4-8
	Display Magnets.....	4-8
5	<b>ILLUSTRATED PARTS LIST.....</b>	5-1
	WY-50 Display Assembly Parts List.....	5-2
	WY-50 Keyboard Assembly Parts List.....	5-4
6	<b>THEORY OF OPERATIONS.....</b>	6-1
	Introduction.....	6-1
	Raster Scan Terminology.....	6-1
	Printed Circuit Board Layout and Component	
	Identification.....	6-2
	Microprocessor PCB Block Diagram.....	6-3
	CRT and Power Supply Block Diagram.....	6-8
	Keyboard Block Diagram.....	6-13
	Functional Description.....	6-14
	Microprocessor.....	6-14
	Communications Interface.....	6-16
	Display Memory.....	6-16
	Nonvolatile Memory.....	6-17
	Keyboard Interface.....	6-17
	Video Controller.....	6-17
	Video Clock Circuitry.....	6-17
	Programmable Video Controller.....	6-18
	Attribute Control.....	6-18
	Character Generator.....	6-19
	Row Buffer Diagnostic Register.....	6-20
	Video Shift Register.....	6-20

## APPENDIXES

A	<b>SPECIFICATIONS.....</b>	A-1
B	<b>CONNECTOR PIN ASSIGNMENTS.....</b>	B-1
C	<b>SCHEMATICS.....</b>	C-1
D	<b>SERVICING THE WY-50+.....</b>	D-1
	Introduction to WY-50+ Maintenance.....	D-1
	Troubleshooting.....	D-1
	Power-On self-Test.....	D-1
	Field Diagnostics.....	D-2
	System Diagnostic Test.....	D-2
	Transmit/Receive Communications Port Test.....	D-4



Keyboard Function Test.....	D-5
Attribute/Character Font Test.....	D-6
Alignment and Adjustment.....	D-8
Pattern M.....	D-8
Pattern O.....	D-9
Parts List.....	D-10
Schematics.....	D-10
<b>INDEX.....</b>	<b>I-1</b>

## LIST OF FIGURES

1-1 Simplified Block Diagram.....	1-1
1-2 Memory Map.....	1-3
1-3 Keyboard.....	1-5
1-4 Terminal Dimensions.....	1-6
1-5 Operator Controls.....	1-7
2-1 Four Major Modules.....	2-2
2-2 Orientation View of Terminal and Components.....	2-3
2-3 Line Fuse Location.....	2-5
2-4 Keyboard Assembly.....	2-6
2-5 Monitor/Power Supply and Chassis.....	2-10
2-6 CRT/Yoke Assembly.....	2-12
2-7 Operator Brightness Potentiometer.....	2-14
2-8 AC Power Switch Removal.....	2-16
2-9 Microprocessor PCB Removal.....	2-18
3-1 Test Jumper.....	3-2
3-2 Troubleshooting Flowchart.....	3-4
3-3 Power Connector at the Microprocessor PCB.....	3-8
4-1 Monitor/Power Supply Component Layout.....	4-1
4-2 Yoke Lock on the CRT Neck.....	4-7
4-3 Display Magnets.....	4-8
6-1 Microprocessor PCB.....	6-2
6-2 Microprocessor PCB Block Diagram.....	6-4
6-3 Monitor/Power Supply Block Diagram .....	6-10
6-4 Horizontal Oscillator Timing.....	6-12
6-5 Vertical Timing.....	6-13
6-6 Keyboard Block Diagram.....	6-13
D-1 Keyboard Function Test Pattern.....	D-6
D-2 Attribute/Character Font Test.....	D-7
D-3 Pattern M.....	D-8
D-4 Pattern O.....	D-9

## LIST OF TABLES

3-1 Error Message Definitions.....	3-1
4-1 Problems and Adjustments.....	4-4
4-2 Screen Areas Affected by Display Magnets.....	4-9
6-1 8031 Pin Assignments.....	6-14
D-1 Power-On Self-Test Error Codes.....	D-1
D-2 System Diagnostic Test Error Codes.....	D-3
D-3 Transmit/Receive Com Port Test Error Codes.....	D-5
D-4 Test Pattern Problems and Adjustments.....	D-10



## APPENDIX A SPECIFICATIONS

### PHYSICAL

Dimensions                      Video Module:  
                                 12"H x 12.3"W x 13"D  
                                 (30.48cm x 31.24cm x 33.02cm)

                                 Video Module Base:  
                                 1.25"H x 12.25"W x 10.25"D  
                                 (3.20cm x 31.12cm x 26.04cm)

                                 Keyboard:  
                                 2.25"H x 17.25"W x 7.6"D  
                                 (5.72cm x 43.82cm x 19.3cm)

Net Weight                      30 lbs. (13.5kg approx.)

Finish                           Two-tone gray

### CRT

Size                            14" diagonal  
                                 (35.56cm)

Display                        Nonglare, P138 green phosphor  
                                 Nonglare, P134 orange phosphor

Swivel: 270 degrees

Tilt: 15 degrees

Screen Format                   80 or 132 columns  
                                 (user selectable)

26 rows  
(two rows for terminal status and  
function key identification)

Character Matrix               80 column: 7 x 13 matrix, 10 x 13 cell  
                                 132 column: 7 x 13 matrix, 9 x 13 cell

Character Set                   128 characters  
                                 (96 displayable ASCII characters,  
                                 16 control code symbols, and 16  
                                 graphics characters)

Language                       U.S. (American), U.K. (British),  
Keyboard Codes               French, German, Spanish, Danish



Video Attributes	Normal, dim, blink, blank, underline, and reverse
Horizontal Frequency	22.9 KHz
Video Bandwidth	17.0 MHz
Total Active Scan Lines	338
Total Scan Lines	375
Total Pixel Resolution	800 by 338
Cursor	Block or line Blinking or nonblinking (user selectable)
Memory	One page

#### KEYBOARD

Type	Low-profile detached, with 6-foot coiled cable (1.83m)  Two-position tilt (low position meets DIN specification)
Keys	101, including 16 programmable function keys (shiftable to 32), and numeric keypad. N-key rollover with ghost key lockout

#### COMMUNICATIONS

Ports	Two independent EIA RS-232C interfaces
Mode	Asynchronous TTY compatible (block and conversational)
Baud Rates	MODEM: 50, 75, 110, 134.5, 150, 300 600, 1200, 1800, 2000, 2400, 4800, 9600, 19.2K, 38.4K bps  AUX: 110, 134.5, 150, 300, 600, 1200, 1800, 2000, 2400, 3600, 4800, 7200, 9600, 19.2K bps



Bit Length	7 or 8 bits (user selectable)
Stop Bits	1 or 2 (user selectable)
Parity	Odd, even, mark, or none (user selectable)
Handshake Protocols	
MODEM port	XON/XOFF, DTR, both, or none
AUX port	DTR only

## COMPATIBILITY

Native Mode	Wyse WY-100, Lear Siegler ADM-31
Compatible Mode	TeleVideo 910, 920, 925 ADDS Viewpoint Hazeltine 1500

## POWER

Fuse	2a, 250V
Standard	90 to 130 VAC 50/60 Hz $\pm$ 5%
Optional	200 to 240 VAC 50/60 Hz $\pm$ 5%
Power	45 watts
Power Available	With Logic      Without Logic
+5V	500 ma      2000 ma
+12V	100 ma      200 ma
-12V	100 ma      200 ma
-23V	20 ma      40 ma

## LOGIC

CPU	8031, 11 MHz
PUTC	2762
UART	2661



## ENVIRONMENT

Temperature

Operating: 32 to 113 degrees F  
(10 to 40 degrees C)

Storage: -40 to +140 degrees F  
(-40 to +60 degrees C)

Humidity

10% to 90% relative, noncondensing

Altitude

Sea level to 15,000 feet  
(0 to 4,572m)



## APPENDIX C SCHEMATICS

This appendix contains schematic diagrams for the logic and monitor/power supply PCB. Use them to help you troubleshoot the terminal.

Schematic	Location
Keyboard, WY-50 96-013-01, 1 of 1	C-3
Logic Board, WY-50 96-012-01, 0 of 7	C-5
Logic Board, WY-50 96-012-01, 1 of 7	C-7
Logic Board, WY-50 96-012-01, 2 of 7	C-9
Logic Board, WY-50 96-012-01, 3 of 7	C-11
Logic Board, WY-50 96-012-01, 4 of 7	C-13
Logic Board, WY-50 96-012-01, 5 of 7	C-15
Logic Board, WY-50 96-012-01, 6 of 7	C-17
Logic Board, WY-50 96-012-01, 7 of 7	C-19
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. C, 1 of 2	C-21
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. C, 2 of 2	C-23
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. F, 1 of 2	C-25
Logic Board, WY-50 Gate Array Version 96-018-01 Rev. F, 2 of 2	C-27



Logic Board, WY-50 Gate Array II Version 96-058-01, 1 of 2	C-29
Logic Board, WY-50 Gate Array II Version 96-058-01, 2 of 2	C-31
Monitor/Power Supply, WY-50 96-019-01 Rev. E, 1 of 1	C-33
Monitor/Power Supply, WY-50 96-019-01 Rev. F, 1 of 1	C-35
Logic Board, WY-50+ 96-058-05, 1 of 2	C-37
Logic Board, WY-50+ 96-058-05, 2 of 2	C-39
Monitor/Power Supply, WY-50+ 96-019-02, 1 of 1	C-41



## APPENDIX D SERVICING THE WY-50+

### INTRODUCTION TO WY-50+ MAINTENANCE

Servicing the WY-50+ is nearly the same as servicing the WY-50. Major feature differences include the amber screen, additional compatible modes, a bi-directional AUX port, Wyseword standard, and multiple pages of memory (two standard, four optional). New servicing features include an expanded set of field diagnostics, a keyboard function test, a test to check all character sets, and two new built-in test patterns for display alignment.

### TROUBLESHOOTING

Added troubleshooting features include an improved self-test, a new diagnostic self-test, a communication port test, a keyboard function test, an attribute/character font test, and a new display to check all attributes.

**Note**--Running the diagnostic tests described here (other than the power-on self-test) defaults all setup parameters and function keys.

#### Power-On Self-Test

When a user turns the terminal on, it performs a self-test of the logic PCB. If the self-test discovers a failure, an alphanumeric error code indicating failure type will appear in the lower-right corner of the display. An error code usually indicates logic PCB replacement. Table D-1 lists and explains the error codes.

Table D-1 Power-On Self-Test Error Codes

Error Message	Error Type
0	RAM bank 0
1	RAM bank 1
K	Reinitialize EARAM (Press the SETUP key to continue or turn off the terminal, then on again. Replace logic PCB only if error appears repeatedly.)
P	Code ROM checksum
Z	Processor RAM



The self-test checks RAM, EAROM, and the CPU. The RAM test is a read/write test that checks all 8K of RAM, or all 16K if additional memory is installed on the logic PCB. The CPU test checks 128 bytes of RAM in the CPU, the data lines, and the address lines. The EAROM test calculates the EAROM's checksum, and compares it to the checksum bit stored in the ROM.

## FIELD DIAGNOSTICS

The WY-50+ contains four new field diagnostics:

- o The System Diagnostic Test, an expanded version of the diagnostic self-test on page 3-2 of the WY-50 Maintenance Manual.
- o A Transmit/Receive Test for the communications ports.
- o A Keyboard Function Test.
- o An Attribute/Character Font Test

The following sections describe the diagnostic procedures, the new error codes, and the new test connectors and cables.

### System Diagnostic Test

This test is an expanded version of the power-on self-test. It checks memory, buffers, the CPU, and communications.

Follow these steps to perform the system diagnostic test:

1. Turn off the terminal.
2. Install the system diagnostic test connectors on the AUX and MODEM ports (see page D-4 for connector definitions).
3. Turn on the terminal.
4. Hold down the SHIFT key, then press the SETUP key.
5. Press the cursor DOWN key until the TEST parameter appears on the bottom line of the screen.
6. Press the cursor LEFT key once. The cursor highlights the TEST field.
7. Press the spacebar. This toggles the test field on.
8. Leave setup mode by holding down the SHIFT key and pressing the SETUP key again.
9. Save the selection by pressing the Y key. This starts the diagnostic self-test.



If the system diagnostic test doesn't find any errors, a flashing pattern should appear on the screen.

If it does find an error, the screen will blank and an error code will appear in the lower-right corner of the display. Replace the logic PCB.

Table D-2 lists and describes the system diagnostic test error codes.

**Table D-2 System Diagnostic Test Error Codes**

Error Message	Error Type
0	Buffer RAM, IC 0
1	Buffer RAM, IC 1 (if memory is expanded)
9	EAROM
R	Row Buffer
K	No initialization on power-up
A	Modem, RTS to CTS
C	Modem, DTR to DCD
E	AUX Ready to AUX RTS
P	Control PROM
Z	8031 processor
X	MODEM port loopback
Y	AUX port loopback

**Caution--**If you save the ON test parameter, turn off the power, and remove the test connectors, an error condition will result the next time someone turns on the terminal. Remember to default the terminal before returning it to the user.

Follow these steps to stop the system diagnostic test:

1. Hold down the space bar until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.



**System Diagnostic Test Connector Definitions**--The diagnostic self-test connectors for both the MODEM and the AUX ports are made from 25-pin, male, D-type connectors. (You can find information to order ready-made connector sets under Parts List on page D-10.)

Connect these pins:

**MODEM Port**

**AUX Port**

Pin 2 to Pin 3 (TxD to RxD)

Pin 2 to Pin 3 (TxD to RxD)

Pin 4 to Pin 5 (RTS to CTS)

Pin 6 to Pin 20 (DSR to DTR)

Pin 8 to Pin 20 (DCD to DTR)

**Transmit/Receive Communication Port Test**

This test transmits data between the MODEM and AUX ports. If either port doesn't receive or recognize the data from the other port, an error code will appear on the screen.

Follow these steps to perform the test:

1. Turn off the terminal.
2. Install the communication port test cable on the AUX and MODEM ports (see page D-5 for a cable definition).
3. Turn on the terminal.
4. Hold down the SHIFT key, then press the SETUP key.
5. Press the cursor DOWN key until the TEST parameter appears on the bottom line of the screen.
6. Press the cursor LEFT key once. The cursor highlights the TEST field.
7. Press the spacebar. This toggles the test field on.
8. Leave setup by holding down the SHIFT key and pressing the SETUP key again.
9. Save the selection by pressing the Y key. This starts the communications port test.

If the communication port test doesn't find any errors, a flashing test pattern should appear on the screen.

If the communication port test does find an error, the screen will blank and an error code will appear in the lower-right corner of the display. Replace the logic PCB. Table D-3 lists and describes the error codes.



**Table D-3 Transmit/Receive Communication Port Test Error Codes**

Error Message	Error Type
W	Xmit/Rcv error, MODEM to AUX
Z	Xmit/Rcv error, AUX to MODEM

**Note--**Error messages listed on other tables may appear when this test runs, but most errors will be those listed above.

**Caution--**If you save the ON test parameter, turn off the power, and remove the test connectors, an error condition will result the next time someone turns on the terminal. Remember to default the terminal before returning it to the user.

Follow these steps to stop the test:

1. Hold down the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test cable. Default the terminal.

**Transmit/Receive Communication Port Test Cable Definitions--**The transmit/receive communication port test cable requires two 25-pin, male, D-type connectors, and wire to connect pins on each connector and to connect the two connectors together. (You can find information to order ready-made cables under Parts List on page D-10.)

Connect these pins:

MODEM Port (DTE)		AUX Port (DCE)
Pin 2 (TxD)	to	Pin 2 (RxD)
Pin 3 (RxD)	to	Pin 3 (TxD)
Pins 4 to 5		Pins 6 to 20
Pins 8 to 20		

### Keyboard Function Test

The keyboard function test checks the keyboard.

**Note--**The keyboard function test does not test the following keys: SHIFT, FUNCT, CAPS LOCK, SETUP, BREAK, or CTRL. If you press ENTER, the terminal will return to the system diagnostic test. Pressing function keys F1 through F16 will change attributes on portions of the test screen.



Follow these instructions to perform the keyboard test:

1. Start the system diagnostic test described on page D-2.
2. Hold down the space bar until the test pattern stops flashing.
3. Hold down the CTRL key, then press the A key until you see the screen in Figure D-1.
4. Find the bottom line of "m"s. Press the letter keys that you are testing, and watch the letters change in the middle of the bottom line.


If the letter keys in question don't work, replace the keyboard PCB.

If the letters do change during the test, but fail to respond during normal operation, check the logic PCB or the computer.

Follow these steps to stop the test:

1. Press the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.

**Figure D-1 Keyboard Function Test Pattern**

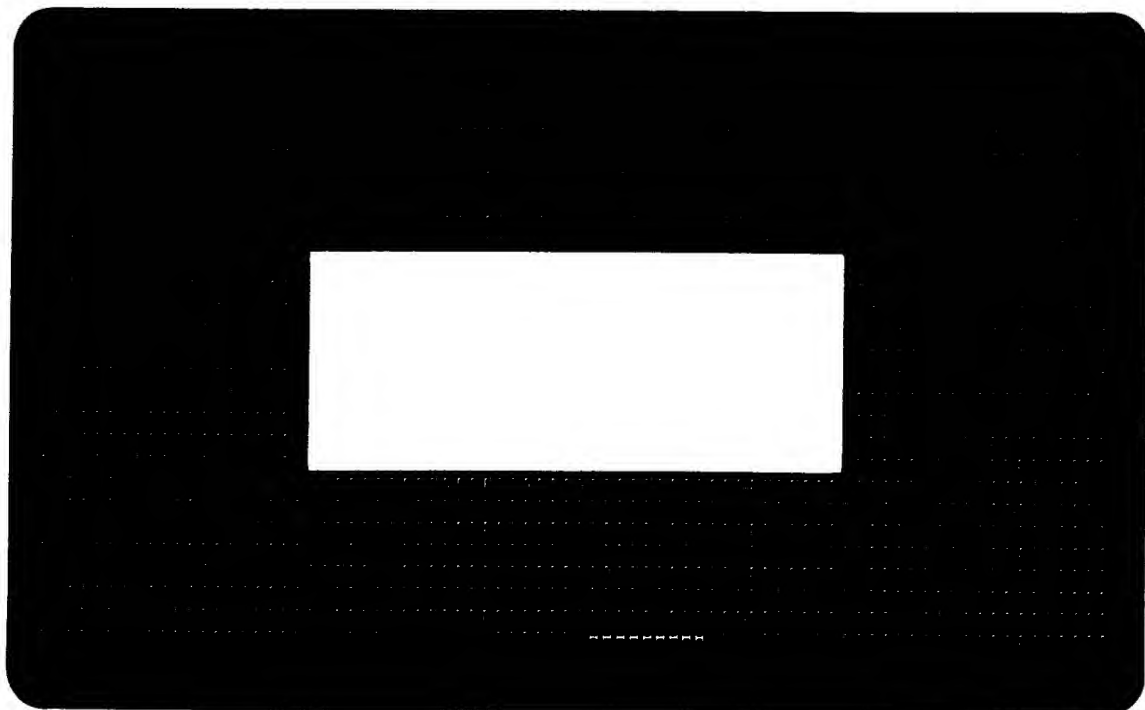



## Attribute/Character Font Test

This test allows you to check all the attributes and the character font.

Follow these steps to perform the test:


1. Start the system diagnostic test described on page D-2.
2. Hold the SETUP key down until the test pattern stops flashing.
3. Hold the CTRL key down, then press the A key until you see the screen in Figure D-2.
4. Look for the following features:

Attributes: Normal, Blank, Blink, Underline, Dim, and Reverse

A full character set

If one or more of the features doesn't appear, replace the logic PCB.

Figure D-2 Attribute/Character Font Test Pattern

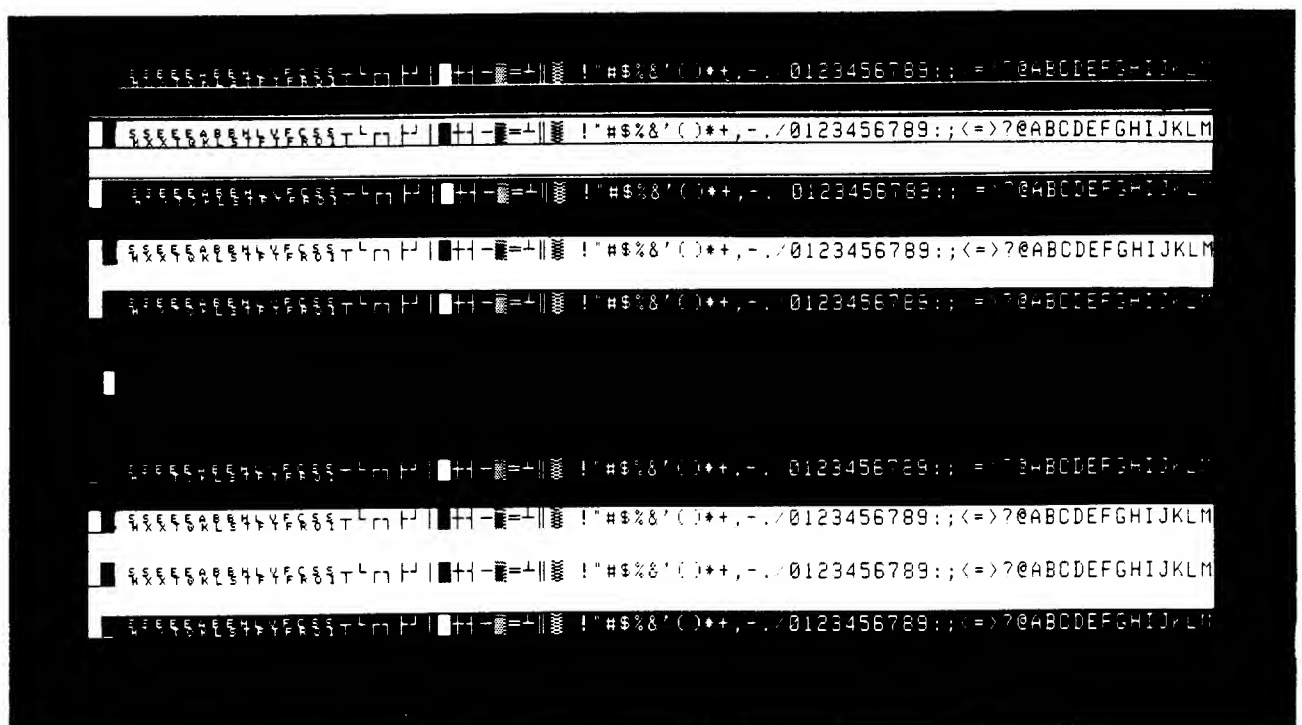



Follow these steps to stop the test:

1. Press the SETUP key until the flashing pattern stops.
2. Turn the terminal off.
3. Remove the test connectors. Default the terminal.


### **ALIGNMENT AND ADJUSTMENT**

This terminal has two new test patterns, which you can call to align the display more accurately and quickly: Pattern M and Pattern O.

#### **Pattern M**

Pattern M helps you detect and correct linearity, brightness, and focus (see Figure D-3). This pattern is an 80-column display of characters. Two blocks in the center of the pattern indicate brightness: dim and normal.

**Figure D-3 Pattern M**

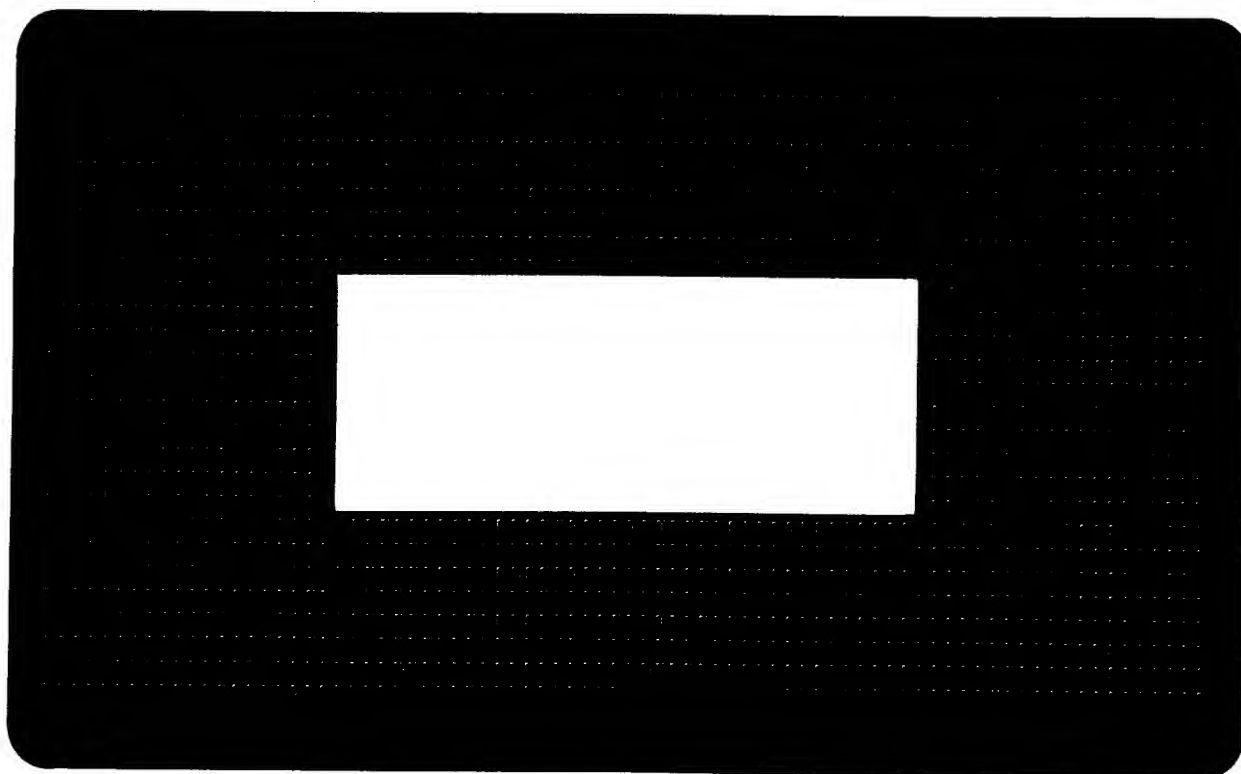



## Pattern 0

Pattern 0 helps you detect and correct pincushion, tilt, centering, and size problems (see Figure D-4). This pattern is a full-reverse, normal brightness display in 80-column format. Two pairs of parallel lines cross in the center, making four quadrants. Two additional vertical lines, one on either side of the pattern, indicate brightness intensity levels.

**Note**--You can verify the display tolerances using a display reticle, available from WYSE, Part No. 09-001-03. Instructions to use the reticle are included with it.

Figure D-4 Pattern 0

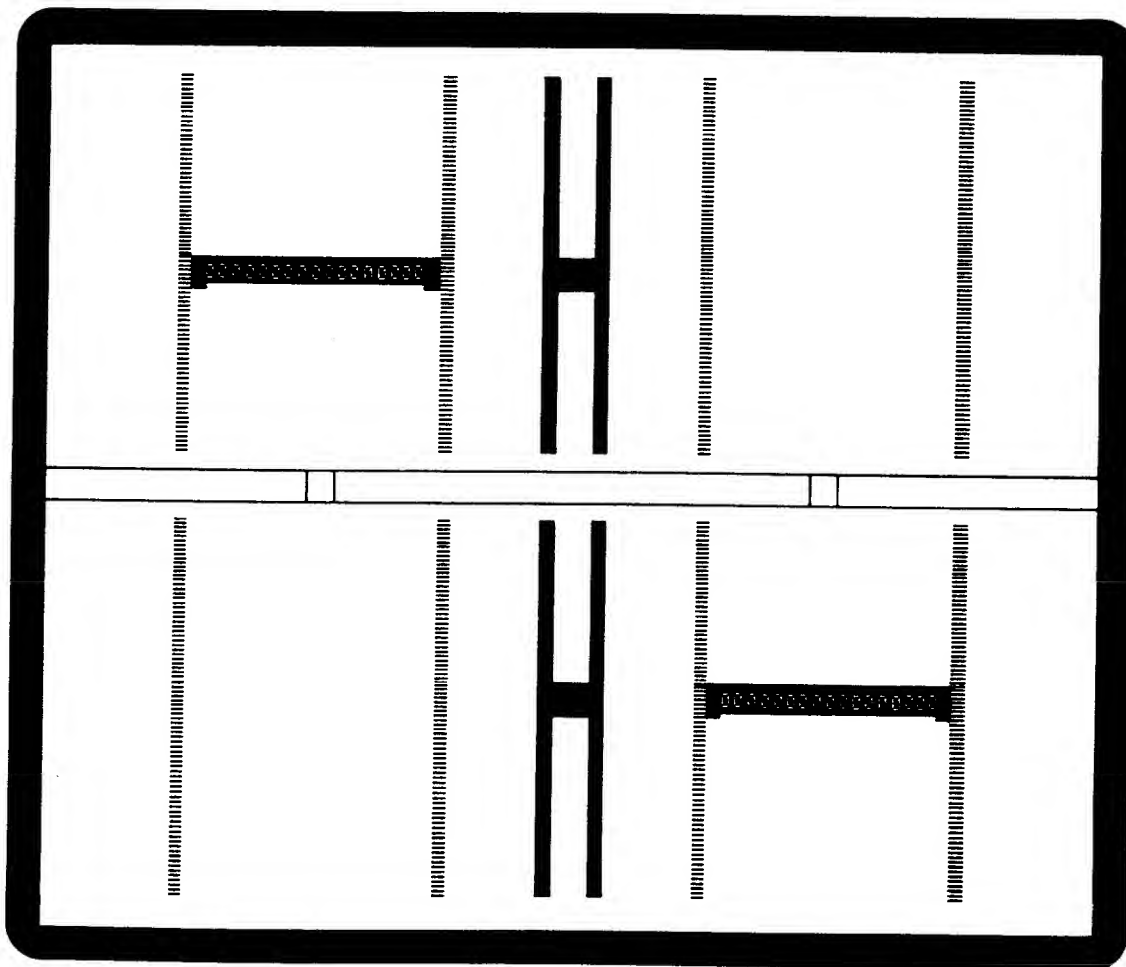


Table D-4 lists adjustments, display problems, and the pattern that is best suited to make the adjustment.



**Table D-4 Test Pattern Problems and Adjustments**

<b>Test Pattern</b>	<b>Display Problems</b>	<b>Adjustments</b>
M	Letters at the top of the display aren't the same height as those at the bottom of the display	Linearity
M	Fuzzy letters	Focus
M	Too bright; too dim; raster scan lines show	Brightness
O	Too short or too tall	Height
O	Too wide or too narrow	Width
O	Not centered	Centering
O	Not level	Yoke Lock
O	Pincushioning, barreling, crooked edges, corners sag or move out of tolerance	Display magnets

#### **PARTS LIST**

The WY-50+ contains three new assemblies that differ from the standard WY-50 terminal: the Logic PCB, the Monitor/Power Supply PCB, and the Amber CRT. The terminal also comes with test connectors and cables. You can order all other replaceable units with the spare part numbers assigned to the WY-50.

<b>Part Number</b>	<b>Description</b>
840293-01	WY-50+ Logic PCB
99-019-02	WY-50+ Monitor/Power PCB
780026-01	WY-50+ Amber CRT
94-0233-01	WY-50+ System Diagnostic Test Connector Set
94-0238-01	WY-50+ Transmit/Receive Comm Port Test Cable
09-001-03	WY-50+ Display Reticule

#### **SCHEMATICS**

See Appendix C, "Schematics," to find schematic diagrams of the WY-50+ Logic PCB and Monitor/Power Supply PCB.



## INDEX

### A

- Address Decoder, 6-5
- Adjustment
  - display, 4-4, D-8, D-10
  - display magnets, 4-8, D-10
  - focus, 4-5, D-8
  - height, 4-5, D-10
  - linearity, 4-5, D-8
  - sub-brightness, 4-8
  - width, 4-6, D-10,
  - yoke lock, 4-6, D-10
- Alignment
  - display, 4-4, D-8, D-10
- Altitude
  - operational range, A-3
- Attribute Bit Assignments, 6-19
- Attribute/Character Font Test, D-6
- Attribute Controller, 6-19
- Attribute Decoding Logic, 6-6
- Attribute Latches, 6-7
- Attributes
  - video, A-1
- Auxiliary Port, 6-16
  - handshake, A-3
- Auxiliary
  - baud rate, A-2

### B

- Bandwidth
  - video, A-1
- Baud Rate
  - auxiliary port, A-2
  - MODEM port, A-2
- Bidirectional Bus Driver, 6-6
- Bit Assignments
  - attribute, 6-19
- Bit Length
  - MODEM port, A-2
- Blanking
  - horizontal, 6-1
  - vertical, 6-1

### C

- Cathode Ray Tube, 6-1
- Character, 6-7
  - set, A-1
- Character Cell, 6-19
- Character Generator, 6-7



Character Matrix, 6-1, A-1  
Circuits  
    row decoder/key closure detection, 6-14  
    video clock, 6-17  
Column Decoder, 6-14  
Command Latch, 6-7  
Communications Mode, A-2  
Compatible Terminal Mode, A-3  
Component Diagram  
    monitor/power supply, 4-1  
Component Identification  
    x-y axis, 6-2  
Connections for  
    TCOM Test Plug, 3-2  
Control  
    attribute, 6-18  
Controller  
    CRT, 6-5  
    programmable video, 6-18  
    video, 6-17  
Converters  
    DC to AC, 6-9  
    level (EAROM), 6-7  
    level (EIA to TTL), 6-8  
    level (TTL to EIA), 6-8  
    parallel to serial, 6-7  
CPU Clock Generator, 6-8  
CRT, 1-4, 6-1, 6-11  
CRT Controller, 6-5  
Cursor  
    type, A-2

D  
DC to AC Converter, 6-9  
Decoder  
    address, 6-5  
    column, 6-14  
Diagnostic Self-Test, 3-2, D-1  
Disable, 6-1  
Display  
    color, A-1  
    capacity, 1-6  
    margins, size of, 4-3  
    measurement, tools required, 4-3  
    RAM, 6-5  
    specification, 4-3  
    WY-50+, A-1, D-1  
Display Alignment, 4-4, D-8, D-10  
    tools required, 4-4  
Display Magnets  
    adjustment, 4-8, D-10  
    screen areas affected by, 4-9  
Domestic Power Requirements, 2-8  
Dot Stretcher, 6-7



Doubler  
voltage, 6-8

Driver  
bidirectional bus, 6-6  
line, 6-14  
video, 6-7, 6-11

## E

Environmental Considerations  
air flow, 1-7  
temperature, 1-7

Error Messages  
power-on self-test, 3-1, D-1  
system diagnostic test, D-3  
transmit/receive communication port test D-5

## F

Field, 6-1  
Flyback Transformer, 6-11  
Focus Adjustment, 4-5  
Frequency  
horizontal, A-1  
Fuse Requirements, 1-8

## G

Generator  
character, 6-7, 6-19  
CPU clock, 6-8  
TCOM clock, 6-8  
video clock, 6-7

## H

Handshake  
AUX port, A-3  
MODEM port, A-2  
Height Adjustment, 4-5, D-10  
Horizontal Blanking, 6-1  
Horizontal Frequency, A-1  
Horizontal Oscillator, 6-11  
Horizontal-Synchronization Signal  
how to check, 3-3  
Humidity  
operational range, A-3

## I

Installation, 1-7  
communications cable, 1-8  
fuse, 1-8  
keyboard, 1-8  
power cord, 1-8  
printer, 1-8



## Interface

- asynchronous, 1-6
- cables, A-2
- communication, 6-16
- keyboard, 6-17
- modem, 1-6
- primary, 1-6
- RS-232C, 1-6

International Power Requirements, 2-8

## K

- Key Closure Detection, 6-14
- Key Switch Matrix, 6-14
- Keyboard, 1-4
  - specifications, A-1, A-2
- Keyboard Codes
  - language, A-1
- Keyboard Function Test, D-5
- Keyboard Latch, 6-6

## L

Language Keyboard Codes, A-1

### Latch

- attribute, 6-7
- character generator address, 6-7
- command, 6-7
- keyboard, 6-6
- low buffer, 6-6
- low order address, 6-6
- memory bus control, 6-6
- row address, 6-6
- row buffer data latch, 6-6
- row buffer diagnostic, 6-6
- Level Converters (EAROM), 6-7
- Level Converters (EIA to TTL), 6-8
- Level Converters (TTL TO EIA), 6-8
- Line Drivers, 6-14
- Linearity Adjustment, 4-5
- Logic
  - attribute decoding, 6-6
- Logic Specifications, A-3
- Low Buffer Latch, 6-6
- Low Order Address Latch, 6-6

## M

- Main Switching Power Transformer, 6-9
- Major Replaceable Units
  - WY-50/WY-50+, 2-1
- Materials Needed
  - WY-50/WY-50+ removal and replacement, 2-3
- Matrix
  - character, 6-1
  - key switch, 6-14



## Memory

- display, 6-16
- nonvolatile, 6-7, 6-17
- screen, A-2

Memory Bus Control, 6-19

Memory Bus Control Latch, 6-6

## Microprocessor

- single component, 6-5

## Mode

- communications, A-2
- compatible terminal, A-3
- native, A-3

MODEM Port, 6-16

- baud rate, A-2
- bit length, A-2
- handshake, A-2
- parity bit, A-2
- stop bit, A-2

## Multiplexer

- pass-thru, 6-8
- RAM address, 6-5

## N

Native Mode, A-3

Net Weight, A-1

Nonvolatile Memory, 6-7

## O

### Operator Controls

- brightness, 1-8
- power, 1-8
- setup parameters, 1-9

### Orientation

- WY-50/WY-50+, 2-1

### Oscillator

- horizontal, 6-11
- vertical, 6-11

## P

Parallel-to-Serial Converter, 6-7

### Parity Bit

- MODEM port, A-2

Pass-Thru Multiplexer, 6-8

### in Assignments

- 8031, 6-14

### Port

- AUX, 6-16
- MODEM, 6-16

Power, A-3

### Power Requirements

- how to change, 2-8

### Power Supply

- how to adjust, 4-1
- adjustment, tools required, 4-2
- voltages, 6-8



Power Supply Quick-Reference Procedure, 3-3  
Power-On Self-Test Error Messages, 3-1, D-1  
Problems and Adjustments, 4-4, D-10  
PROM, 6-5  
Protected Characters, 6-19

## R

### RAM

- display, 6-5
- row buffer, 6-6

RAM Address Multiplexer, 6-5

Register

- row buffer diagnostic, 6-20
- video shift, 6-20

Reverse Video Functions, 6-19

Row Address Latches, 6-6

Row Buffer Data Latch, 6-6

Row Buffer Diagnostic Latch, 6-6

Row Buffer RAM, 6-6

Row Decoder/Key Closure Detection Circuit, 6-14

Row Decoding, 6-14

## S

Scan Lines, 6-1

- total, A-2
- total active, A-2

Schematics, C-1

Screen

- format, A-1
- memory, A-2
- size, A-1

Self-Test

- diagnostic, 3-2
- power-on, 3-1

Setup Mode, 1-8, 1-9

Single Component Microprocessor, 6-5

Specifications, A-1

- display, 4-3
- display margins, 4-3

Stop Bit

- MODEM port, A-2

Sub-Brightness Adjustment, 4-8

Supply

- +12 volt, 6-11
- +24 volt, 6-11
- +5 volt, 6-11
- 12 volt, 6-11
- 23 volt, 6-11

Swivel, A-1

System Diagnostic Test, D-2

System Firmware, 1-3



## T

TCOM Clock Generator, 6-8

TCOM Test Plug, 3-2

Telecommunications Interfaces, 1-4

Temperature

operational range, A-3

Terminal

clearances, 1-6

compatible mode, A-3

placement of, 1-6

specifications, A-1

Test Pattern

alignment, 4-3, D-8, D-10

attribute/character font, D-7

Pattern M, D-8

Pattern O, D-9

problems and adjustments, 4-4, D-10

Tilt, A-1, D-9

Tools Needed

WY-50/WY-50+ removal and replacement, 2-3, 2-4

Tools Required for Display Alignment, 4-4

Tools Required for Display Measurement, 4-3

Tools Required for the Power Supply Quick Reference Check, 3-8, 4-2

Tools Required to Check Horizontal Synchronization, 3-9

Transformer

flyback, 6-11

main switching power, 6-9

Transmit/Receive Communications Port Test, D-4

Troubleshooting Flowchart, 3-3

how to use, 3-3

WY-50+, D-1

## U

UART, 6-5

## V

Vertical Blanking, 6-1

Vertical Hold

early terminals, 3-9

how to adjust, 3-9

Vertical Oscillator, 6-11

Video

attributes, A-1

Video Bandwidth, A-1

Video Clock Generator, 6-7

Video Drivers and Dot Stretcher, 6-7, 6-11

Voltages

specifications, A-3

power supply, 6-8

+12 volt supply, 6-11

+24.5 volt supply, 6-11

+5 volt supply, 6-11

-12 volt supply, 6-11

-23 volt supply, 6-11



Voltage Doubler, 6-8  
VR201, 4-2

W

Width Adjustment, 4-6

WY-50+

Attribute/Character Font Test, D-7  
test pattern, D-7

Characteristics, D-1

Display (amber), A-1, D-1

alignment and adjustment, D-8

Keyboard Function Test, D-5

Part Numbers, D-10

Power-On Self-Test, D-1

error messages, D-1

Schematics, C-31, C-33, C-35, D-10

System Diagnostic Test, D-1

error messages, D-3

connector definitions, D-4

Test Patterns

attribute/character font, D-7

Pattern M, D-6, D-8

Pattern O, D-9

problems and adjustments, D-10

Transmit/Receive Communication Port Test, D-4

error messages, D-5

cable definitions, D-5

Troubleshooting, D-1


Y

Yoke Lock Adjustment, 4-6, D-10





HSYNC  
(SHT 1)

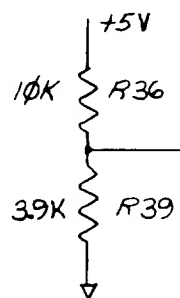

HSYNC IM  
(Si


NEXT ASSY	
APPLICATION	



DWG. NO.

SH

HSYNC  
(SHT 1)

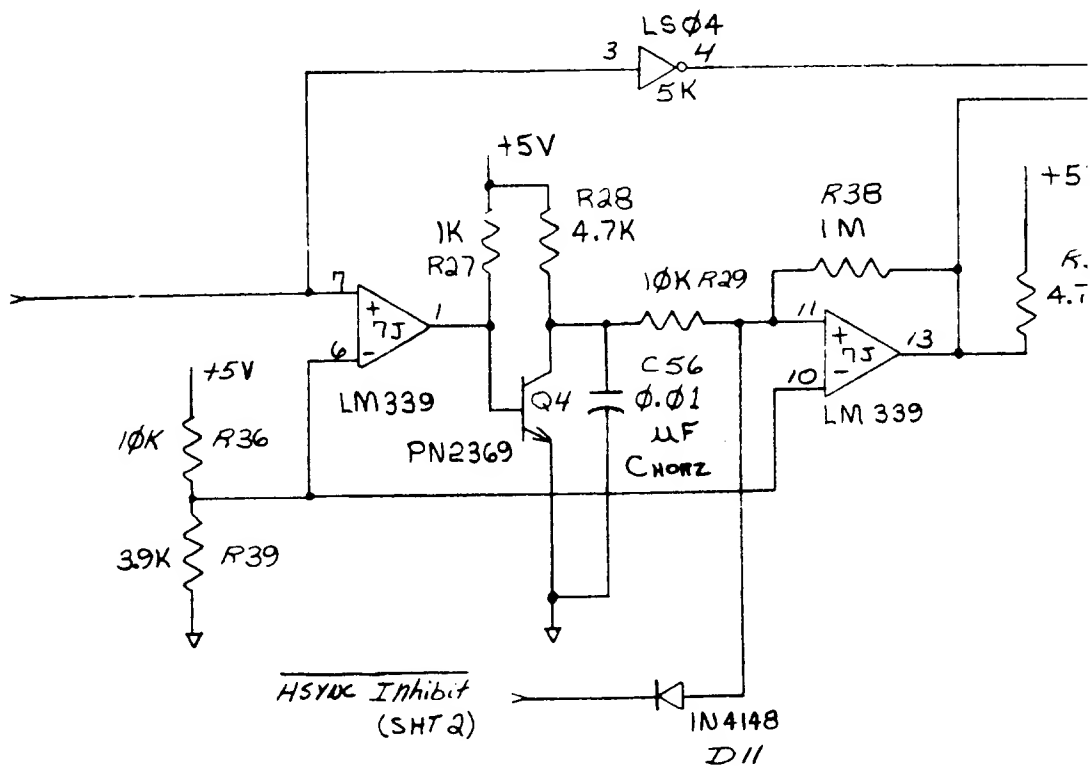

HSYNC Inhibit  
(SHT 2)

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:			CONTRACT NO.
FRACTIONS ±	DECIMALS .XX ± .XXX ±	ANGLES ±	APPROVALS
MATERIAL			DRAWN
FINISH			CHECKED
NEXT ASSY			ISSUED
USED ON			
APPLICATION			DO NOT SCALE DRAWING



DWG. NO.

SH

REV.


## REVISIONS

REV.

DESCRIPTION

DATE

APPROVED

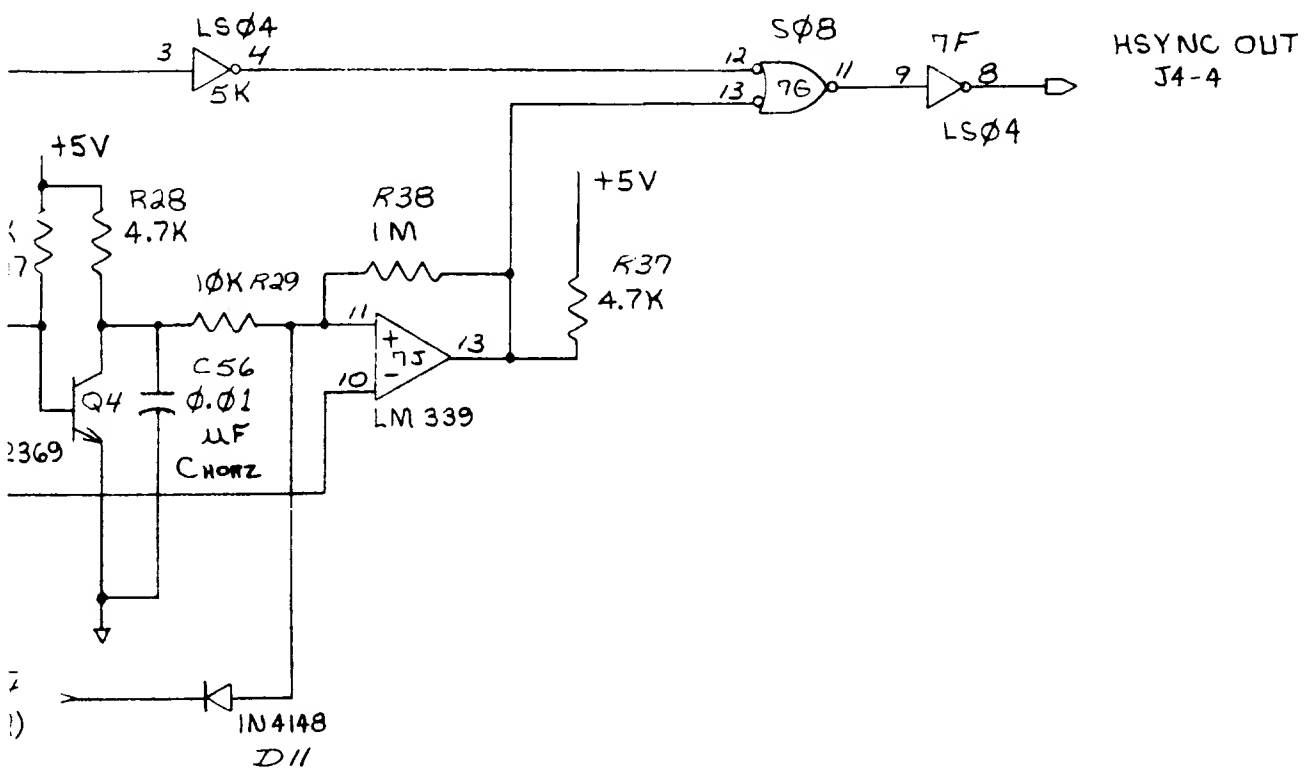

HSYNC STRETCHER


QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
PARTS LIST				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES ± .XX ± ±			CONTRACT NO.	
MATERIAL			APPROVALS DATE	
FINISH			CHECKED	
DO NOT SCALE DRAWING			ISSUED	
SCALE			SHEET 6 of 7	
SIZE B			FSCM NO.	
DWG. NO. 96-012-01			REV. D3	




(SHT 1)

ROW DATA 7

" " 6  
" " 5  
" " 4  
" " 3  
" " 2  
" " 1  
" " 0

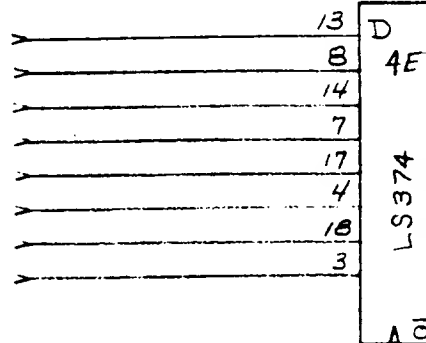

 
$\overline{CCLK}$  (SHT 1)  
 $\overline{MBC}$  (SHT 1)



$\overline{RBO}$   
(SHT 2)

NEXT ASSY	
APPLICATION	



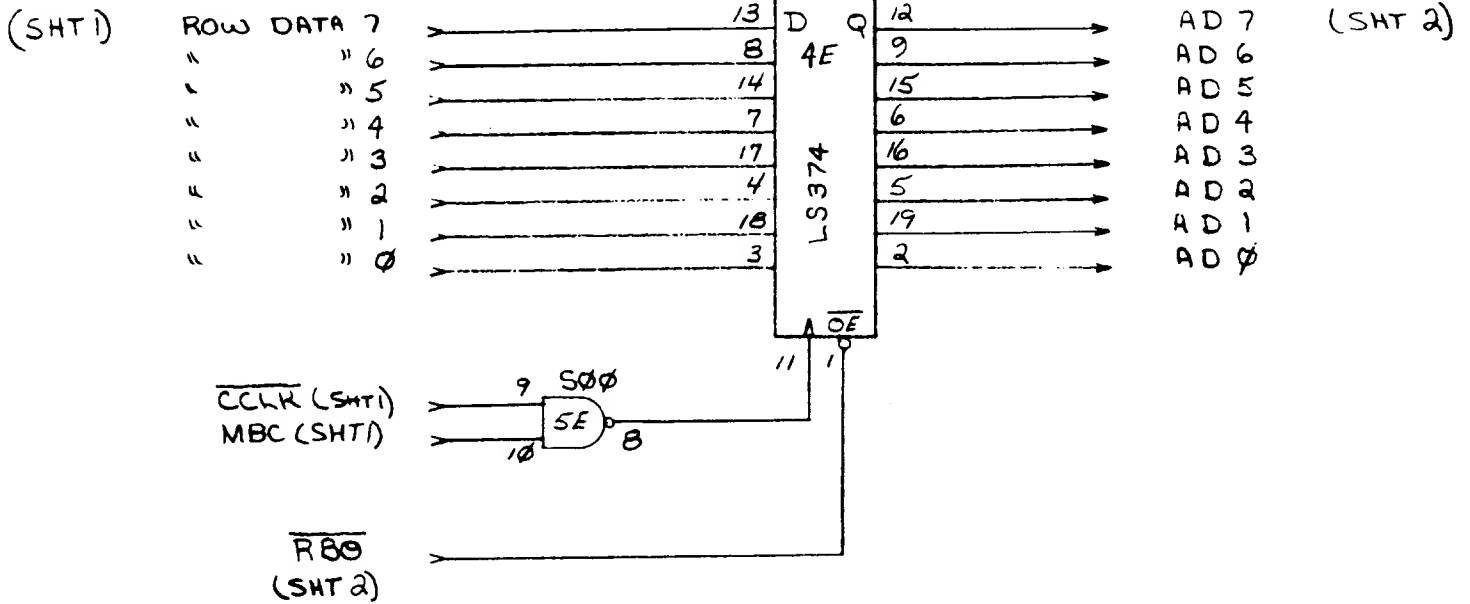

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:			CONTRACT NO.
FRACTIONS ±	DECIMALS .XX ± .XXX ±	ANGLES ±	APPROVALS
MATERIAL			DRAWN
FINISH			CHECKED
NEXT ASSY			ISSUED
USED ON			
APPLICATION			DO NOT SCALE DRAWING





DWG. NO.	SH	REV.
----------	----	------

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

- 12

9

15

6

16

5

19

2
- →

→

→

→

→

→

→
- AD 7

AD 6

AD 5

AD 4

AD 3

AD 2

AD 1

AD Ø
- (SHT 2)


ROW BUFFER DIAGNOSTIC REGISTER.




QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION		MATERIAL SPECIFICATION
PARTS LIST					
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS    DECIMALS    ANGLES ±                .XX ±                °			CONTRACT NO.		<div><div>WYSE TECHNOLOGY</div><div>LOGIC BOARD, WY50</div></div>
			APPROVALS	DATE	
MATERIAL			DRAWN		
FINISH			CHECKED		
			ISSUED		
DO NOT SCALE DRAWING			SIZE	FSCM NO.	DWG. NO.
			B		96-012-01
			SCALE		REV. D3
				SHEET	7 of 7






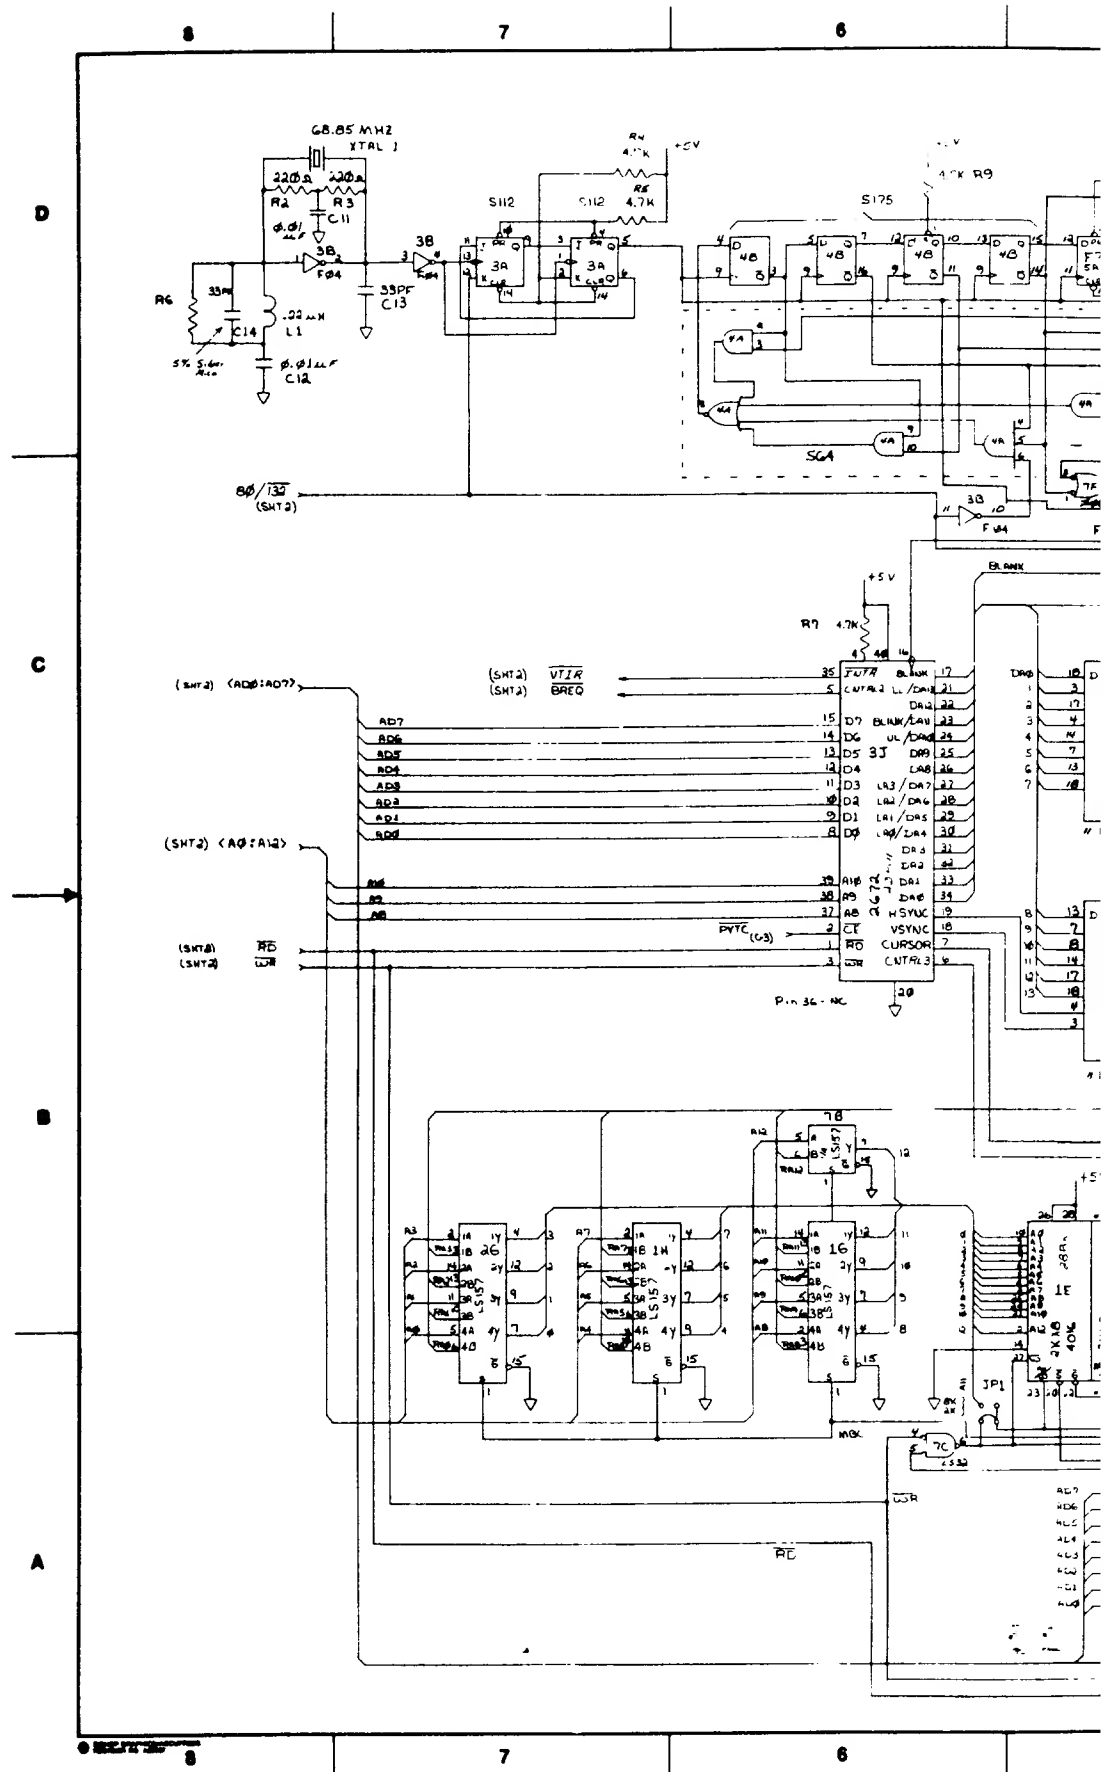



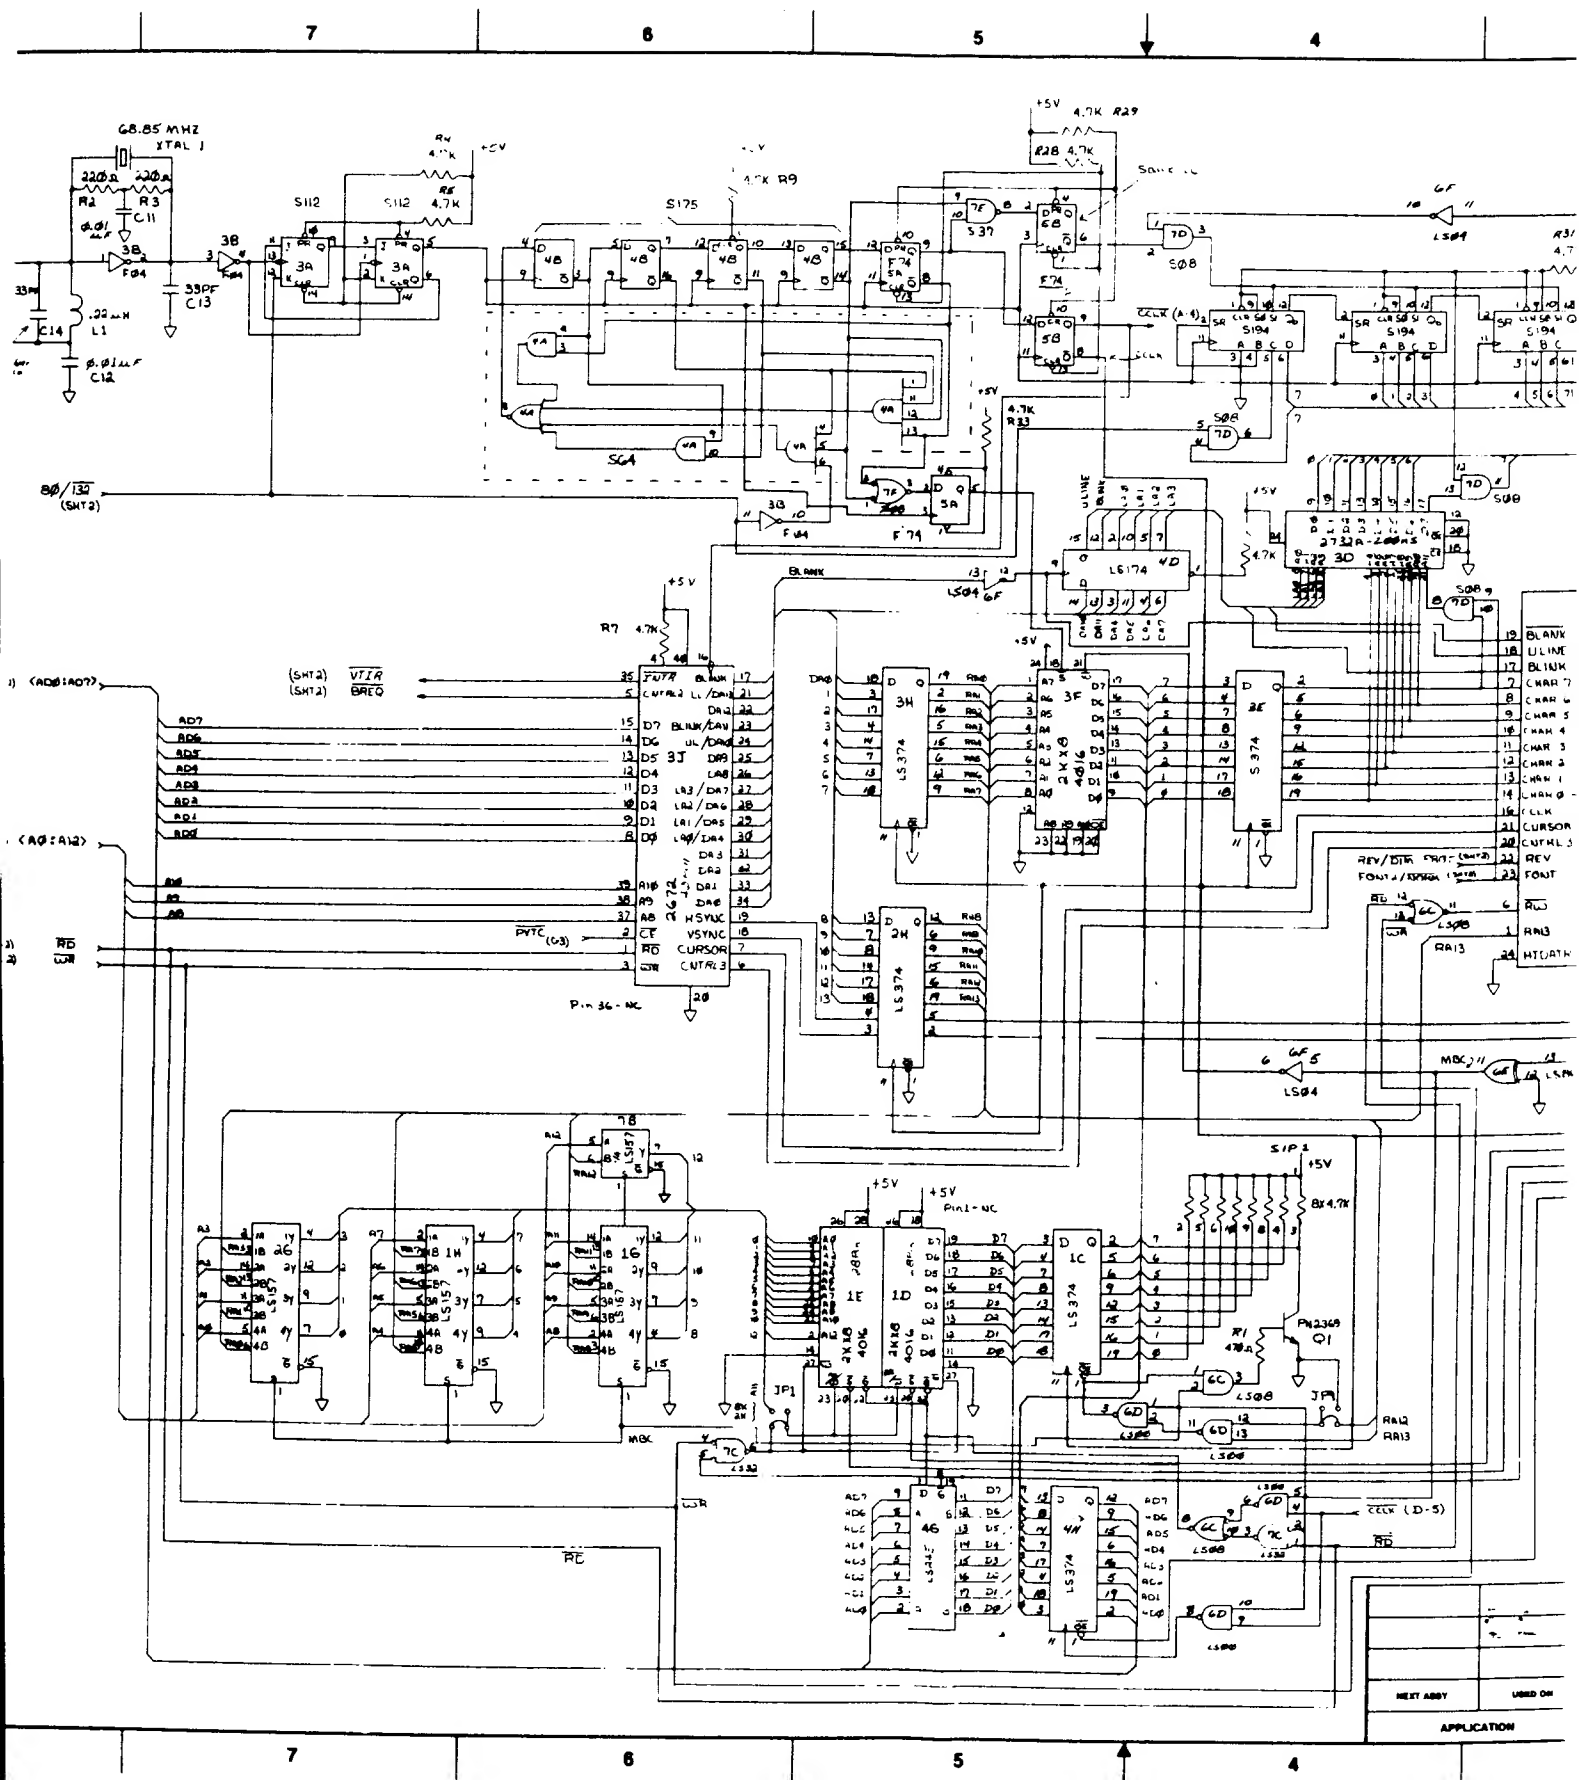




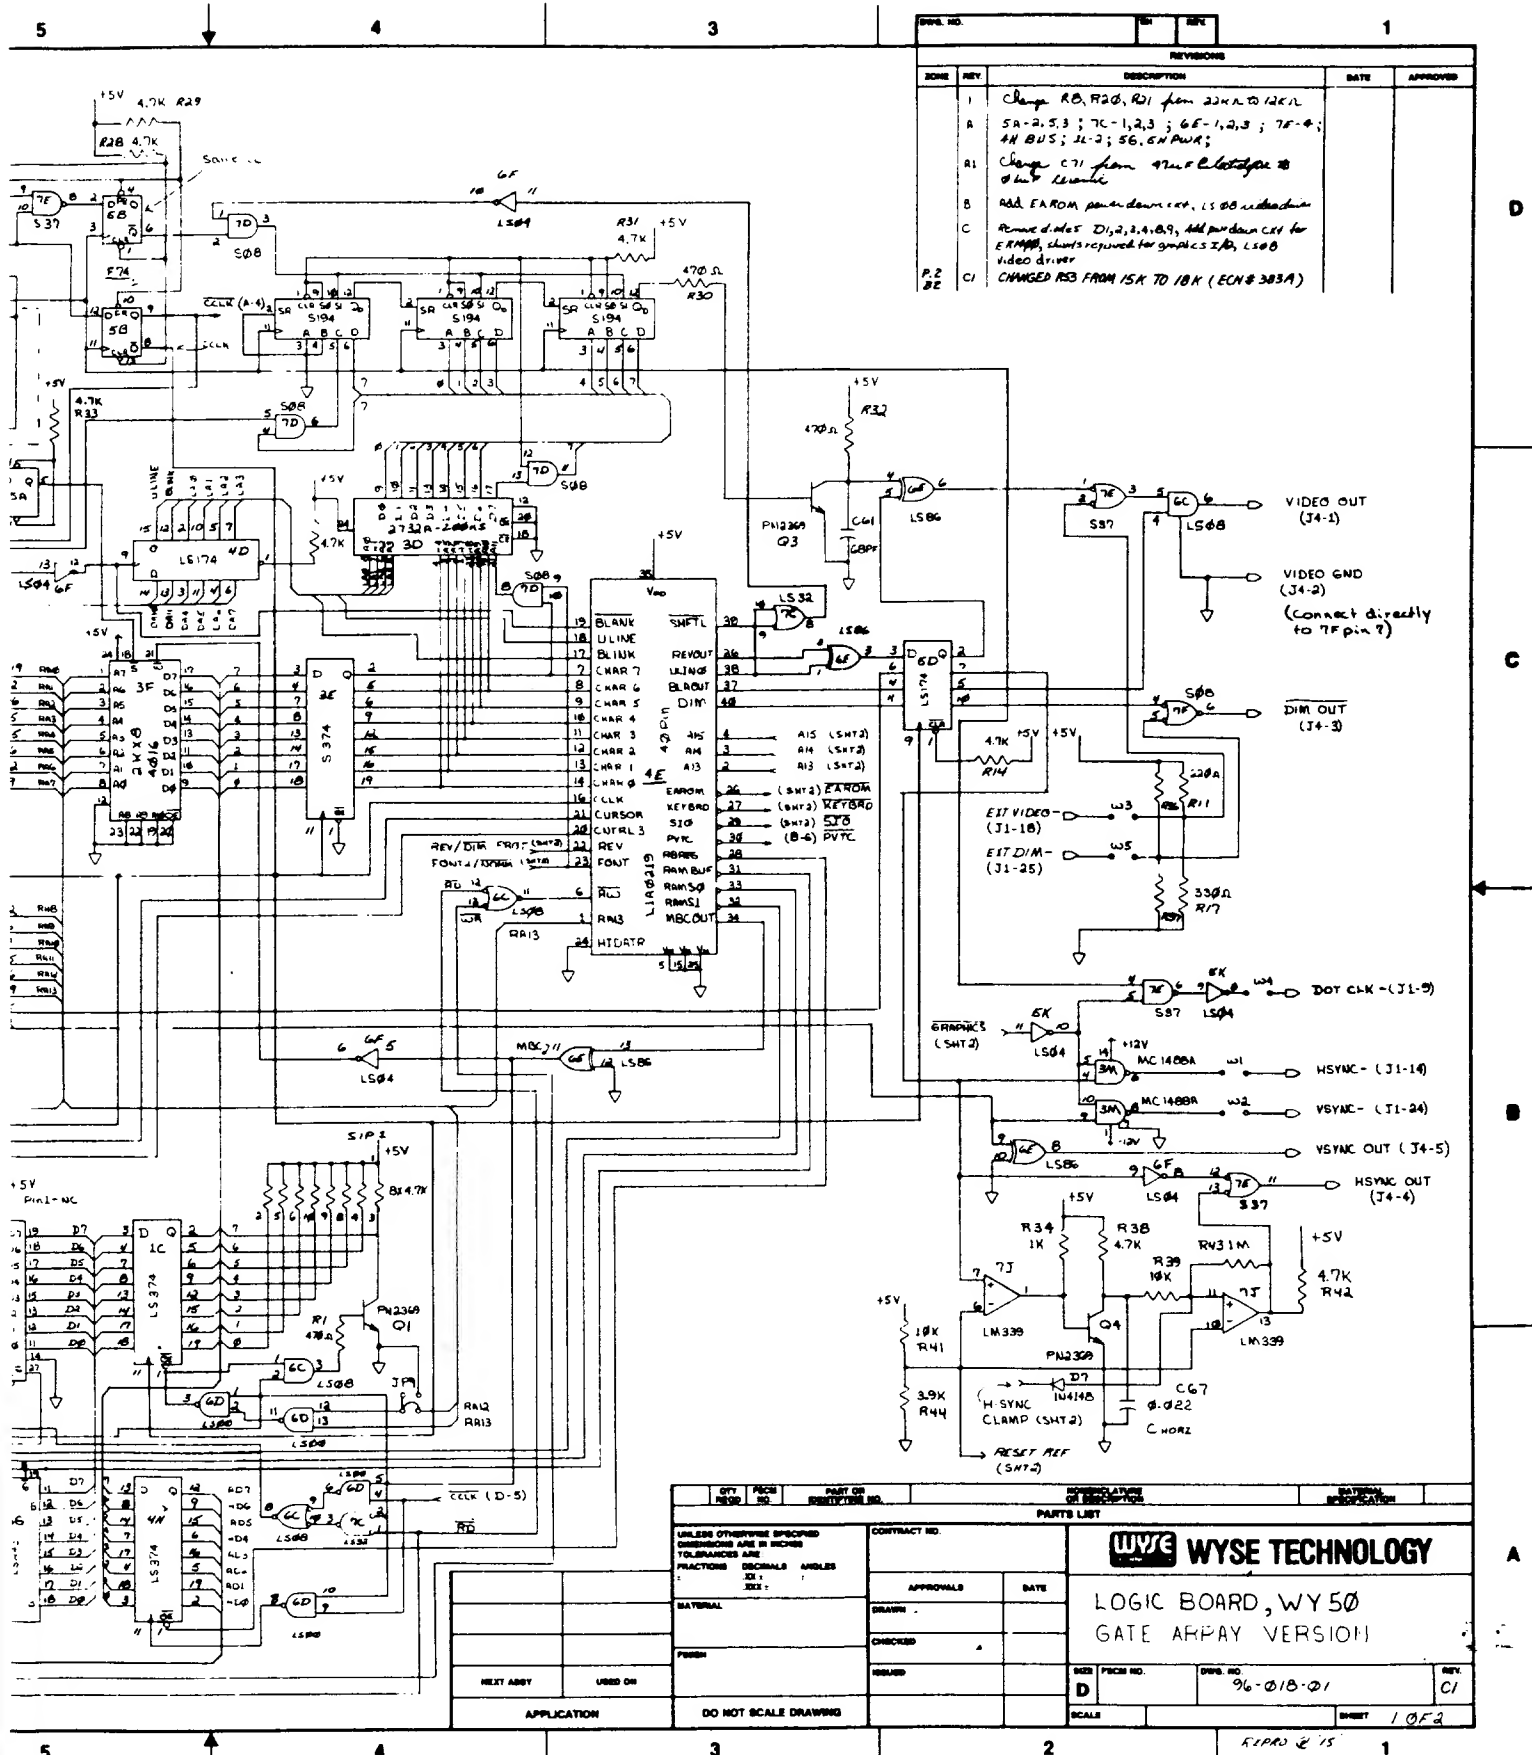


REV. NO.		REV.	DESCRIPTION	DATE	APPROVED
P.2 DE	1		Change R0, R20, R21 from 22K to 10K		
	A		SA-2.5.3; 7C-1.2.3; 6F-1.2.3; 7F-4; 4H BUS; 1L-2; 5G, 6H PWR;		
	A1		Change C71 from 100K to 10K		
	B		ADD EAPROM power down drv. LS00 microchain		
	C		Remove diodes D12, 2, 4, 8, 9, Add power down drv for EAPROM, chips required for graphics I/O, LS00 video driver		
	C1		CHANGED R53 FROM 15K TO 10K (ECH# 303A)		

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES FRACTIONS DECIMALS ANGLES 25.4 100.0 90.0		CONTRACT NO.		WYSE TECHNOLOGY	
APPROVALS		DATE		LOGIC BOARD, WY50 GATE ARRAY VERSION	
DRAWN		CHECKED		REV. NO. 06-018-01	
REUSED		SCALE		REV. C1	
APPLICATION		DO NOT SCALE DRAWING		SHEET 1 OF 2	

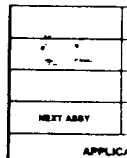


R  
B



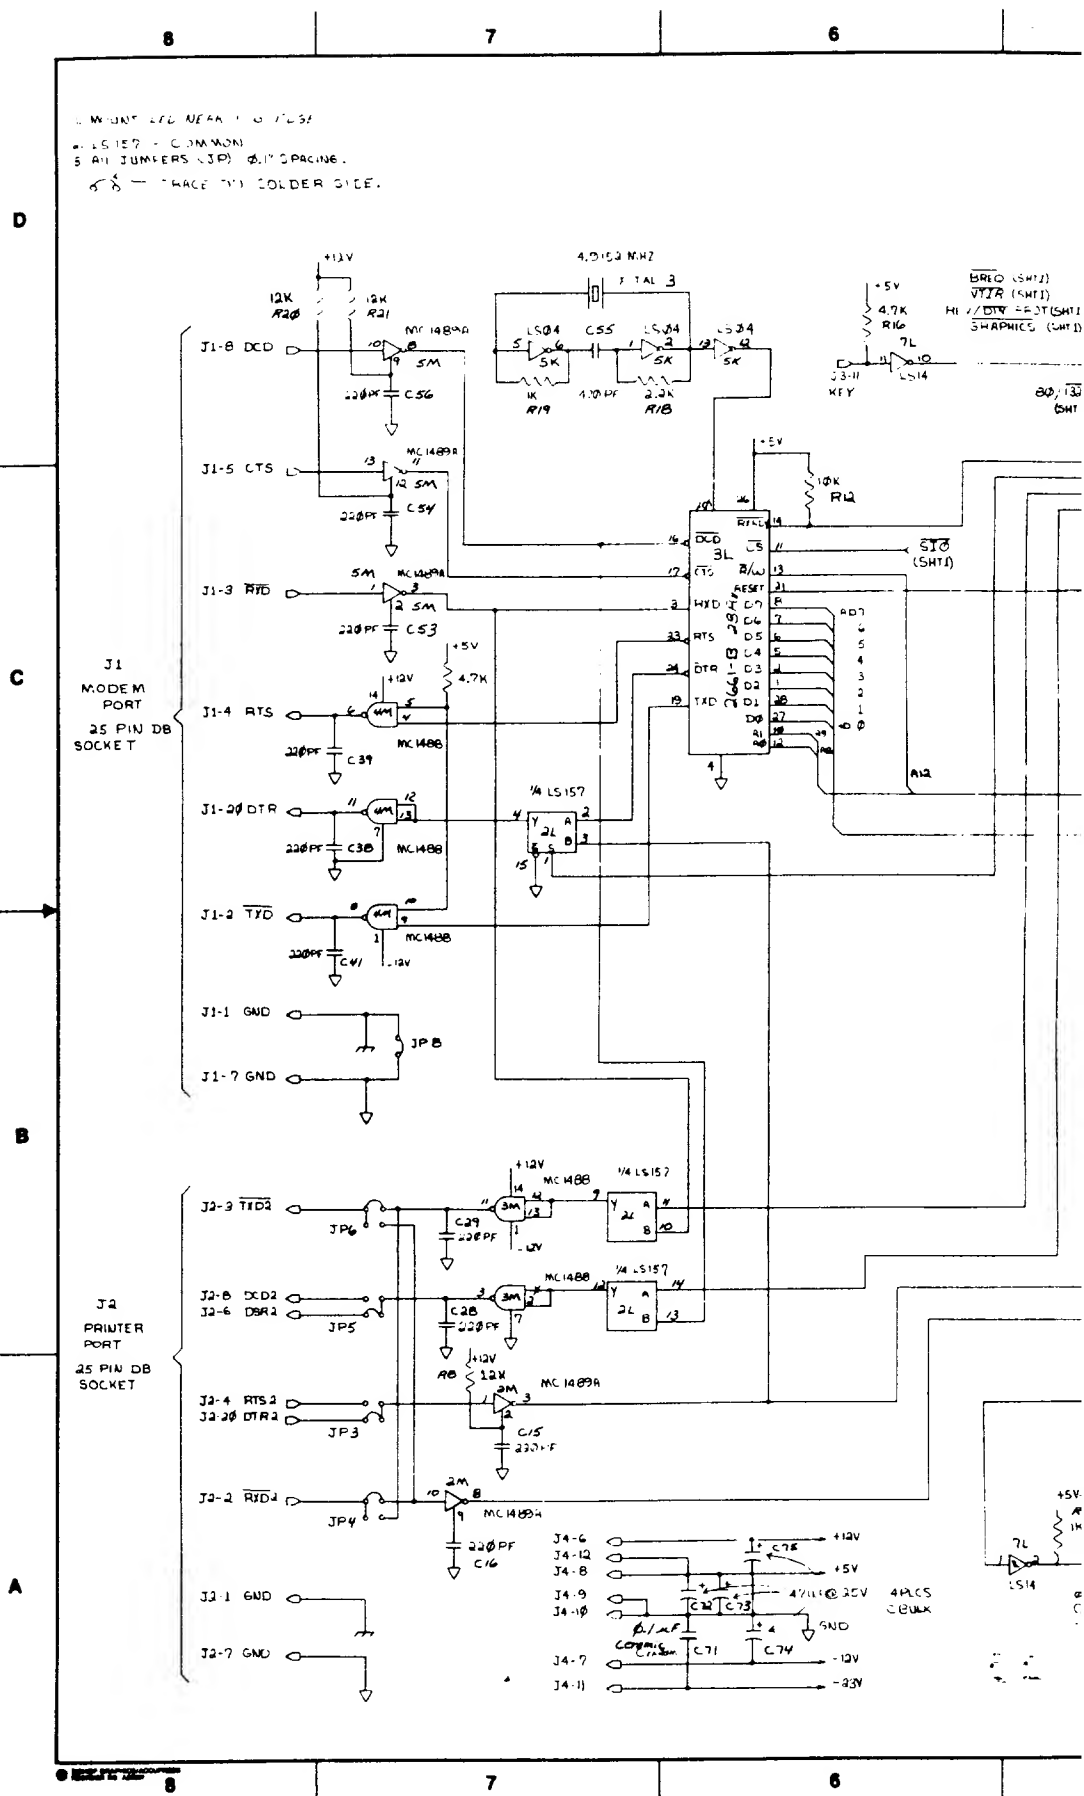


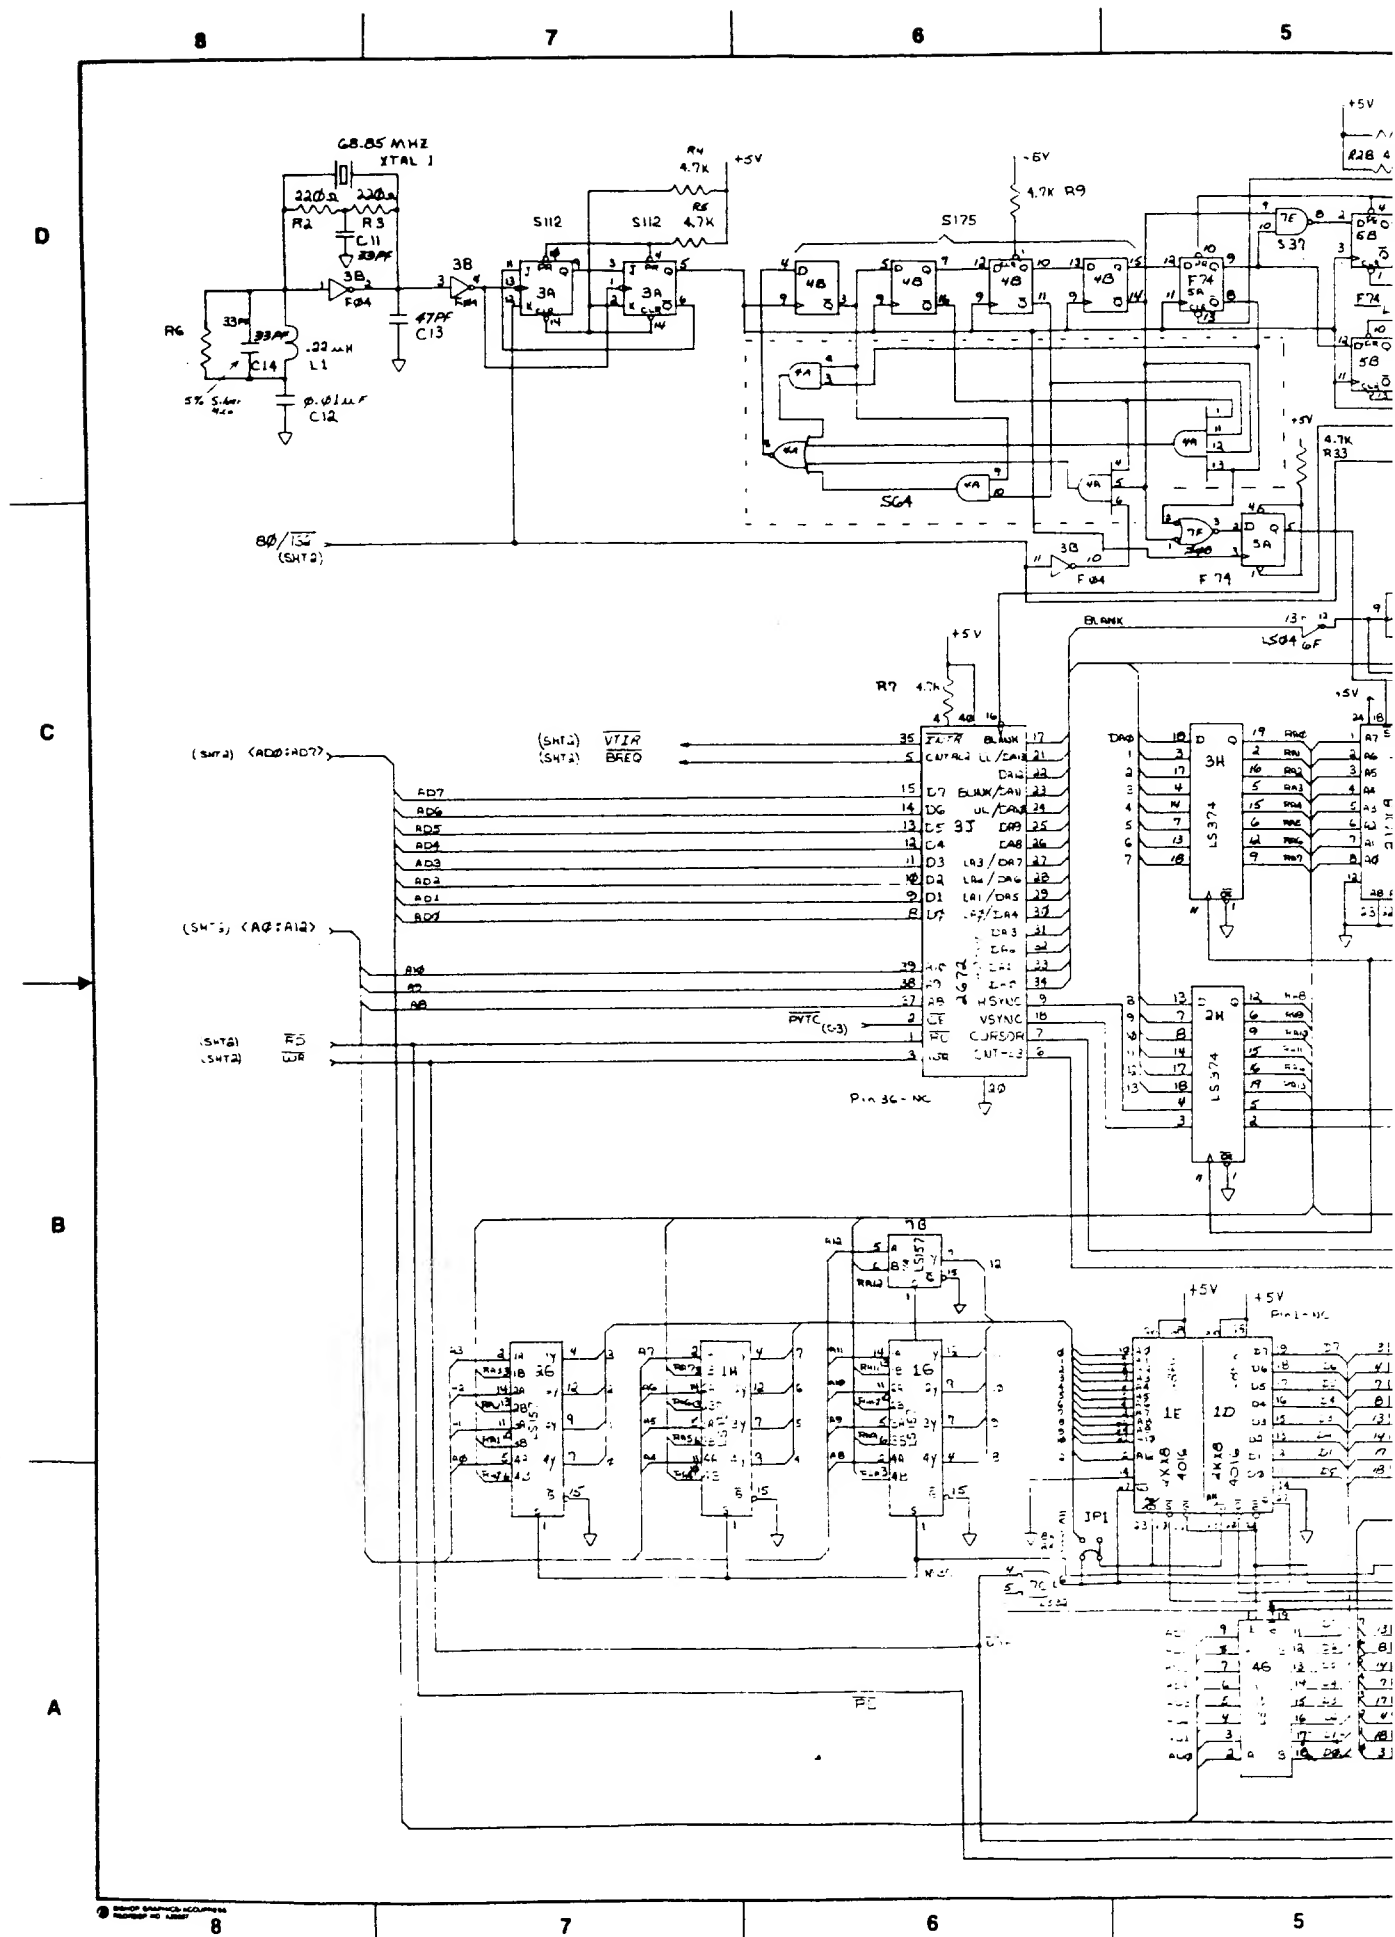


FORM NO.		SN	REV	1	
REVISIONS					
ZONE	REV	DESCRIPTION		DATE	APPROVED
C4	B	CORRECT PLUS 10 26618 10 3K-25(26618)			

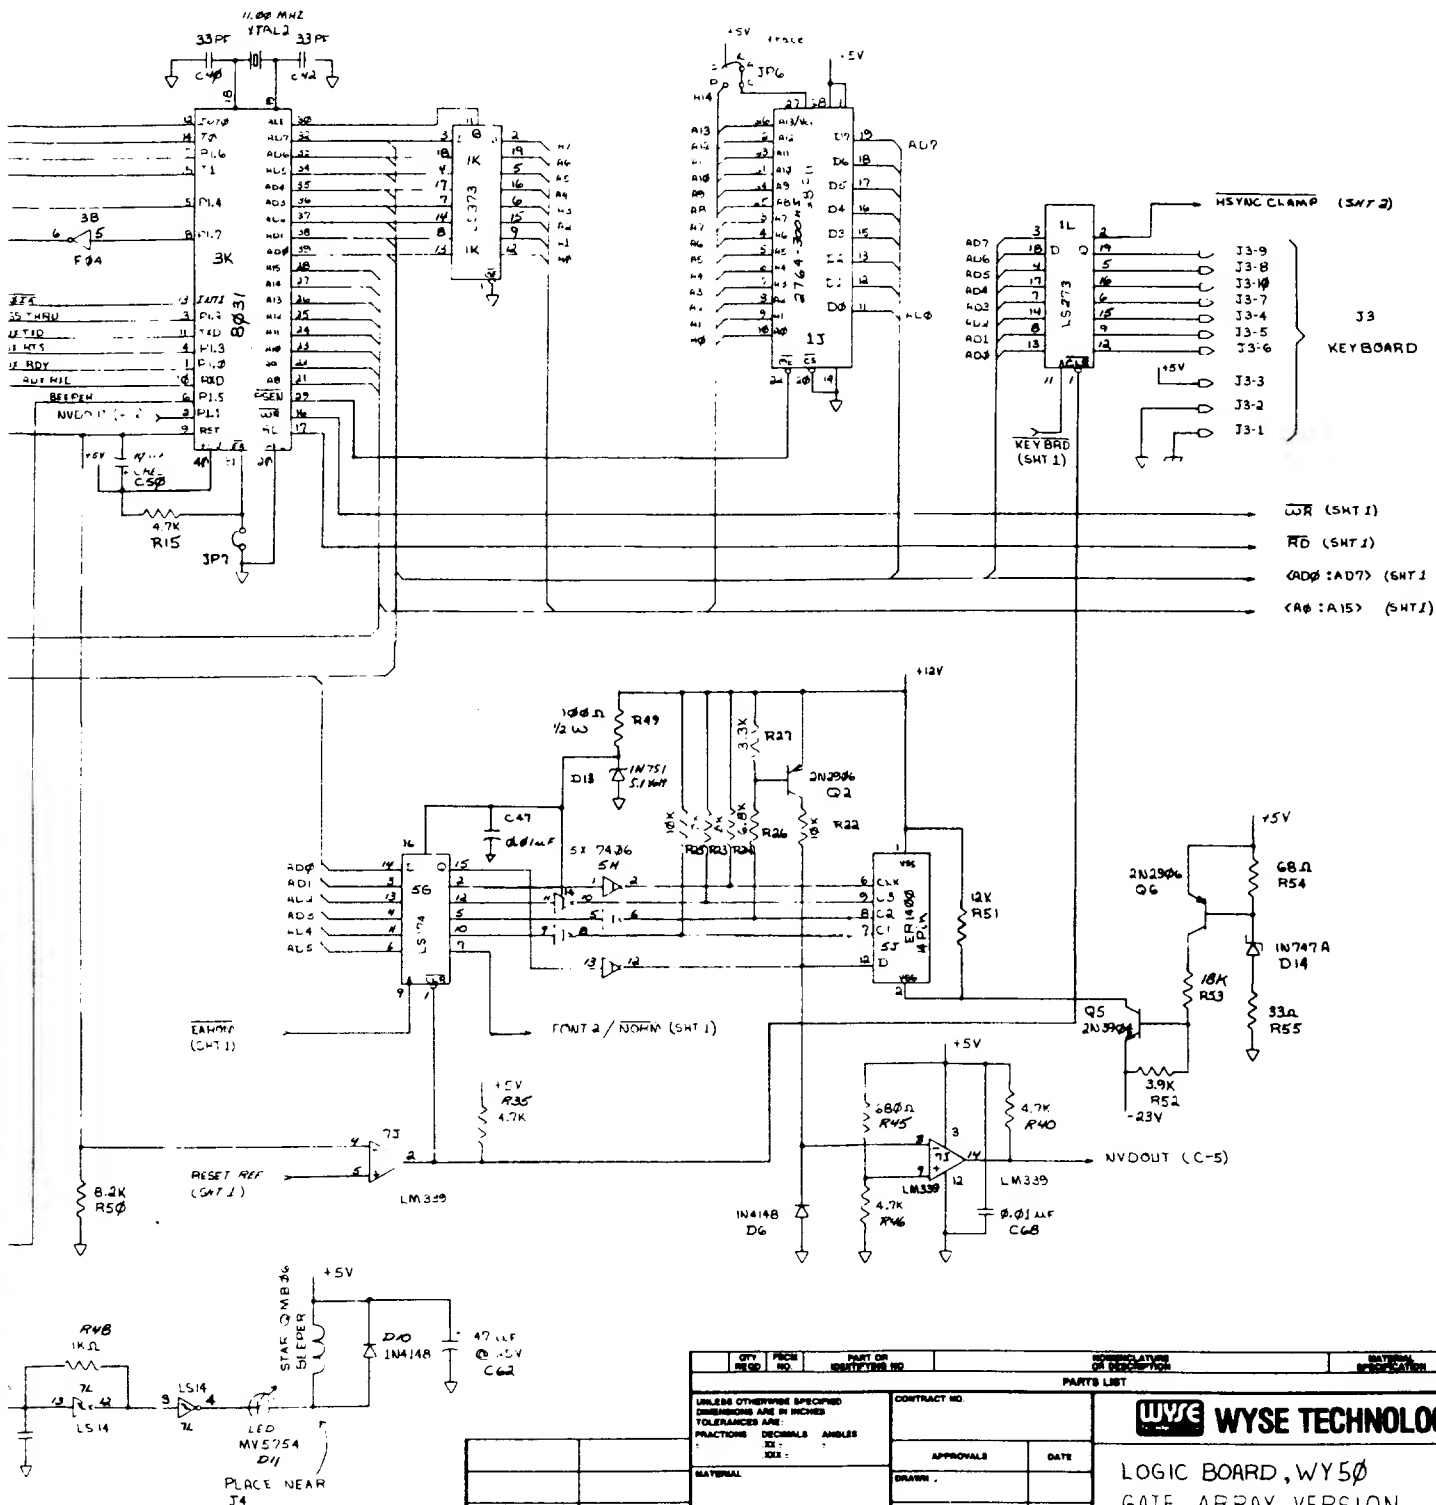


QTY REQD		PRICE NO.		PART OR SUBSTITUTE NO.		UNIFORMITY OR DESCRIPTION		MATERIAL SPECIFICATION	
PARTS LIST									
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE FRACTIONS    DECIMALS    ANGLES ±                ±                ± .015             .005             .010 .030             .010             .015 .060             .020             .030 .125             .050             .060 .250             .100             .125 .500             .200             .250 1.000             .500             .625 2.000             1.000             1.250 3.000             1.500             1.875 4.000             2.000             2.500 5.000             2.500             3.125 6.000             3.000             3.750 7.000             3.500             4.375 8.000             4.000             5.000 9.000             4.500             5.625 10.000            5.000             6.250 11.000            5.500             6.875 12.000            6.000             7.500 13.000            6.500             8.125 14.000            7.000             8.750 15.000            7.500             9.375 16.000            8.000             10.000 17.000            8.500             10.625 18.000            9.000             11.250 19.000            9.500             11.875 20.000            10.000            12.500 21.000            10.500            13.125 22.000            11.000            13.750 23.000            11.500            14.375 24.000            12.000            15.000 25.000            12.500            15.625 26.000            13.000            16.250 27.000            13.500            16.875 28.000            14.000            17.500 29.000            14.500            18.125 30.000            15.000            18.750 31.000            15.500            19.375 32.000            16.000            20.000 33.000            16.500            20.625 34.000            17.000            21.250 35.000            17.500            21.875 36.000            18.000            22.500 37.000            18.500            23.125 38.000            19.000            23.750 39.000            19.500            24.375 40.000            20.000            25.000 41.000            20.500            25.625 42.000            21.000            26.250 43.000            21.500            26.875 44.000            22.000            27.500 45.000            22.500            28.125 46.000            23.000            28.750 47.000            23.500            29.375 48.000            24.000            30.000 49.000            24.500            30.625 50.000            25.000            31.250 51.000            25.500            31.875 52.000            26.000            32.500 53.000            26.500            33.125 54.000            27.000            33.750 55.000            27.500            34.375 56.000            28.000            35.000 57.000            28.500            35.625 58.000            29.000            36.250 59.000            29.500            36.875 60.000            30.000            37.500 61.000            30.500            38.125 62.000            31.000            38.750 63.000            31.500            39.375 64.000            32.000            40.000 65.000            32.500            40.625 66.000            33.000            41.250 67.000            33.500            41.875 68.000            34.000            42.500 69.000            34.500            43.125 70.000            35.000            43.750 71.000            35.500            44.375 72.000            36.000            45.000 73.000            36.500            45.625 74.000            37.000            46.250 75.000            37.500            46.875 76.000            38.000            47.500 77.000            38.500            48.125 78.000            39.000            48.750 79.000            39.500            49.375 80.000            40.000            50.000 81.000            40.500            50.625 82.000            41.000            51.250 83.000            41.500            51.875 84.000            42.000            52.500 85.000            42.500            53.125 86.000            43.000            53.750 87.000            43.500            54.375 88.000            44.000            55.000 89.000            44.500            55.625 90.000            45.000            56.250 91.000            45.500            56.875 92.000            46.000            57.500 93.000            46.500            58.125 94.000            47.000            58.750 95.000            47.500            59.375 96.000            48.000            60.000 97.000            48.500            60.625 98.000            49.000            61.250 99.000            49.500            61.875 100.000           50.000           62.500 101.000           50.500           63.125 102.000           51.000           63.750 103.000           51.500           64.375 104.000           52.000           65.000 105.000           52.500           65.625 106.000           53.000           66.250 107.000           53.500           66.875 108.000           54.000           67.500 109.000           54.500           68.125 110.000           55.000           68.750 111.000           55.500           69.375 112.000           56.000           70.000 113.000           56.500           70.625 114.000           57.000           71.250 115.000           57.500           71.875 116.000           58.000           72.500 117.000           58.500           73.125 118.000           59.000           73.750 119.000           59.500           74.375 120.000           60.000           75.000 121.000           60.500           75.625 122.000           61.000           76.250 123.000           61.500           76.875 124.000           62.000           77.500 125.000           62.500           78.125 126.000           63.000           78.750 127.000           63.500           79.375 128.000           64.000           80.000 129.000           64.500           80.625 130.000           65.000           81.250 131.000           65.500           81.875 132.000           66.000           82.500 133.000           66.500           83.125 134.000           67.000           83.750 135.000           67.500           84.375 136.000           68.000           85.000 137.000           68.500           85.625 138.000           69.000           86.250 139.000           69.500           86.875 140.000           70.000           87.500 141.000           70.500           88.125 142.000           71.000           88.750 143.000           71.500           89.375 144.000           72.000           90.000 145.000           72.500           90.625 146.000           73.000           91.250 147.000           73.500           91.875 148.000           74.000           92.500 149.000           74.500           93.125 150.000           75.000           93.750 151.000           75.500           94.375 152.000           76.000           95.000 153.000           76.500           95.625 154.000           77.000           96.250 155.000           77.500           96.875 156.000           78.000           97.500 157.000           78.500           98.125 158.000           79.000           98.750 159.000           79.500           99.375 160.000           80.000           100.000 161.000           80.500           100.625 162.000           81.000           101.250 163.000           81.500           101.875 164.000           82.000           102.500 165.000           82.500           103.125 166.000           83.000           103.750 167.000           83.500           104.375 168.000           84.000           105.000 169.000           84.500           105.625 170.000           85.000           106.250 171.000           85.500           106.875 172.000           86.000           107.500 173.000           86.500           108.125 174.000           87.000           108.750 175.000           87.500           109.375 176.000           88.000           110.000 177.000           88.500           110.625 178.000           89.000           111.250 179.000           89.500           111.875 180.000           90.000           112.500 181.000           90.500           113.125 182.000           91.000           113.750 183.000           91.500           114.375 184.000           92.000           115.000 185.000           92.500           115.625 186.000           93.000           116.250 187.000           93.500           116.875 188.000           94.000           117.500 189.000           94.500           118.125 190.000           95.000           118.750 191.000           95.500           119.375 192.000           96.000           120.000 193.000           96.500           120.625 194.000           97.000           121.250 195.000           97.500           121.875 196.000           98.000           122.500 197.000           98.500           123.125 198.000           99.000           123.750 199.000           99.500           124.375 200.000           100.000           125.000				CONTRACT NO.		 <b>WYSE TECHNOLOGY</b>			
				APPROVALS				DATE	
				DRAWN					
				CHECKED					
ISSUED				LOGIC BOARD, WY50 GATE ARRAY VERSION					
SIZE		PCHN NO.		DWG. NO.		BPL			
D				96-018-01		C1			
DO NOT SCALE DRAWING				SCALE		SHEET 2 OF 2			







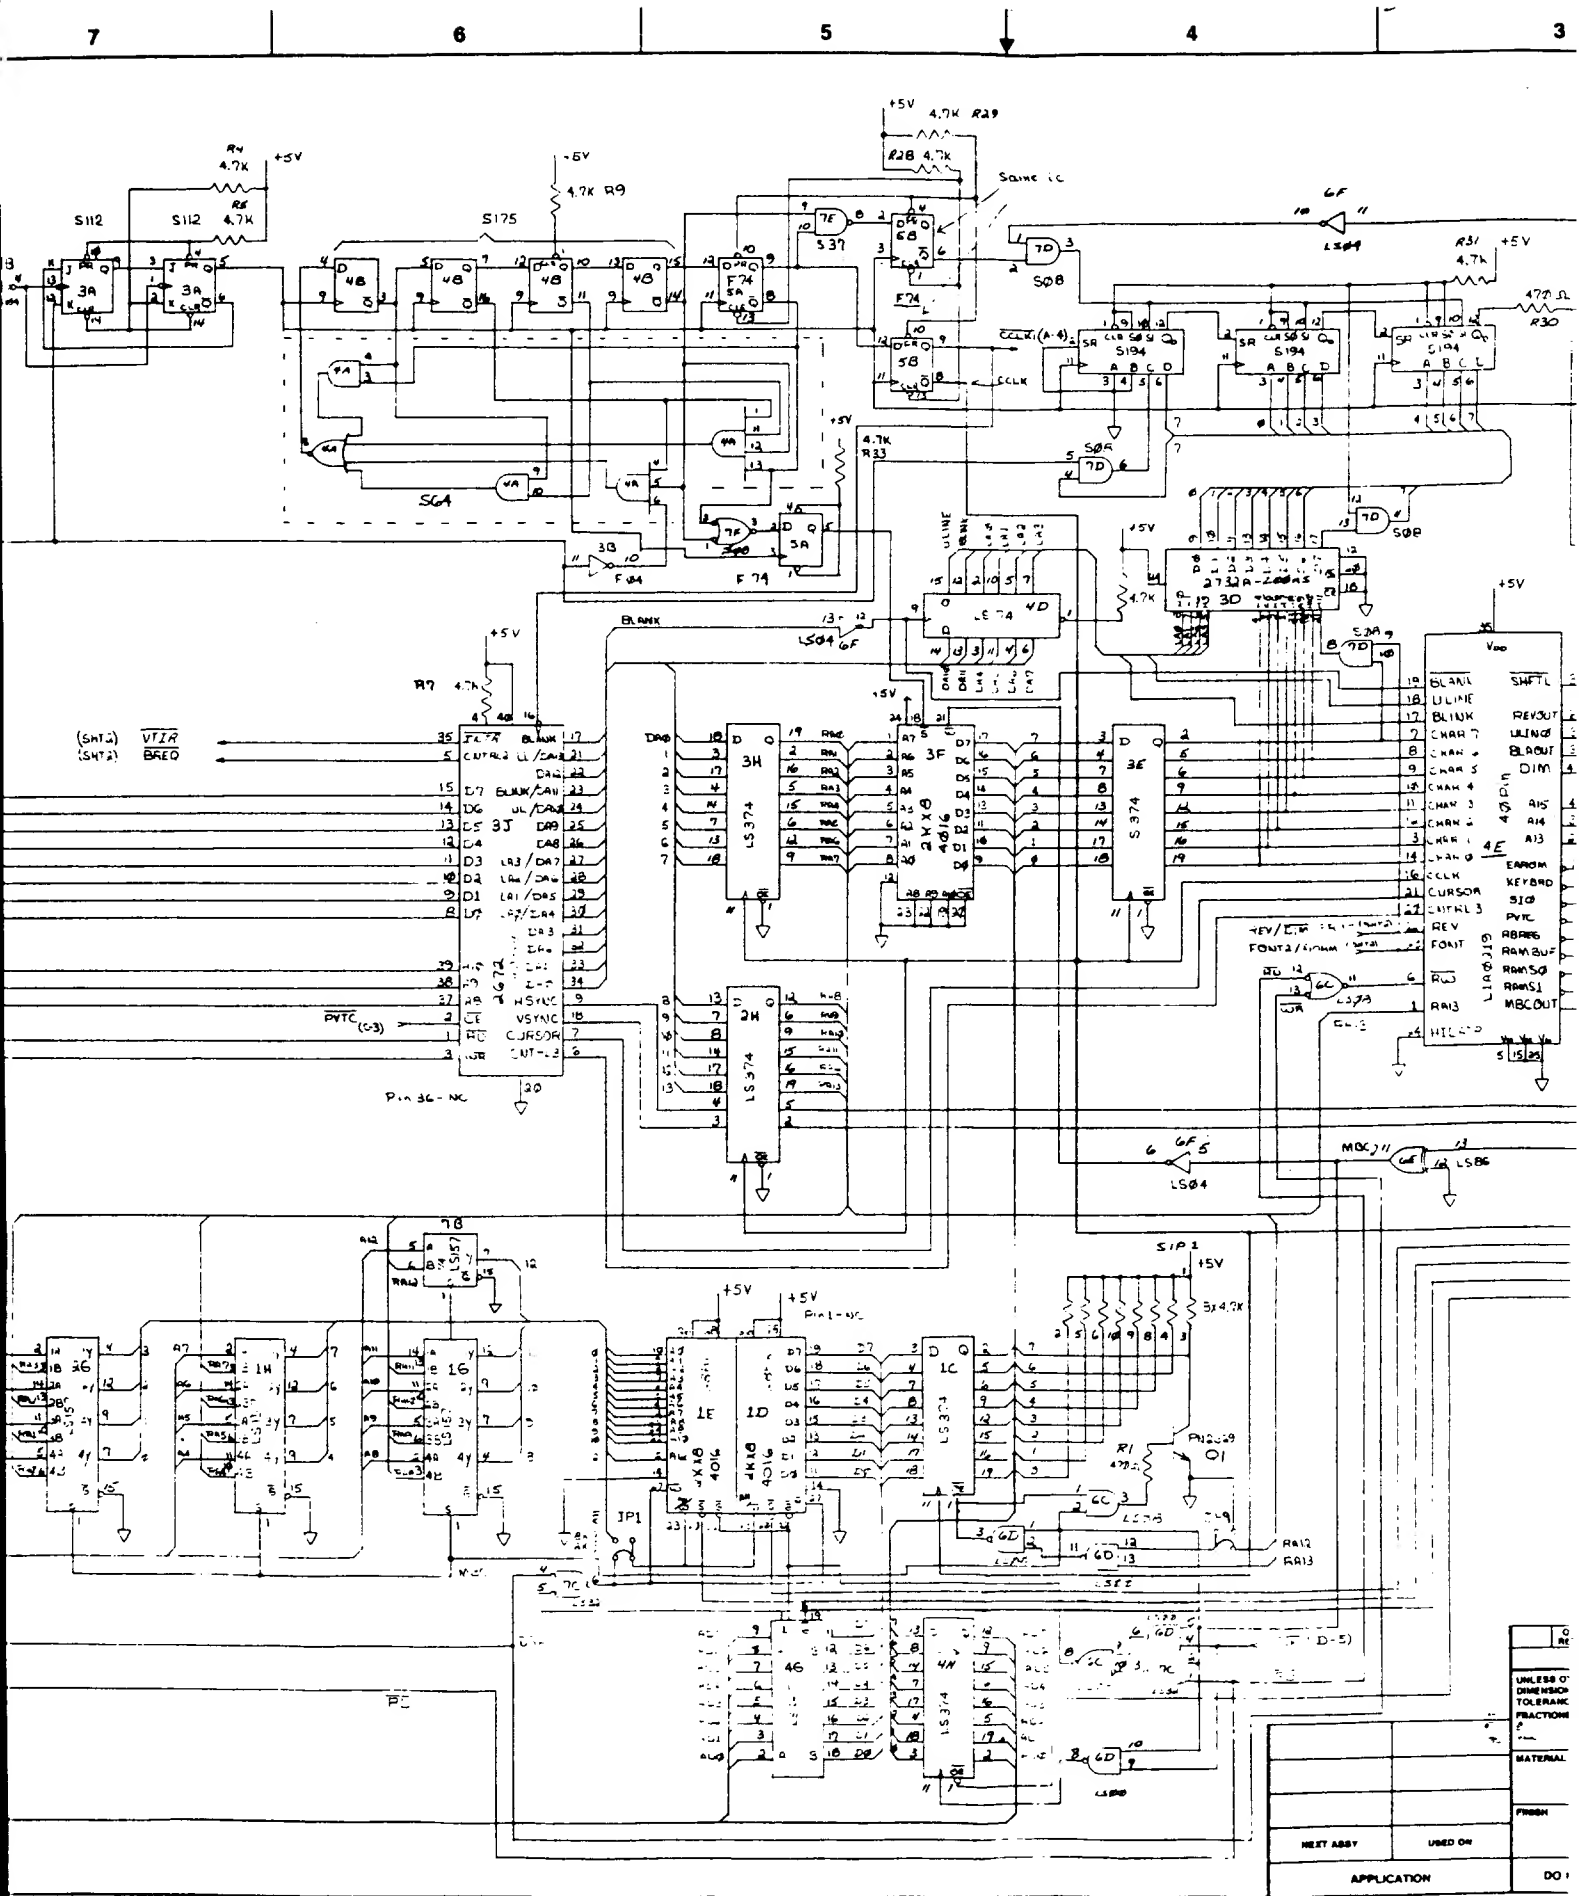


	Q RE
UNLESS OTHERWISE SPECIFIED, TOLERANCES ARE:	
FRACTIONS	
DECIMALS	
MATERIAL	
FINISH	
DO NOT SCALE	







1. MOUNT LED NEAR ITS LUGS
2. LS157 - COMMON
3. ALL JUMPERS (JP) 0.1" SPRING.
4. ALL IC'S EXCEPT U9, U10, U17, U30, U33, U37, U41, U43 AND U48 HAVE INDIVIDUAL 0.1UF BYPASS CAPACITORS.

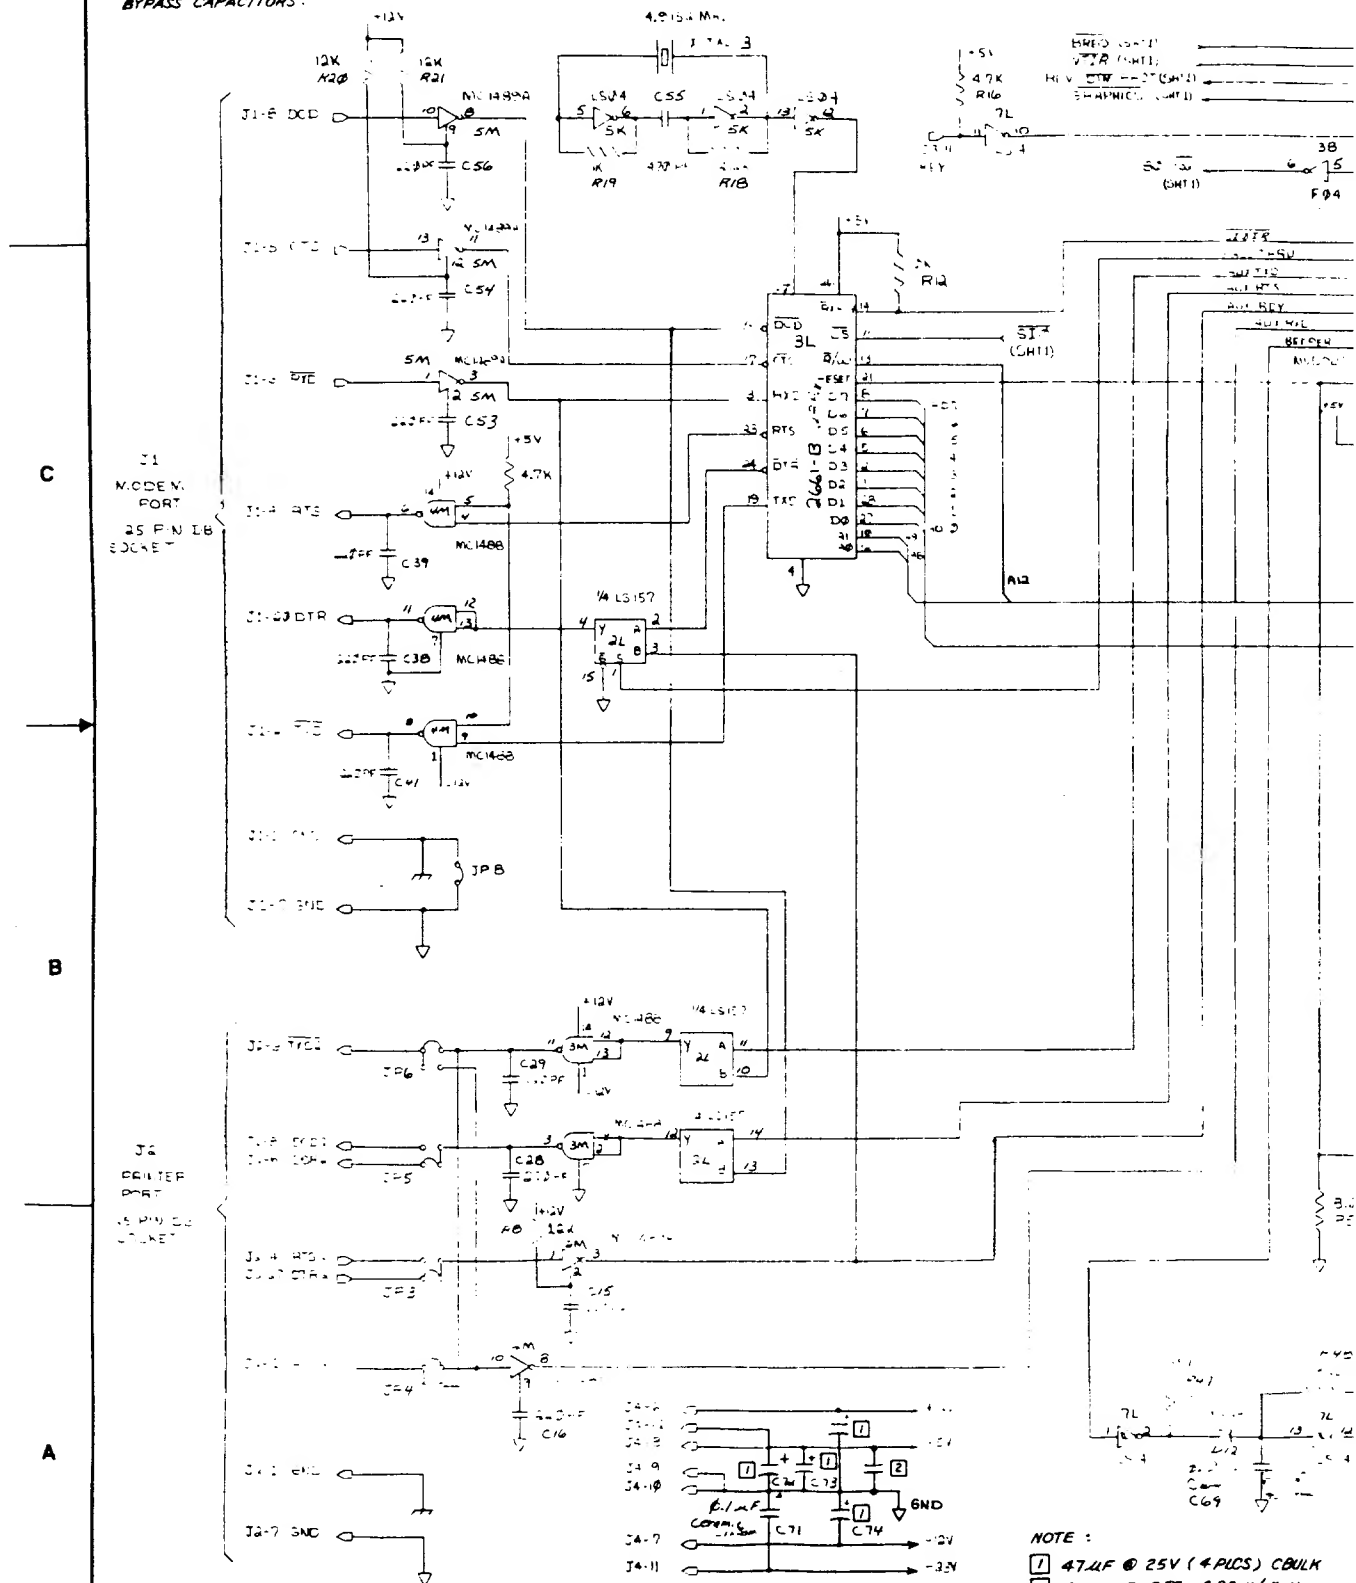

NOTE :

[1] 47 $\mu$ F @ 25V (4 PLCS) CBULK  
[2] C21, C57, C59 0.22 $\mu$ /50V  
C66 0.01 $\mu$ /50V



NEXT ASBY	USED ON
APPLICATION	



4

3

DWG. NO. 96-018-01

REV


2

DATE

5/11/85

## REVISIONS

ZONE	REV.	DESCRIPTION	DATE	APPROVED
A6	CHG 2	CHANGED C21, C57, C59, C66 PER ECN # 447	5/11/85	
D		CORRECTION LEVEL PER ECN # 563		
E		BOM CHANGES PER ECN # 566		
F		BOM CHANGES PER ECN # 567		
F1		ADDED REWORK INSTRUCTION PER ECN # 601		
F2		CHANGED C11, C13, C14 PER ECN # 667		
F3		CHANGED THE MATERIAL OF D CONN. PER ECN # 693		
F4		BOM CHANGES PER ECN # 712	5/11/85	
F4		SEE ECN # 713A	7/10/85	
F6		TRANSFER & CHANGES (SMT 2 FROM HYLAR TO ULLUM)	12/11/85	

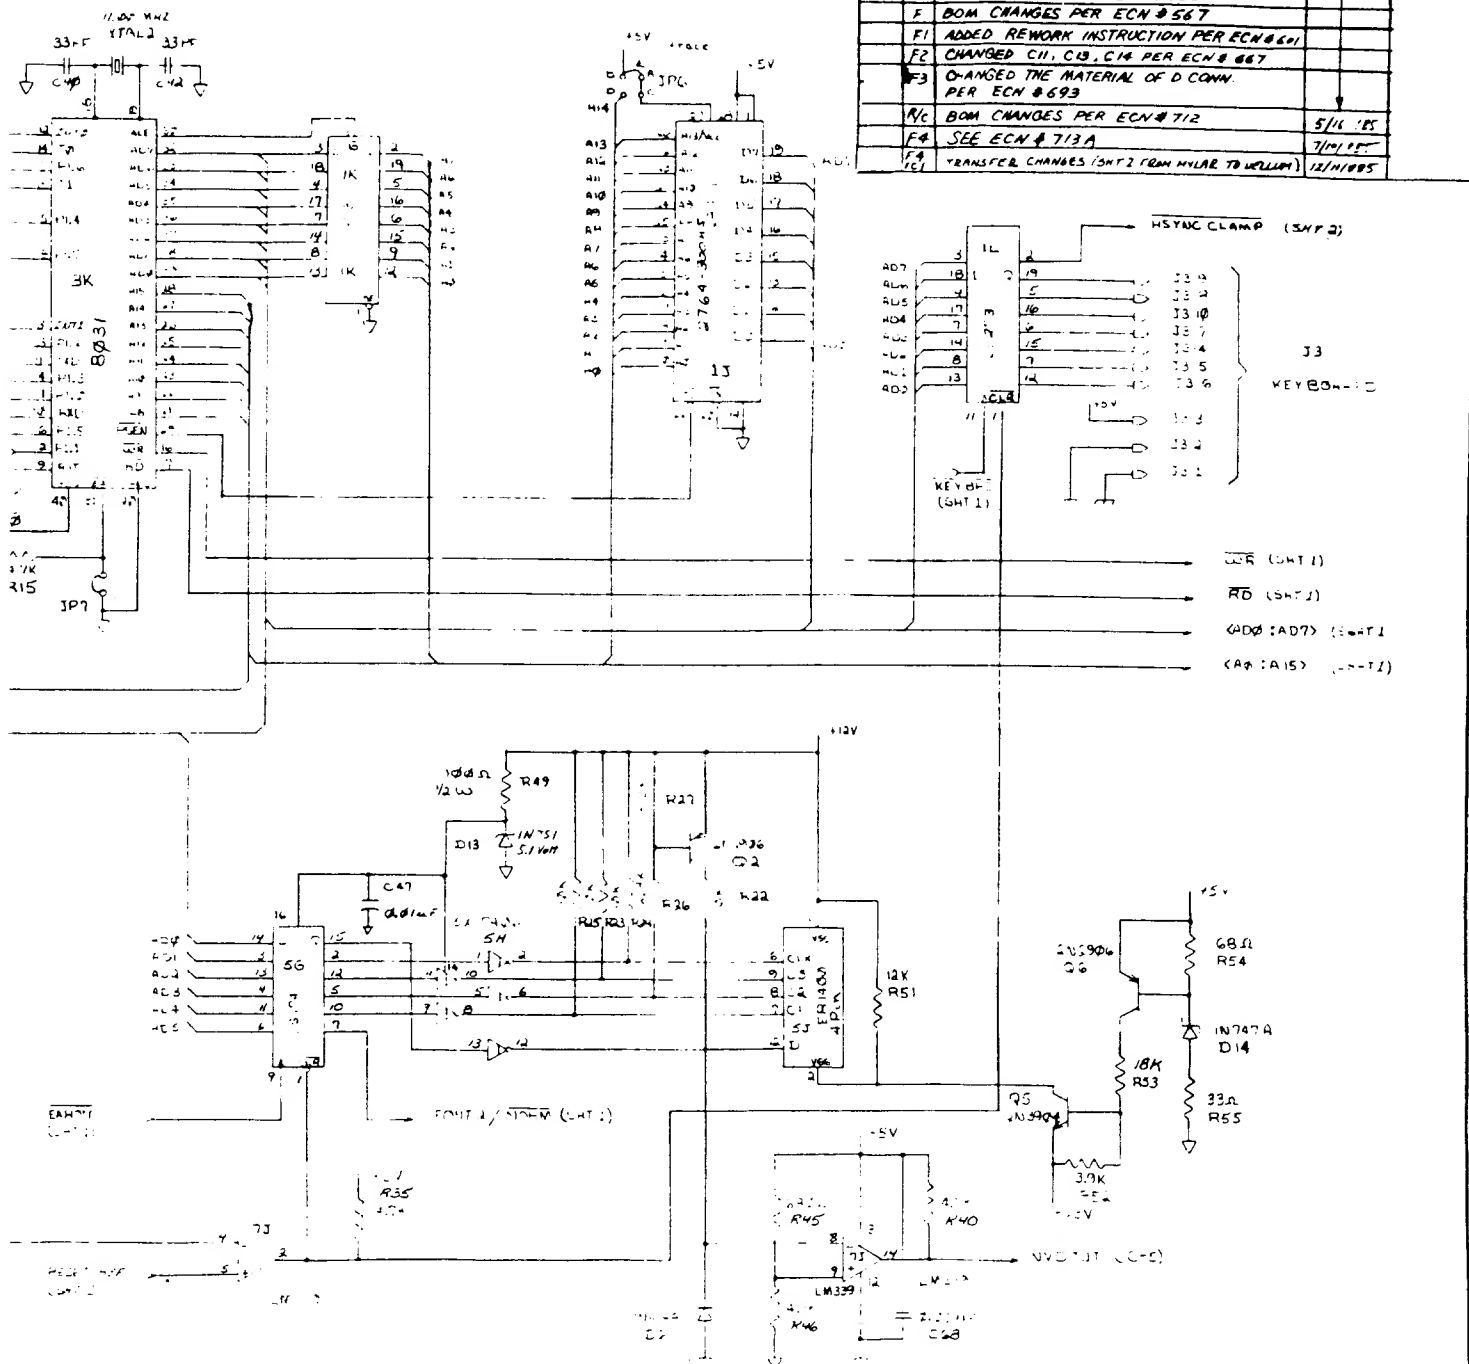

QTY REQD	FSCM NO	PART OR IDENTIFYING NO	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
PARTS LIST				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE FRACTIONS DECIMALS ANGLES XXX .			CONTRACT NO	
MATERIAL			APPROVALS	DATE
FINISH			ISSUED	12/10/85
NEXT ASBY			SCALE	
USED ON			DWG. NO. 96-018-01	
APPLICATION			SCALE	
DO NOT SCALE DRAWING			SUBMIT	



WYSE TECHNOLOGY

LOGIC BOARD, WY50/75  
GATE ARRAY VERSION


DWG. NO. 96-018-01

REV. 2


C-



1. VIDEO	WHITE	7. -12V	GREY	LOGIC HARI
2. GND	BLACK	8. +5V	RED	94-034-(
3. DIM	ORANGE	9. GND	BLACK	
4. H-SYNC	YELLOW	10. GND	BLACK	
5. V-SYNC	GREEN	11. -23V	PURPLE	
6. +12V	BLUE	12. +5V	RED	

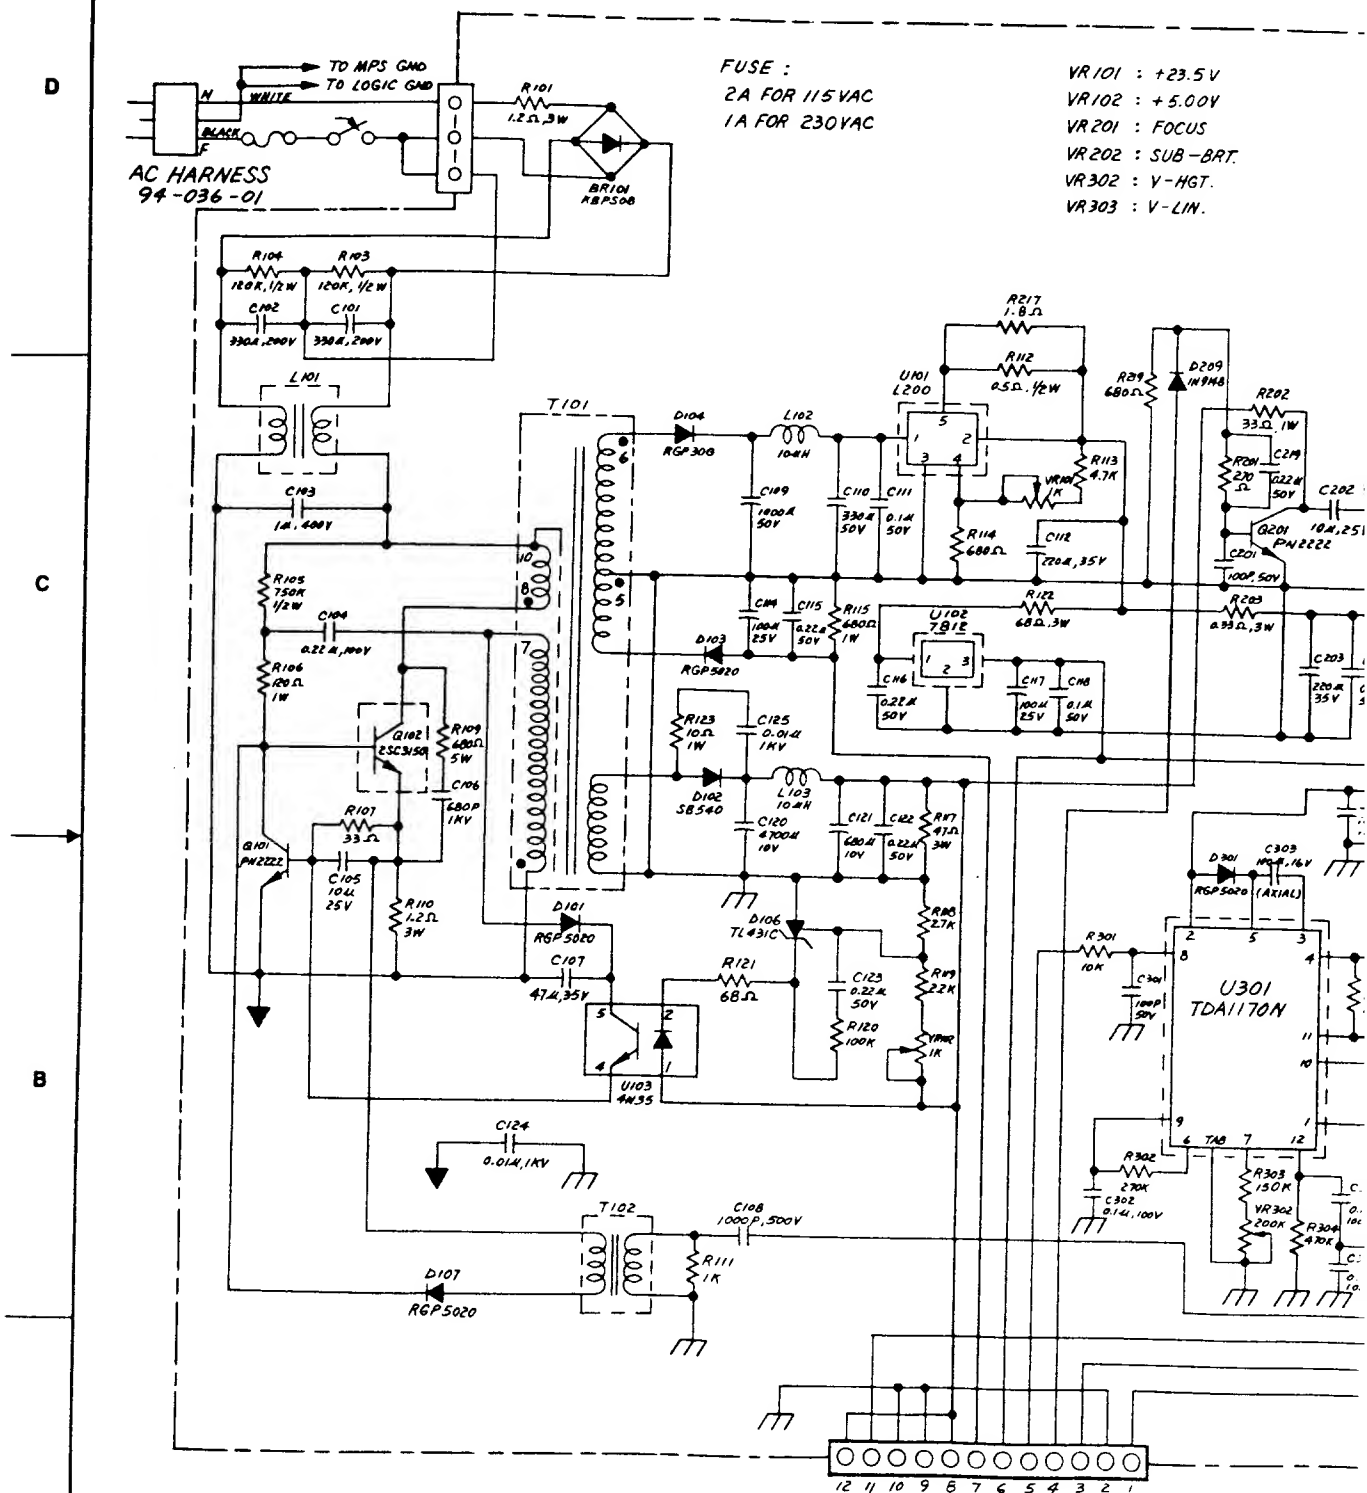





NEFT ASSY	
APPLICATION	
THIRD ANGLE PROJECTION	
	



DWG. NO. 96-019-02

REV		DESCRIPTION		DATE	APPROVED
# 916	A	RTC		10-16-85	
# 1070	ARC	REDRAWN FOR CLARITY, NO CHANGES		12-11-85	

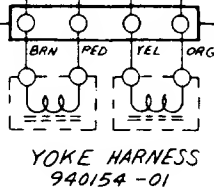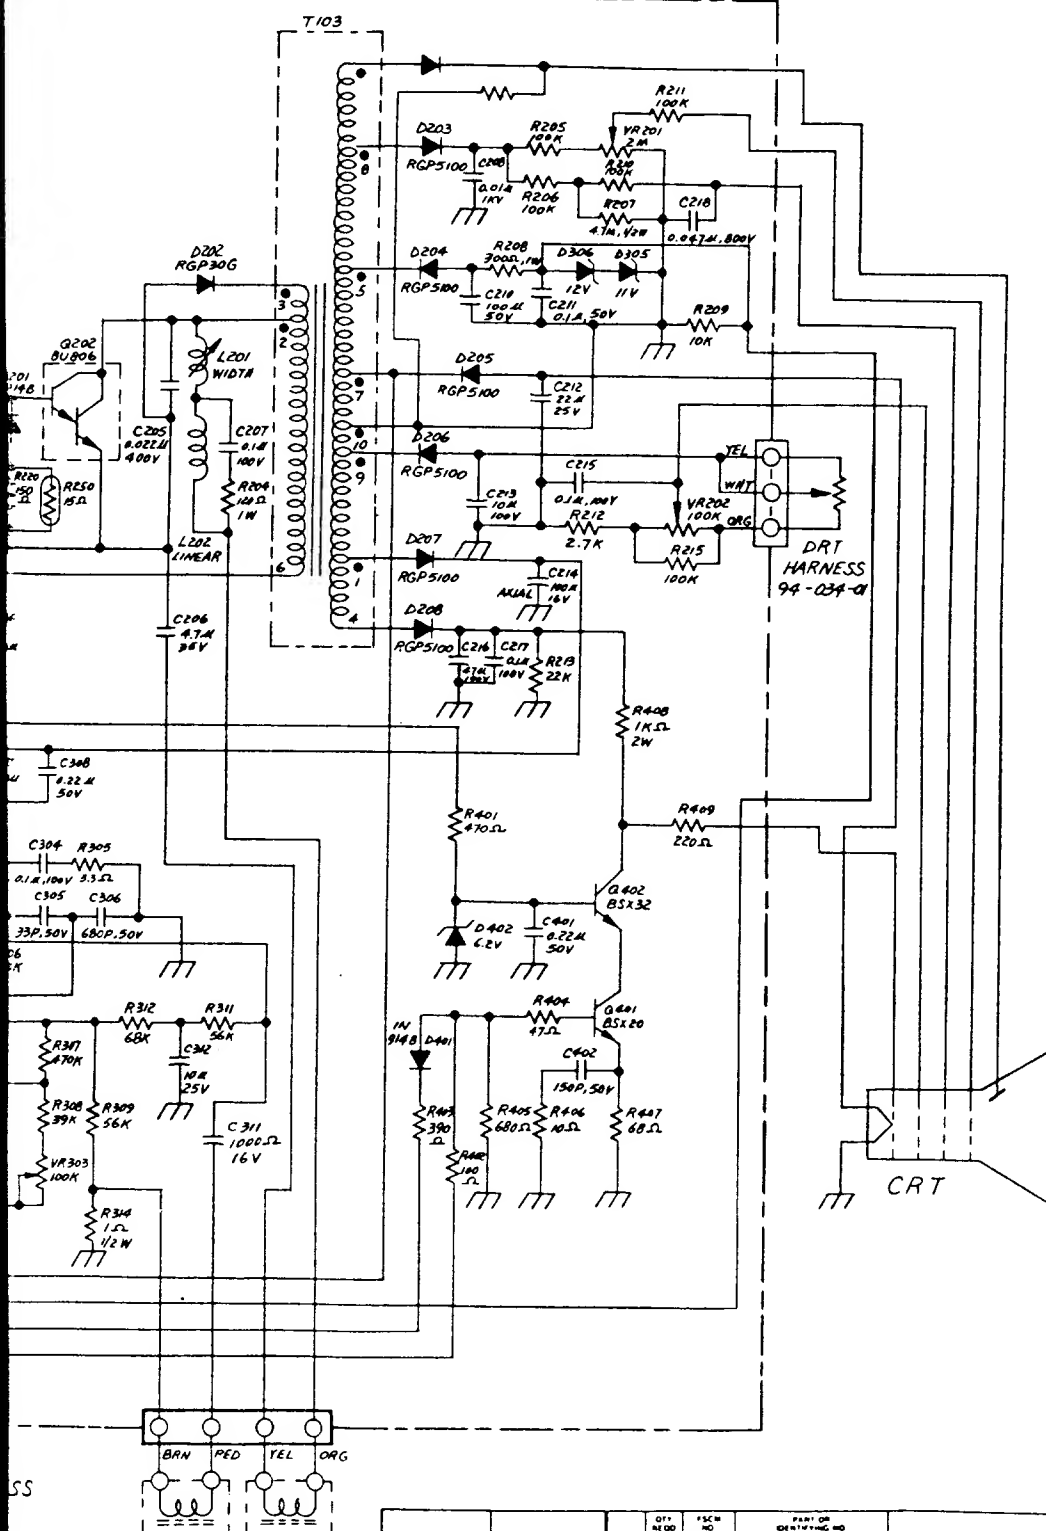


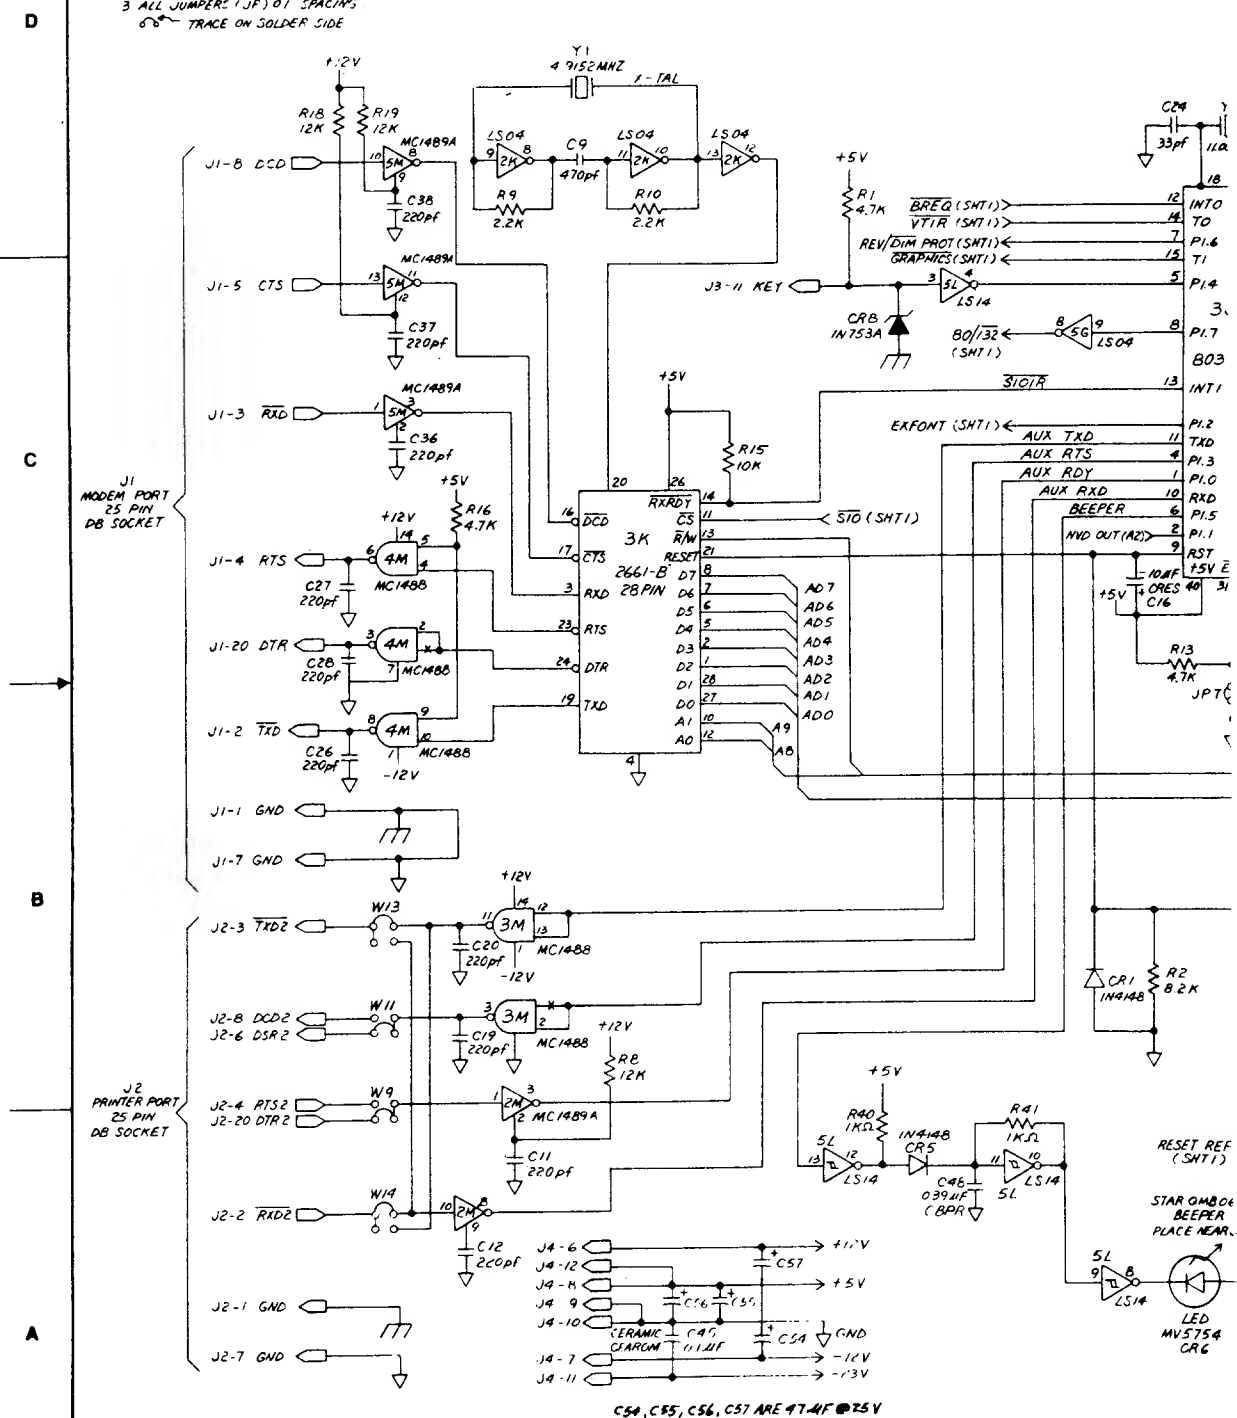
WY-50+		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN TOLERANCES		CONTRACT NO.	
NEET ASSY	USED ON	INCHES	FRACTIONS	DECIMALS	ANGLES
APPLICATION		THIRD ANGLE PROJECTION		SCALE	
DO NOT SCALE DRAWING		WATERMARK		DO NOT SCALE DRAWING	
DATE		SIZE		FSCM NO.	
12-6-85		D		DWG NO. 96-019-02	
12-10-85		12-11-85		REV ARC	
12-11-85		SHEET 1 OF 1			

WYSE TECHNOLOGY INCORPORATED

WY-50+ SCHEMATIC



1. MOUNT LED NEAR PCB EDGE
2. LS157 - COMMON
3. ALL JUMPERS (JP) OF SPACINGS  
 TRACE ON SOLDER SIDE





7

6

5


4

3

PROPRIETARY TO  
NON DISCLOSURE  
IS WISE TECHNOLOGY

FCE EDGE


01" SPACING  
LDER SIDE

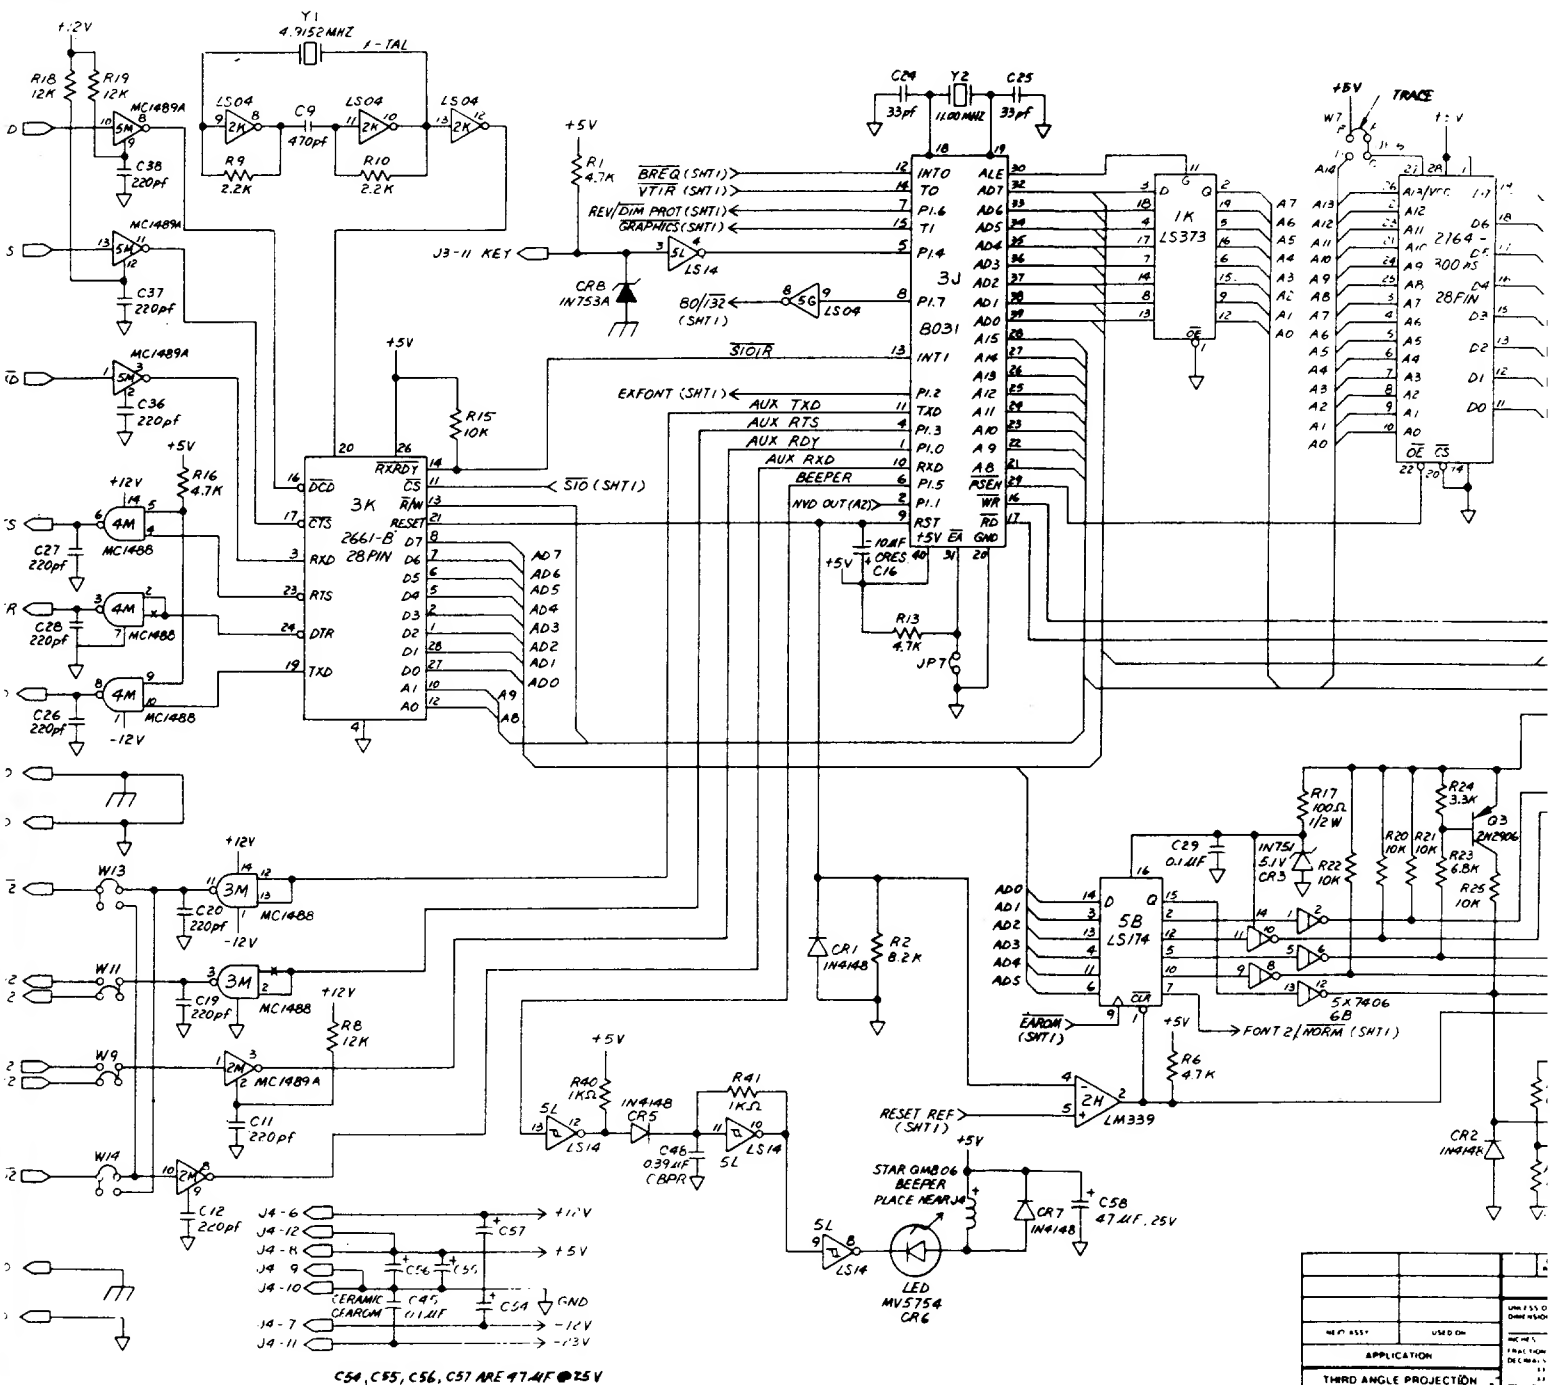








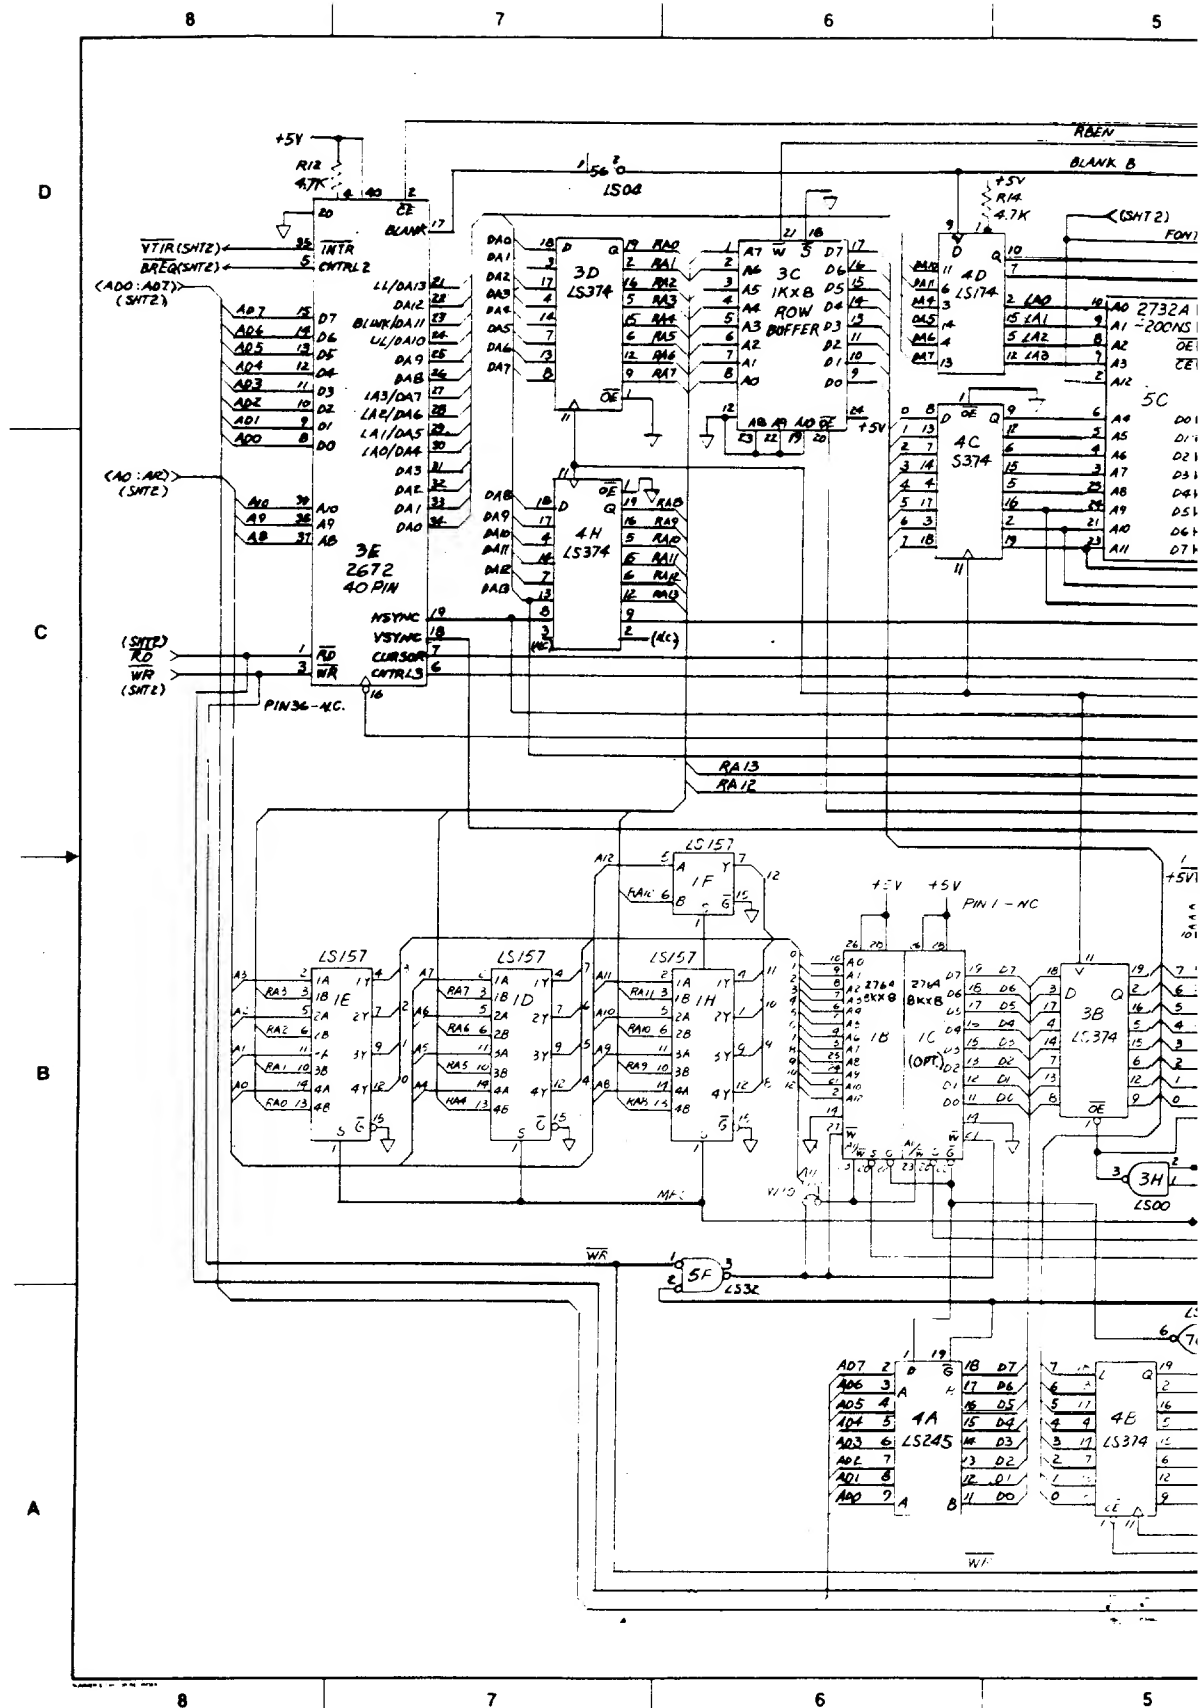







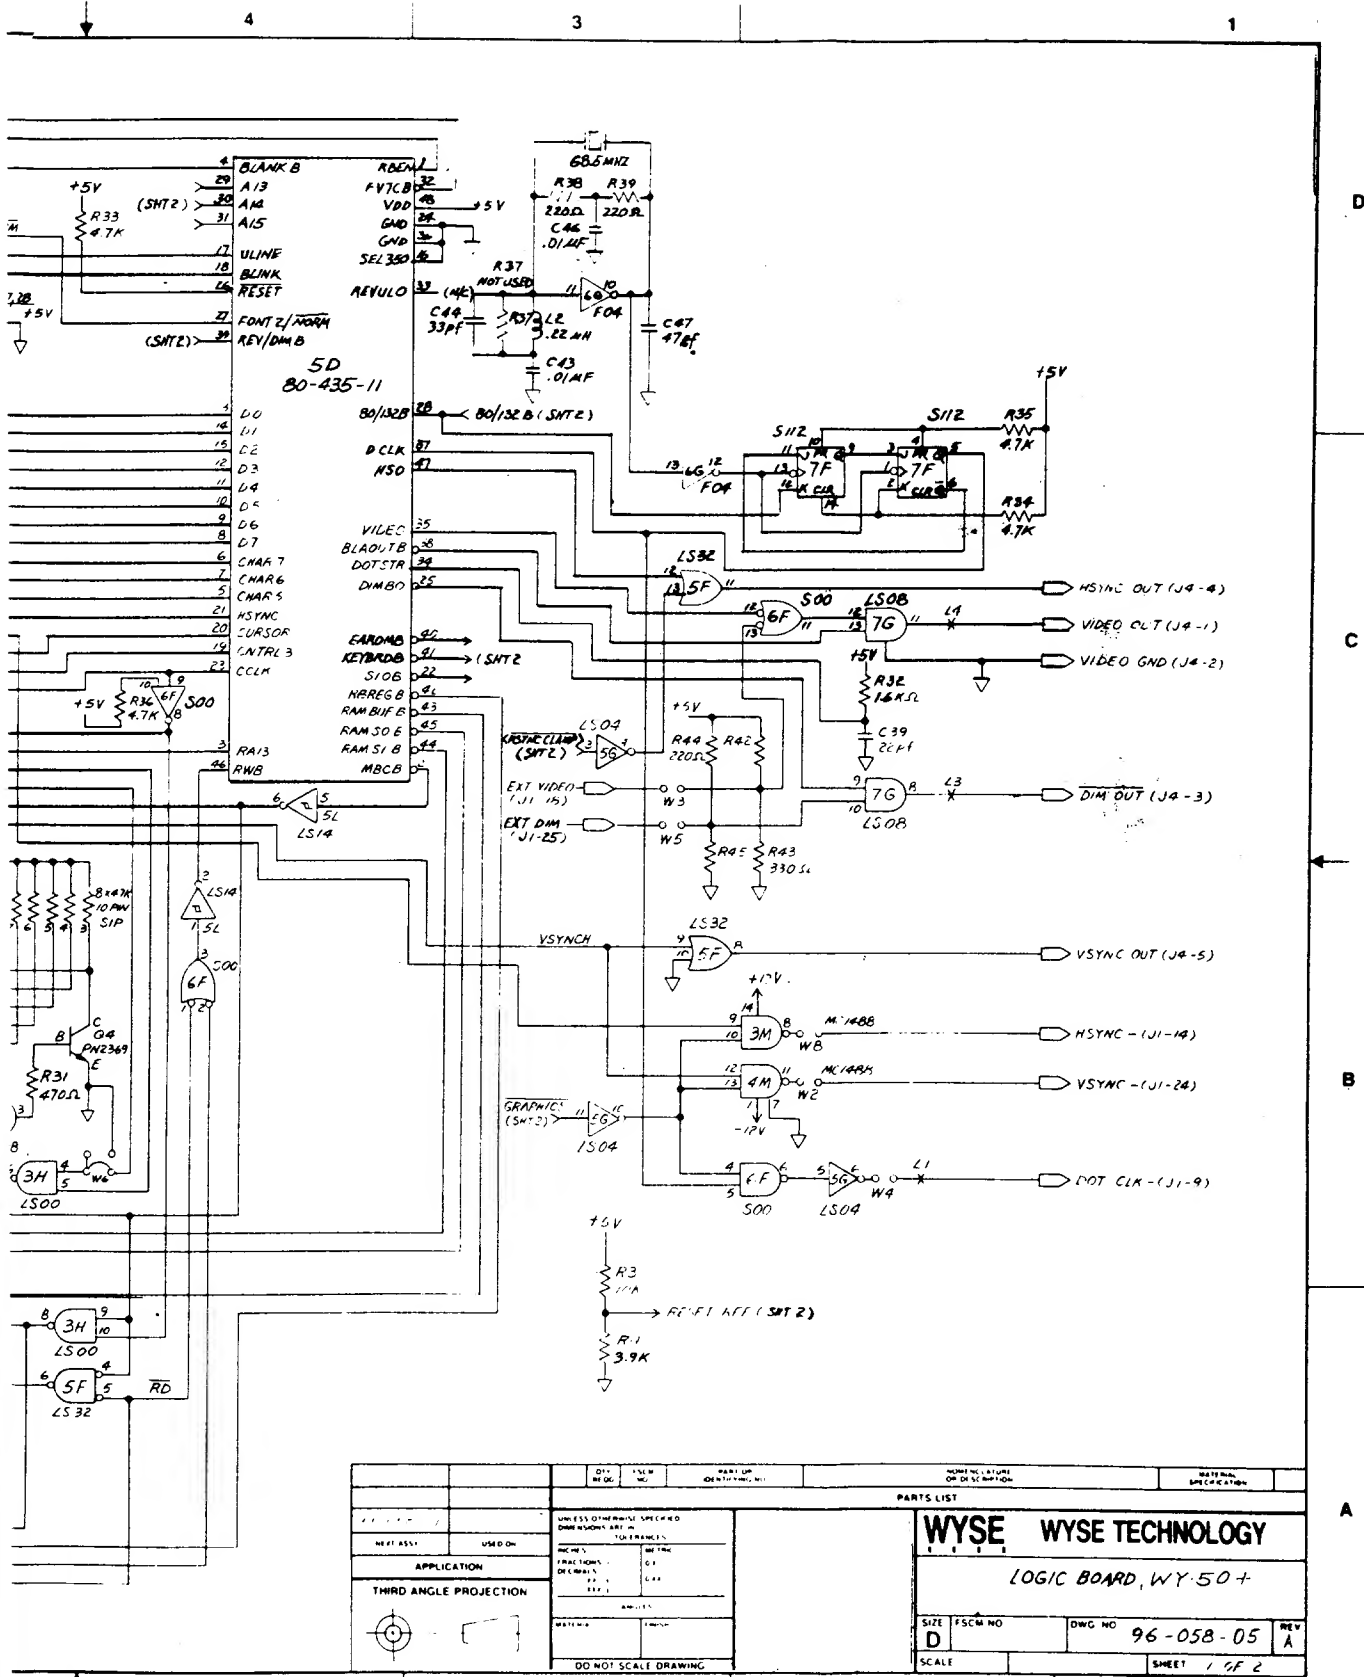



# NOTES:

1. ALL RESISTORS ARE 1/4 W. 5% UNLESS OTHERWISE SPECIFIED.
2. ALL CAPACITORS ARE IN  $\mu F$  UNLESS OTHERWISE SPECIFIED.

FUSE 2A FOR 115V AC  
2A FOR 230V AC


ALL VOLTAGE VALUES ARE IN VDC UNLESS OTHERWISE SPECIFIED

D

C

B


A

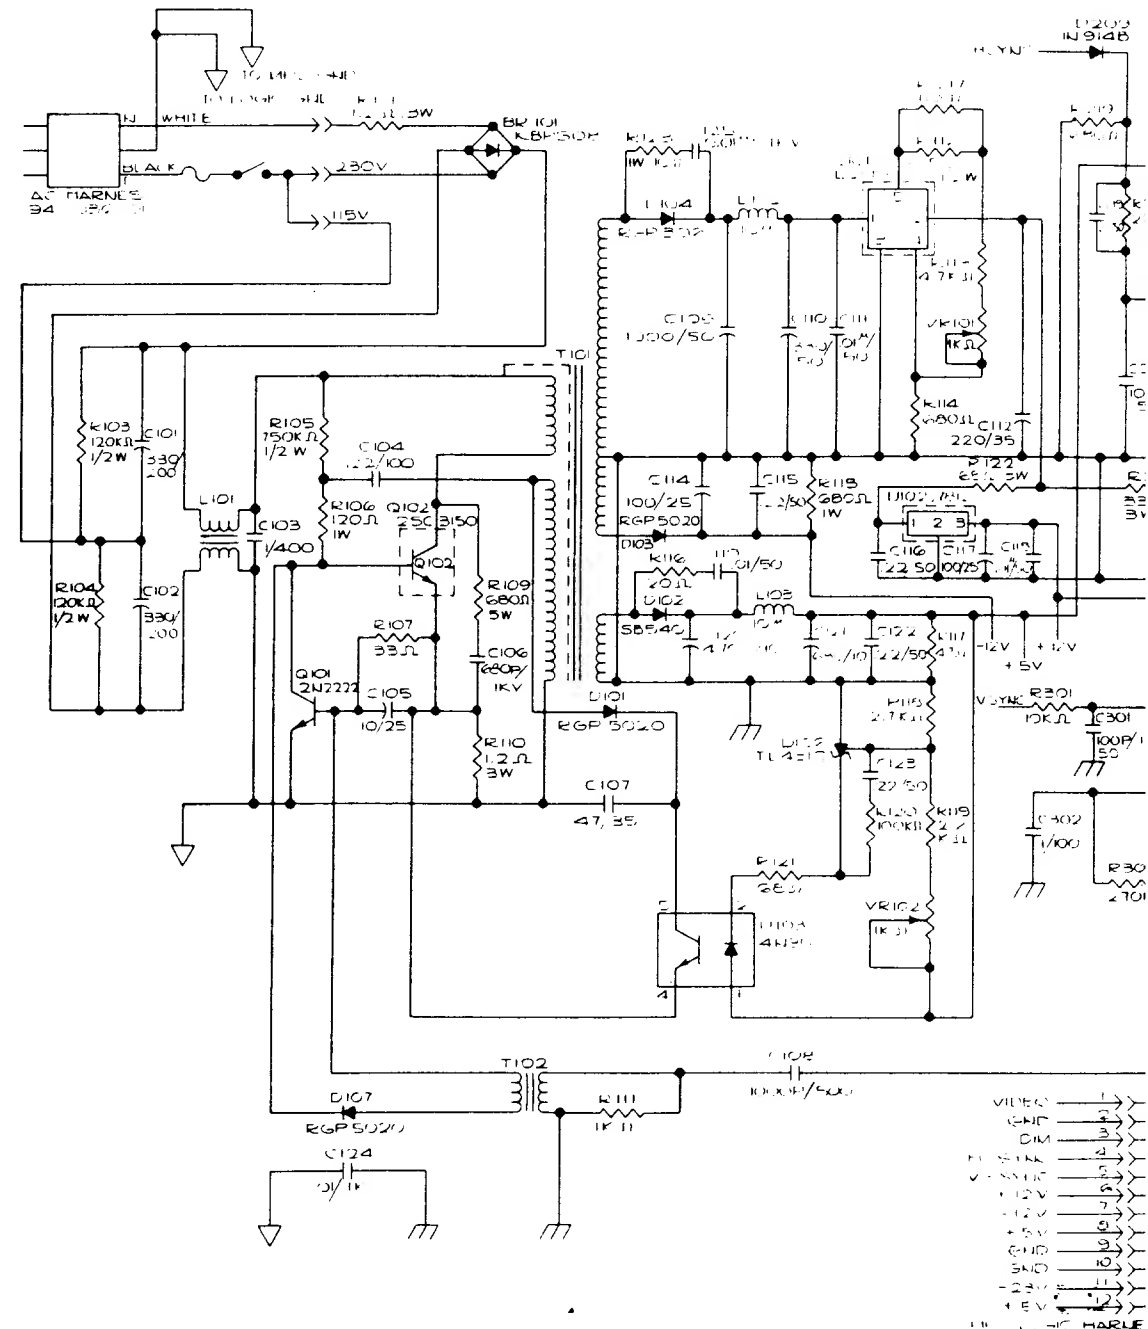




ALJ

VR 101	+23.5V
VR 102	+24.5V
VR 201	+10.0V
VR 301	+15.0V
VR 401	+10.0V
VR 501	+10.0V

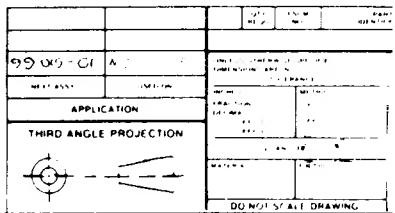



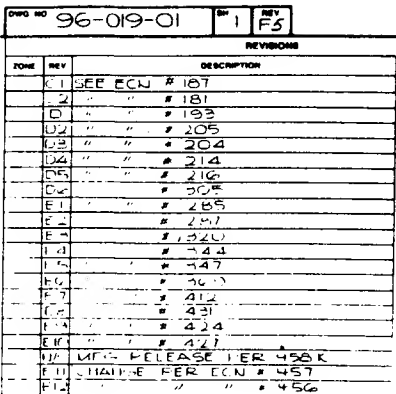

34 - 034 - 01

1	CHANGE PER ECN#465
2	CHANGE PER ECN#486
3	CHANGE PER ECN#505
4	CHANGE PER ECN#506
5	#524
6	ECN#564 HOM(HAIR) ONLY
7	46956 174 ECN#686



## NOTES :


1. ALL RESISTORS ARE 1/4 W, 5% UNLESS OTHERWISE SPECIFIED.
2. ALL CAPACITORS ARE IN UF UNLESS OTHERWISE SPECIFIED.

FUSE : 2A, FOR 115 V AC  
2A, FOR 230 V AC

ADJ. VR101 : +23.5V  
VR102 : +24.5V  
VR201 : FOCUS  
VR202 : SUB-BART  
VR302 : V-MET  
VR303 : V-LIN

D

C

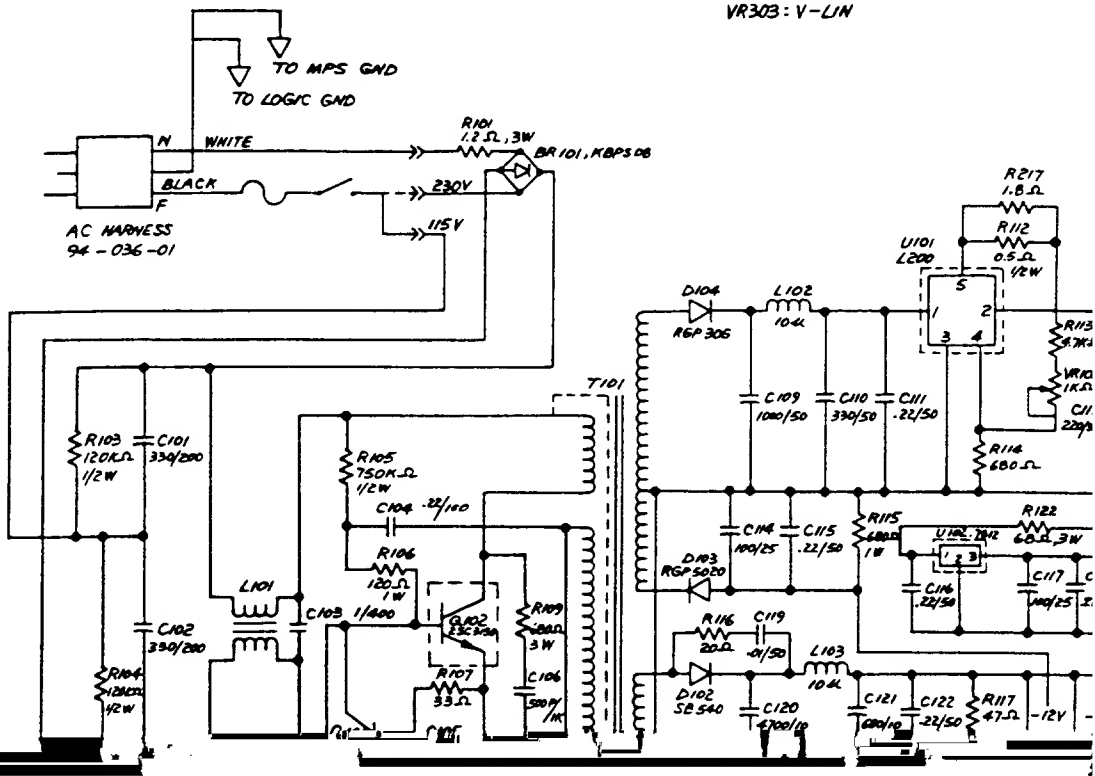











THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO  
HYPER TECHNOLOGY INC. ANY REPRODUCTION, DISSEMINATION  
OR USE IN ANY MANNER IS PROHIBITED WITHOUT THE WRITTEN  
CONSENT OF HYPER TECHNOLOGY INC. ANY OTHERWISE AGREE IN WRITING.

# NOTES:


1. MOUNT LED NEAR FCI EDGE
2. LS157 - COMMON
3. ALL JUMPERS (JF) 01 SPACING
6. TRACE ON SOLDER SIDE

D

C

B

A

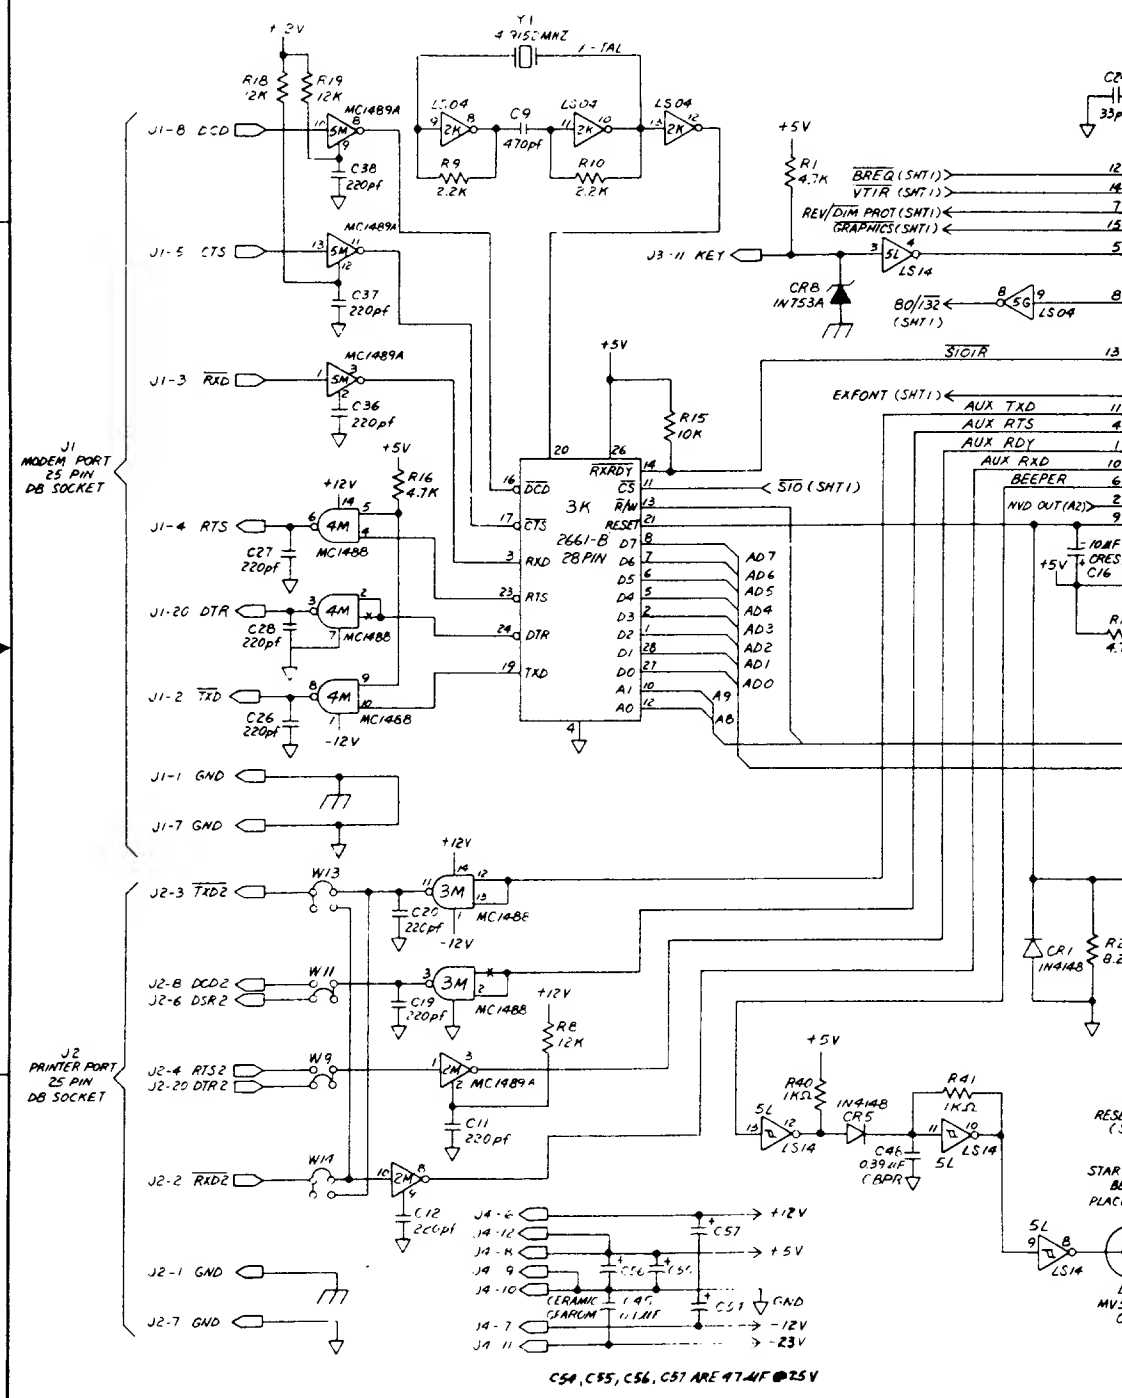


C50, C55, C56, C57 ARE 47µF @ 25V








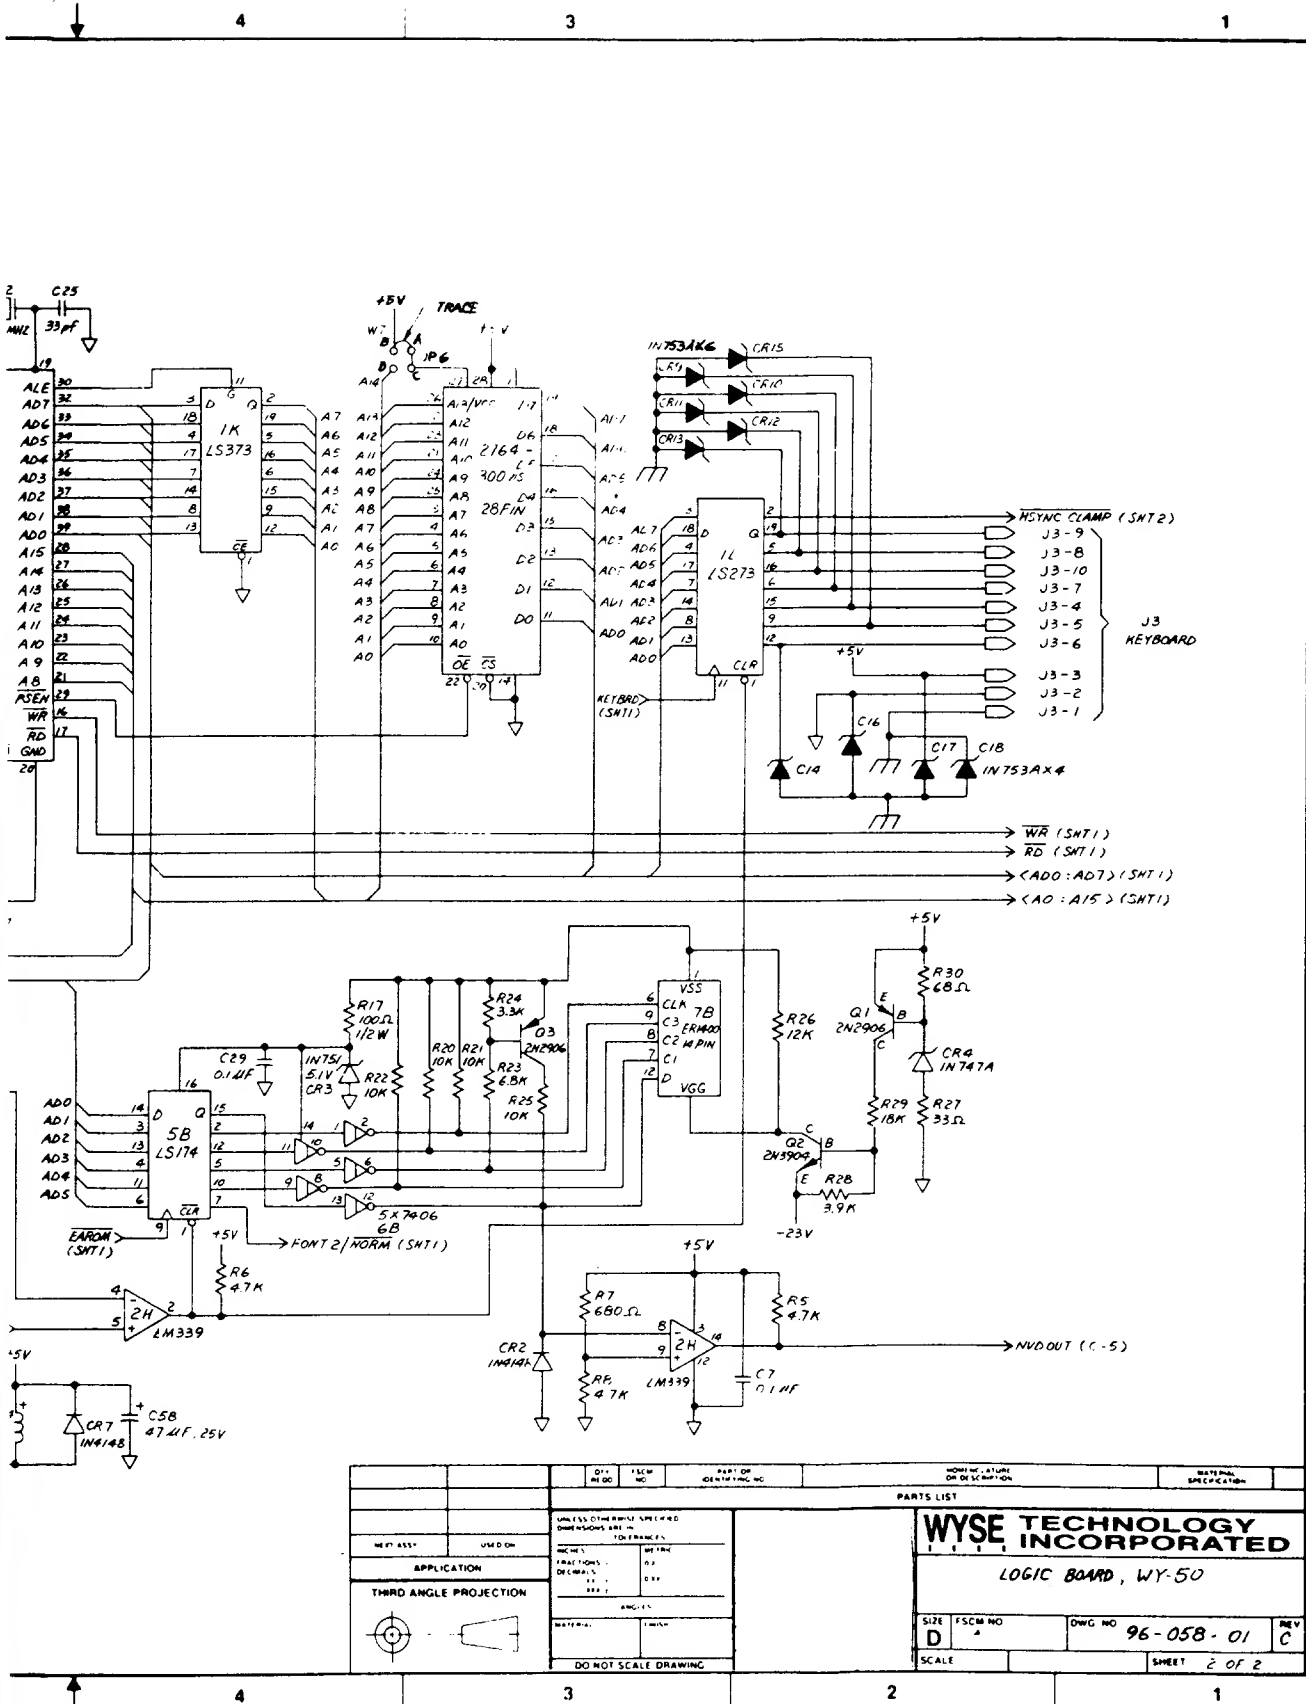




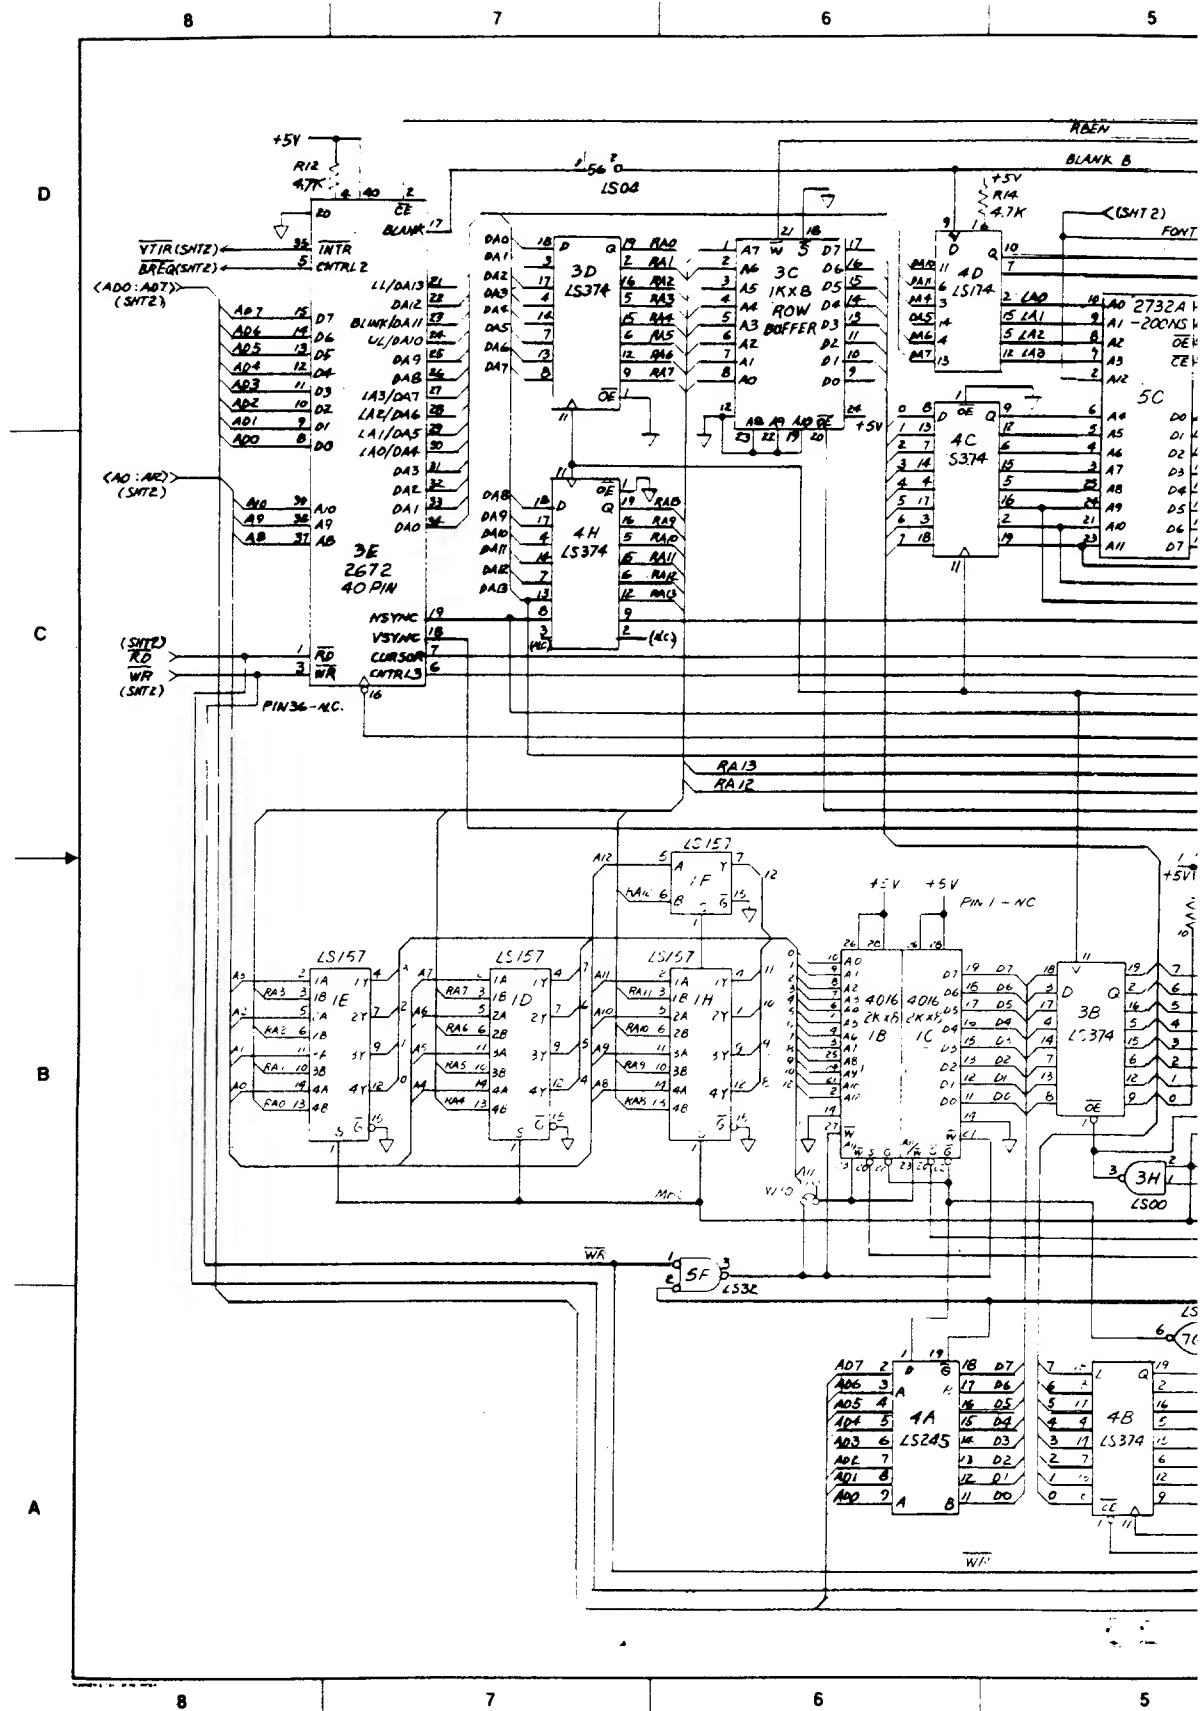








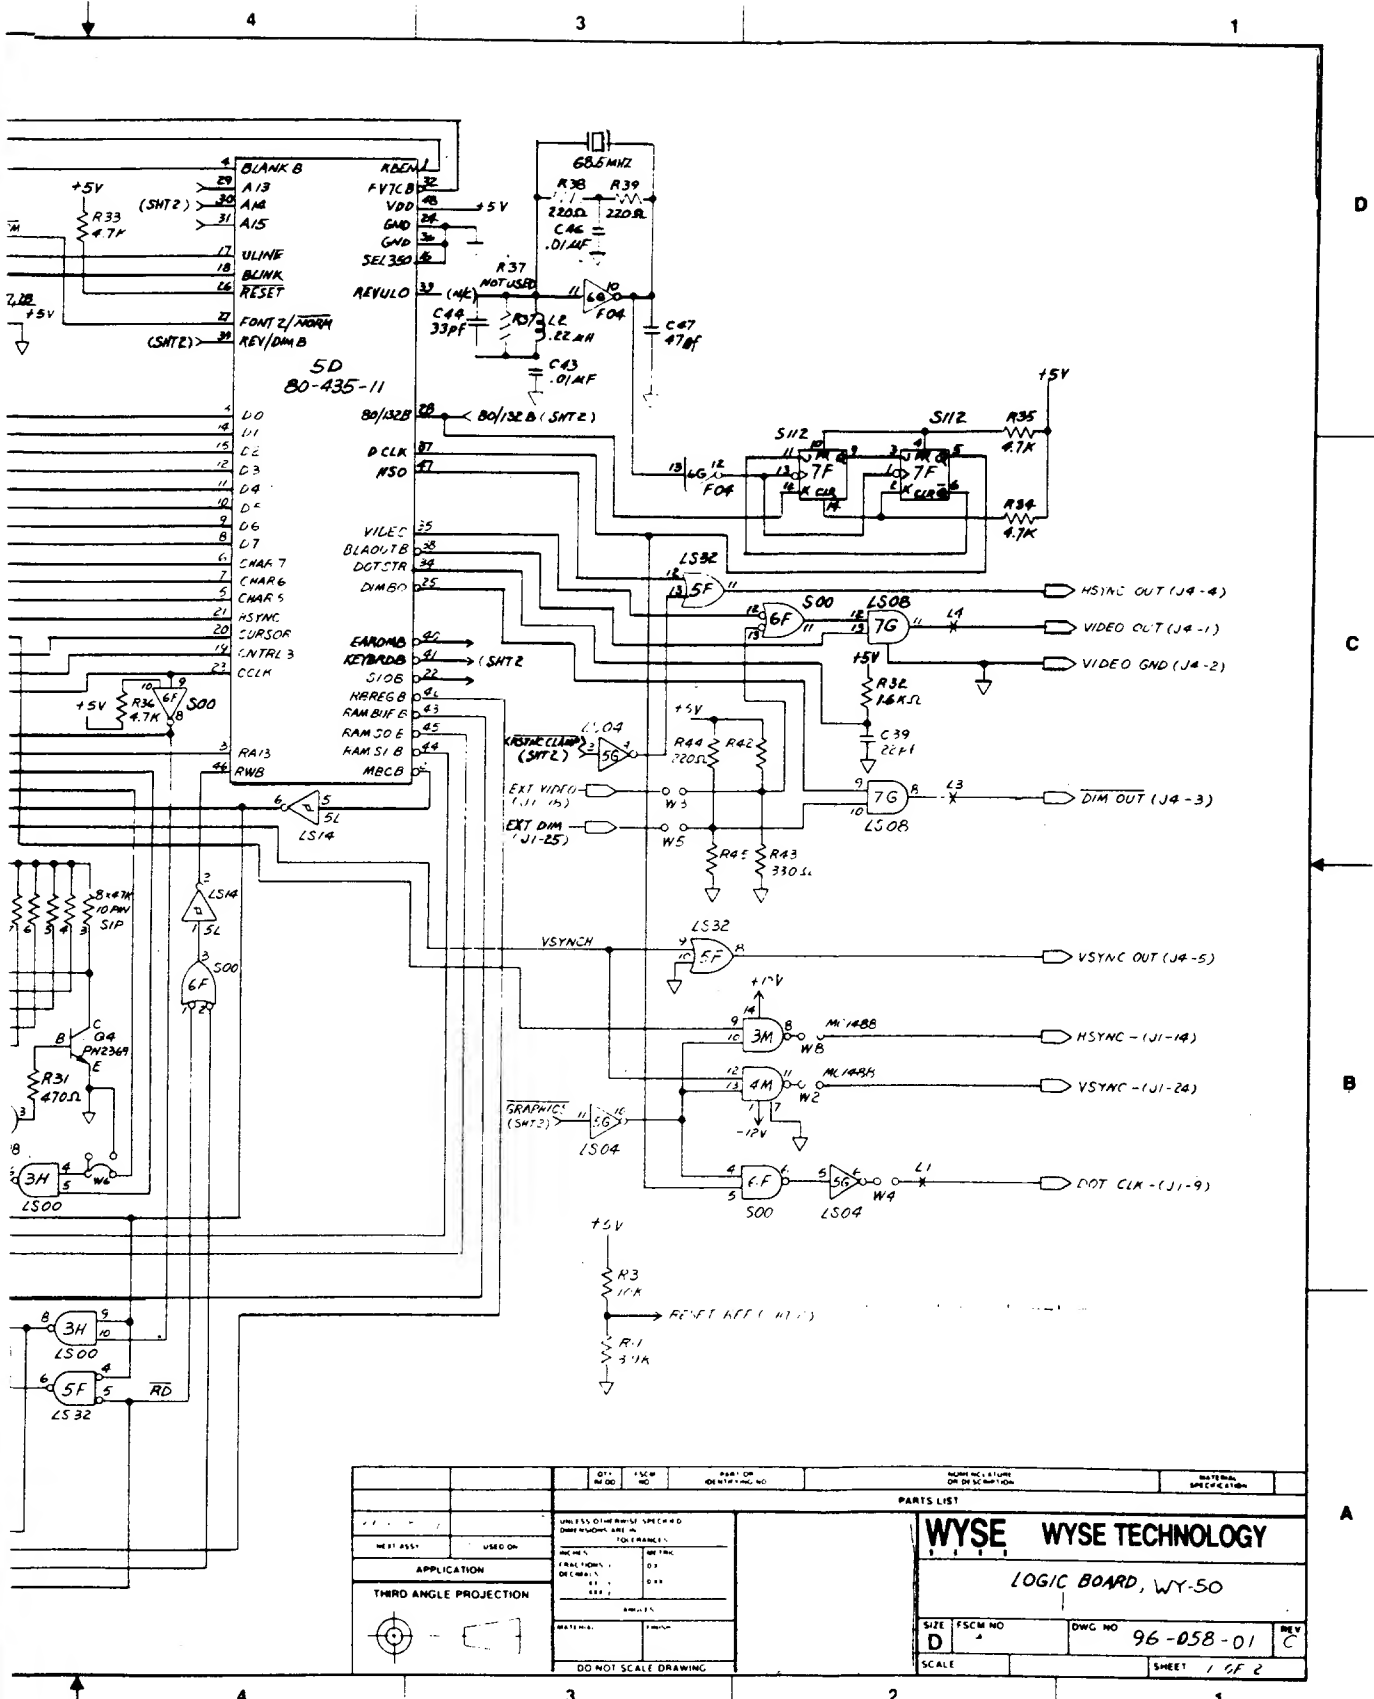




theory of operation 6-4

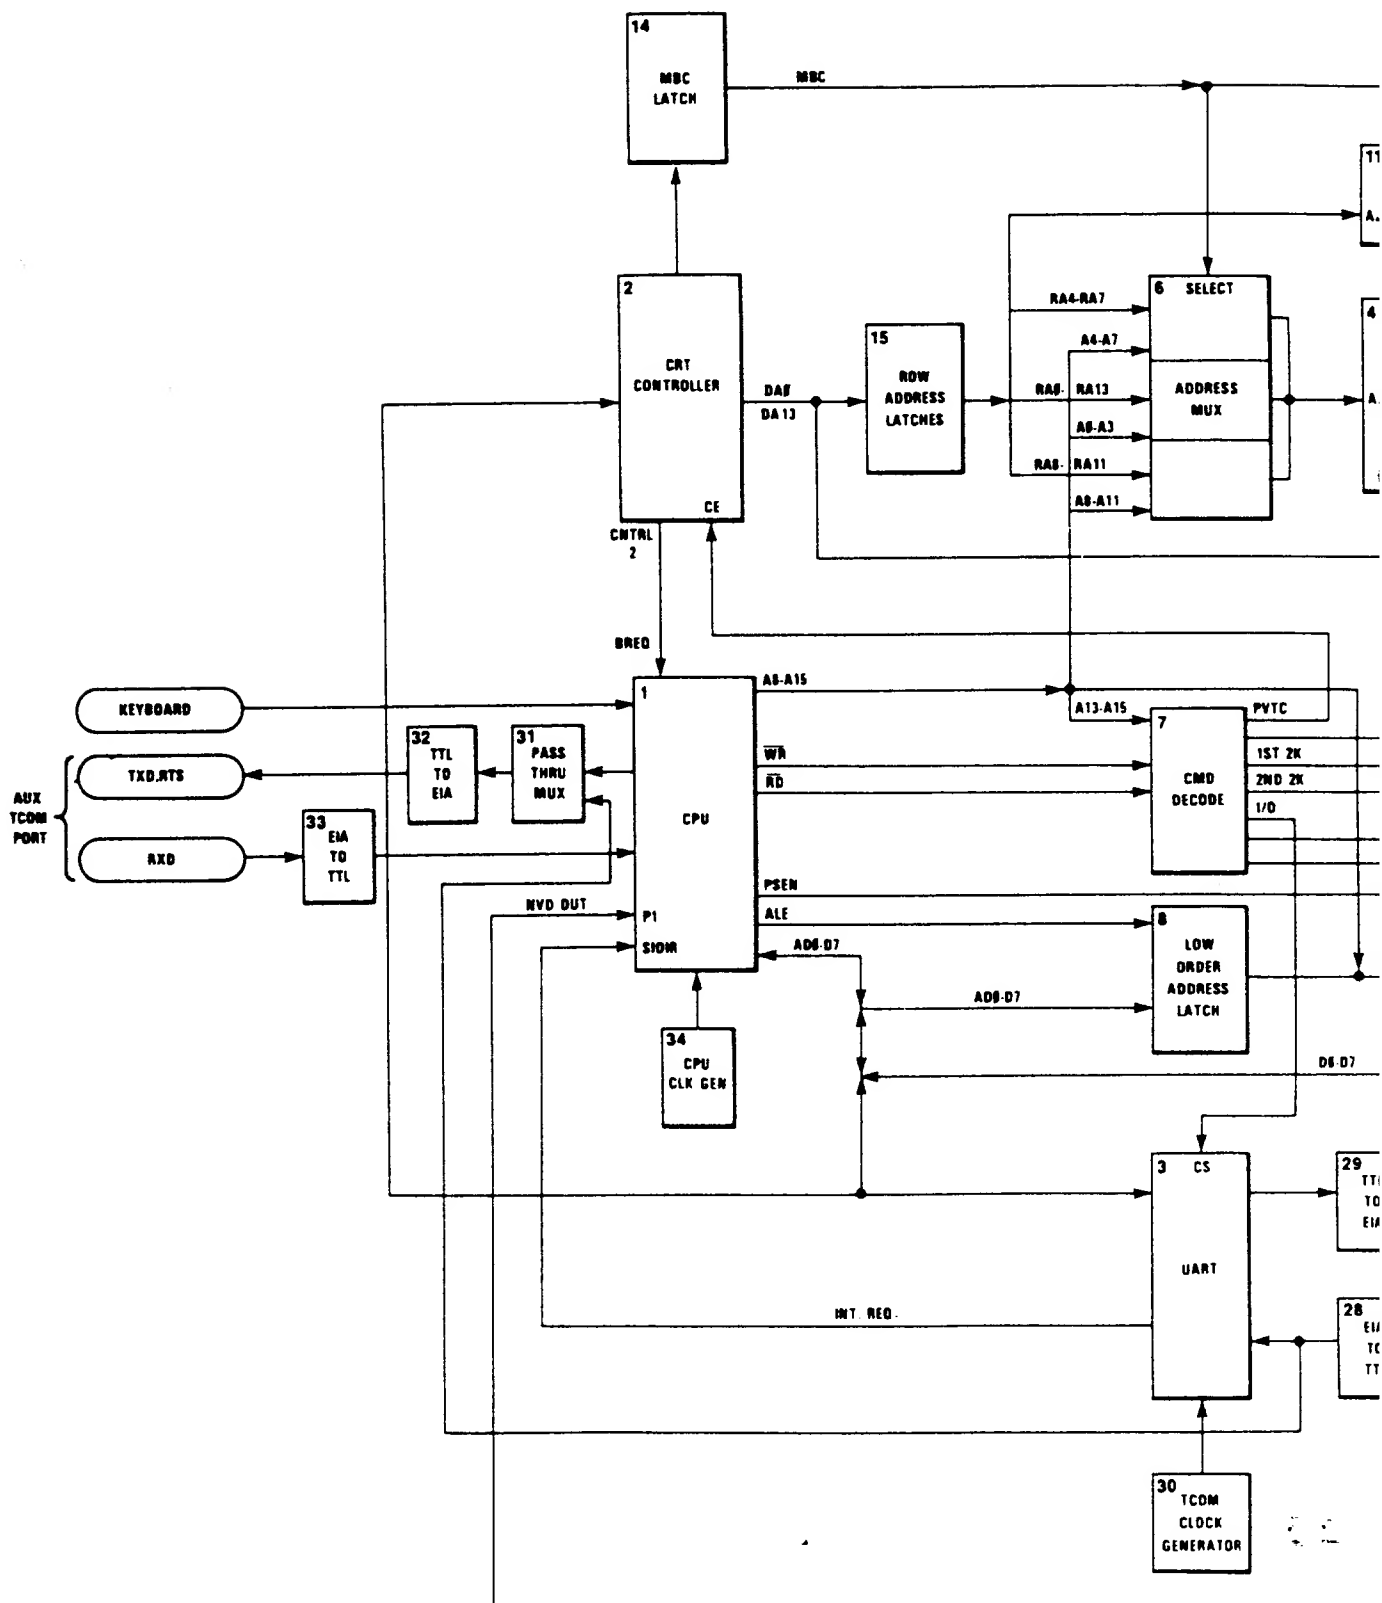





# rocessor PCB Block Diagram

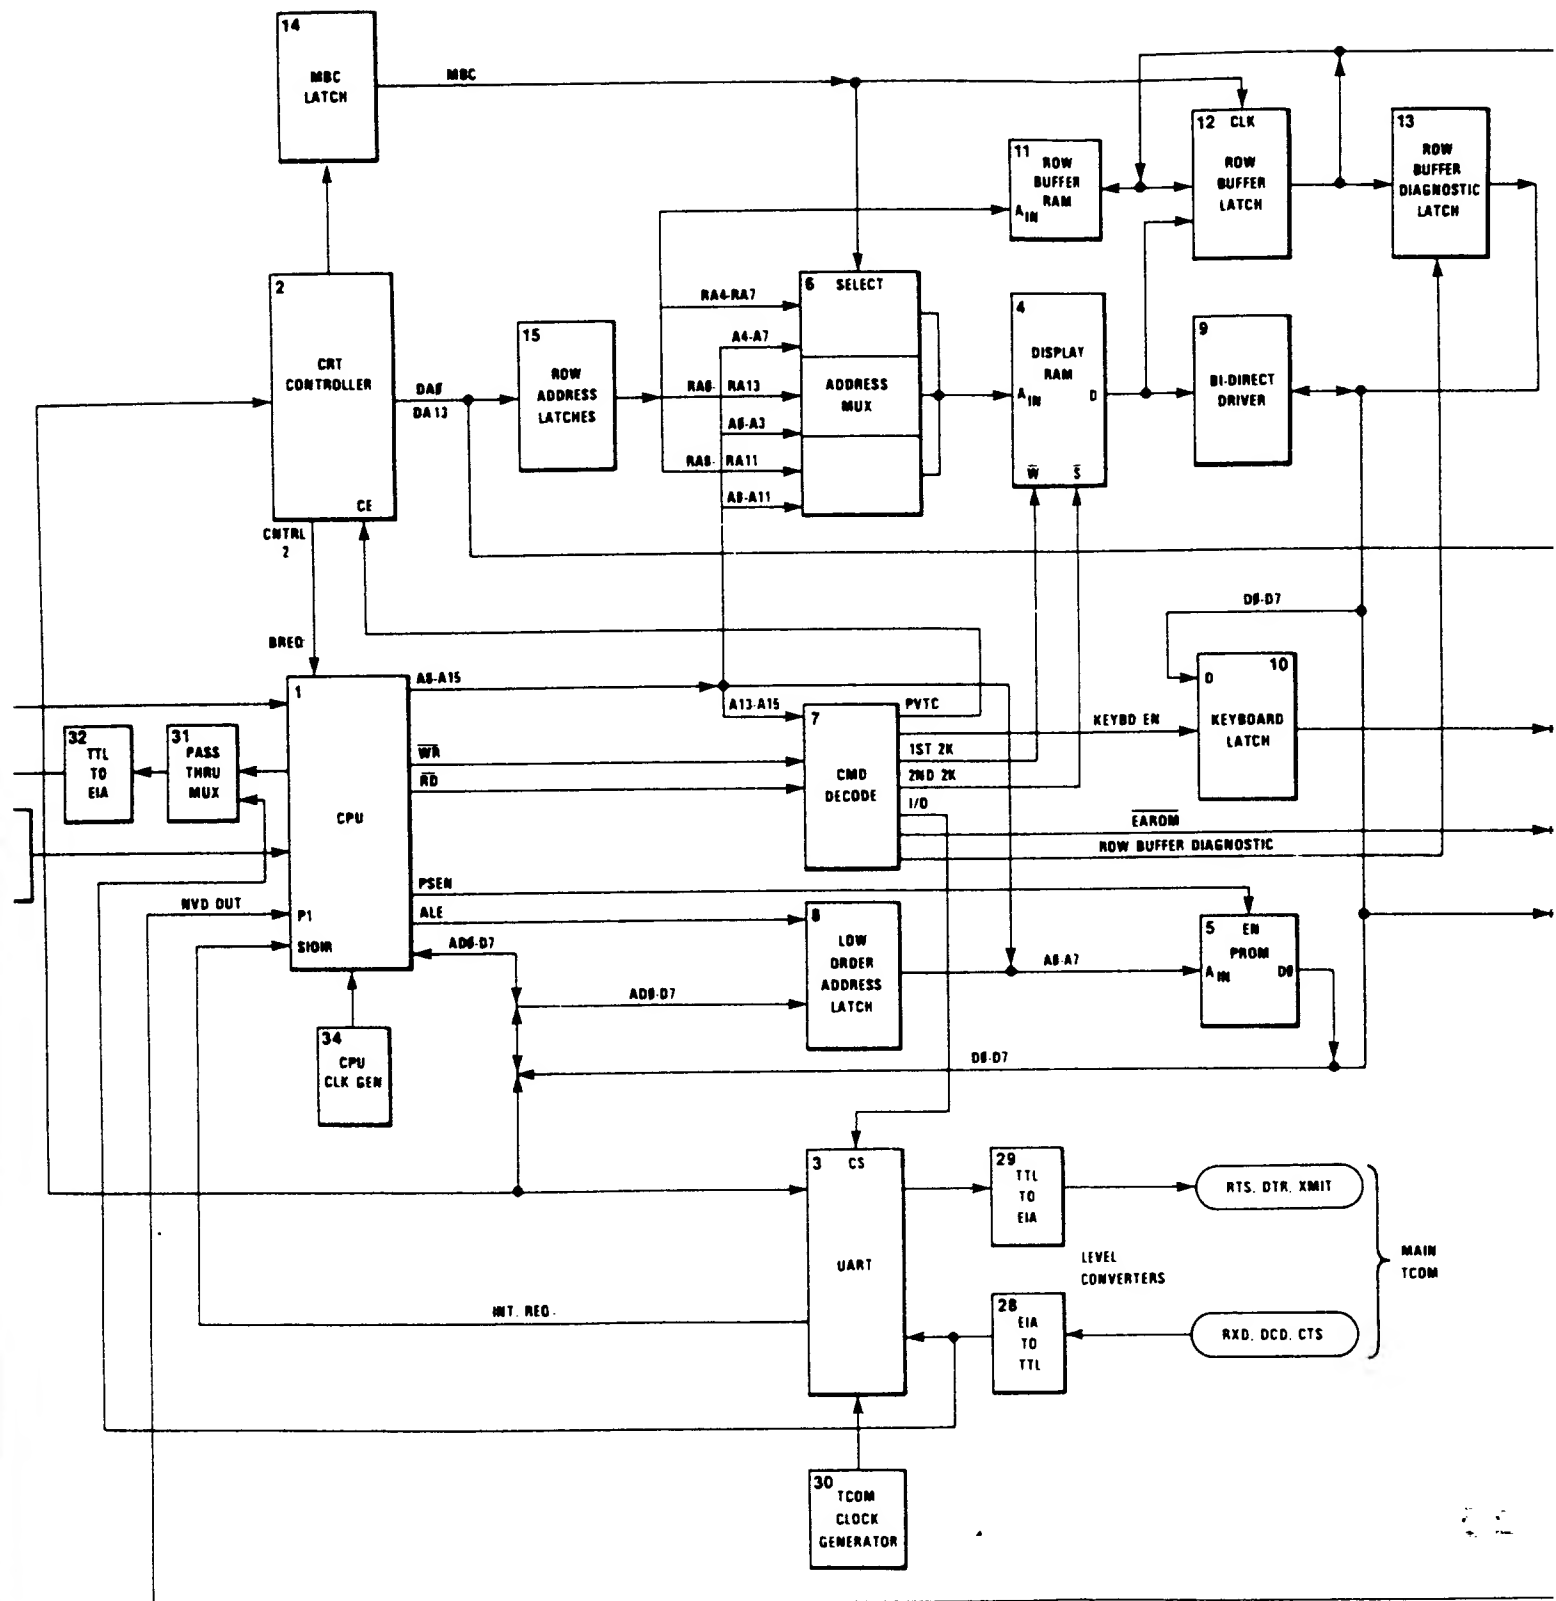



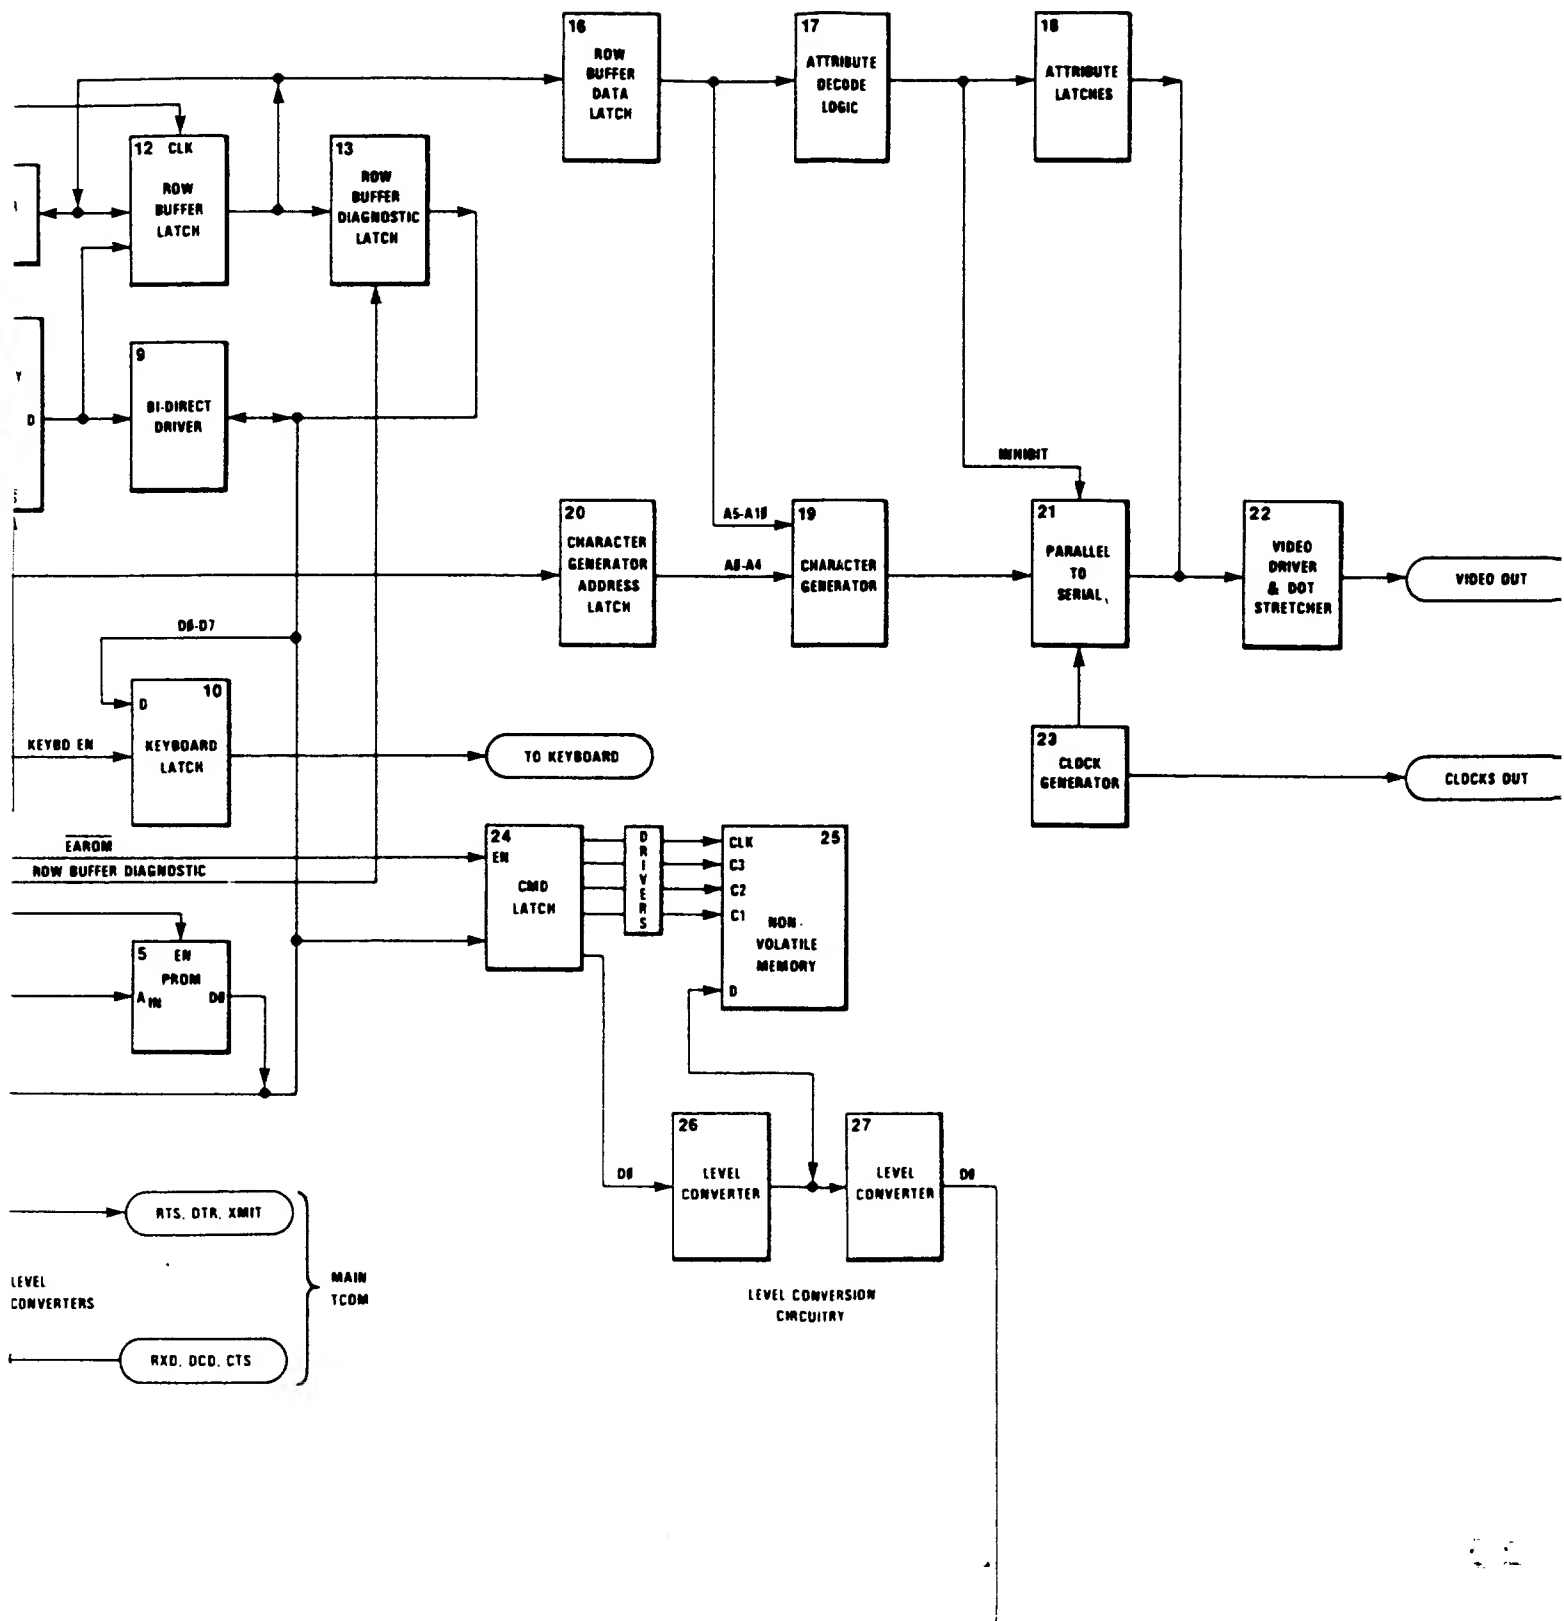




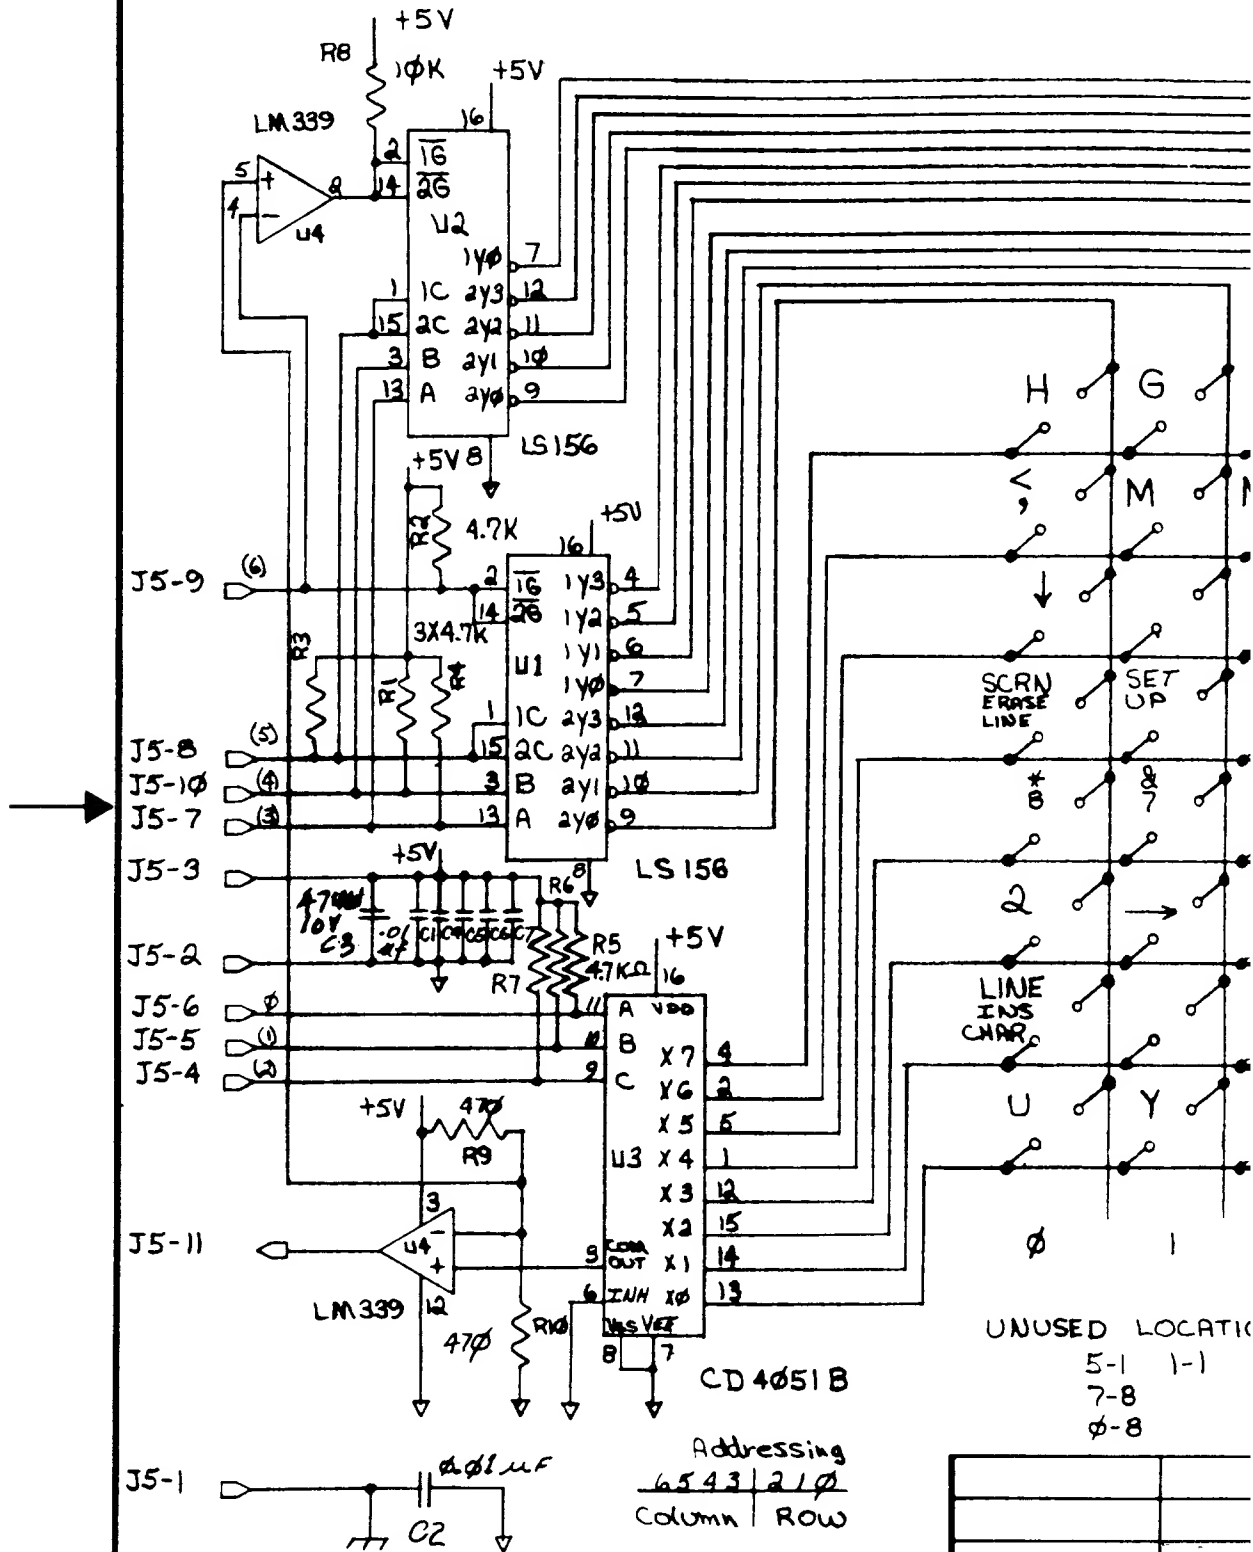



REV 3 Change Pullups to 4.7K  $\Omega$

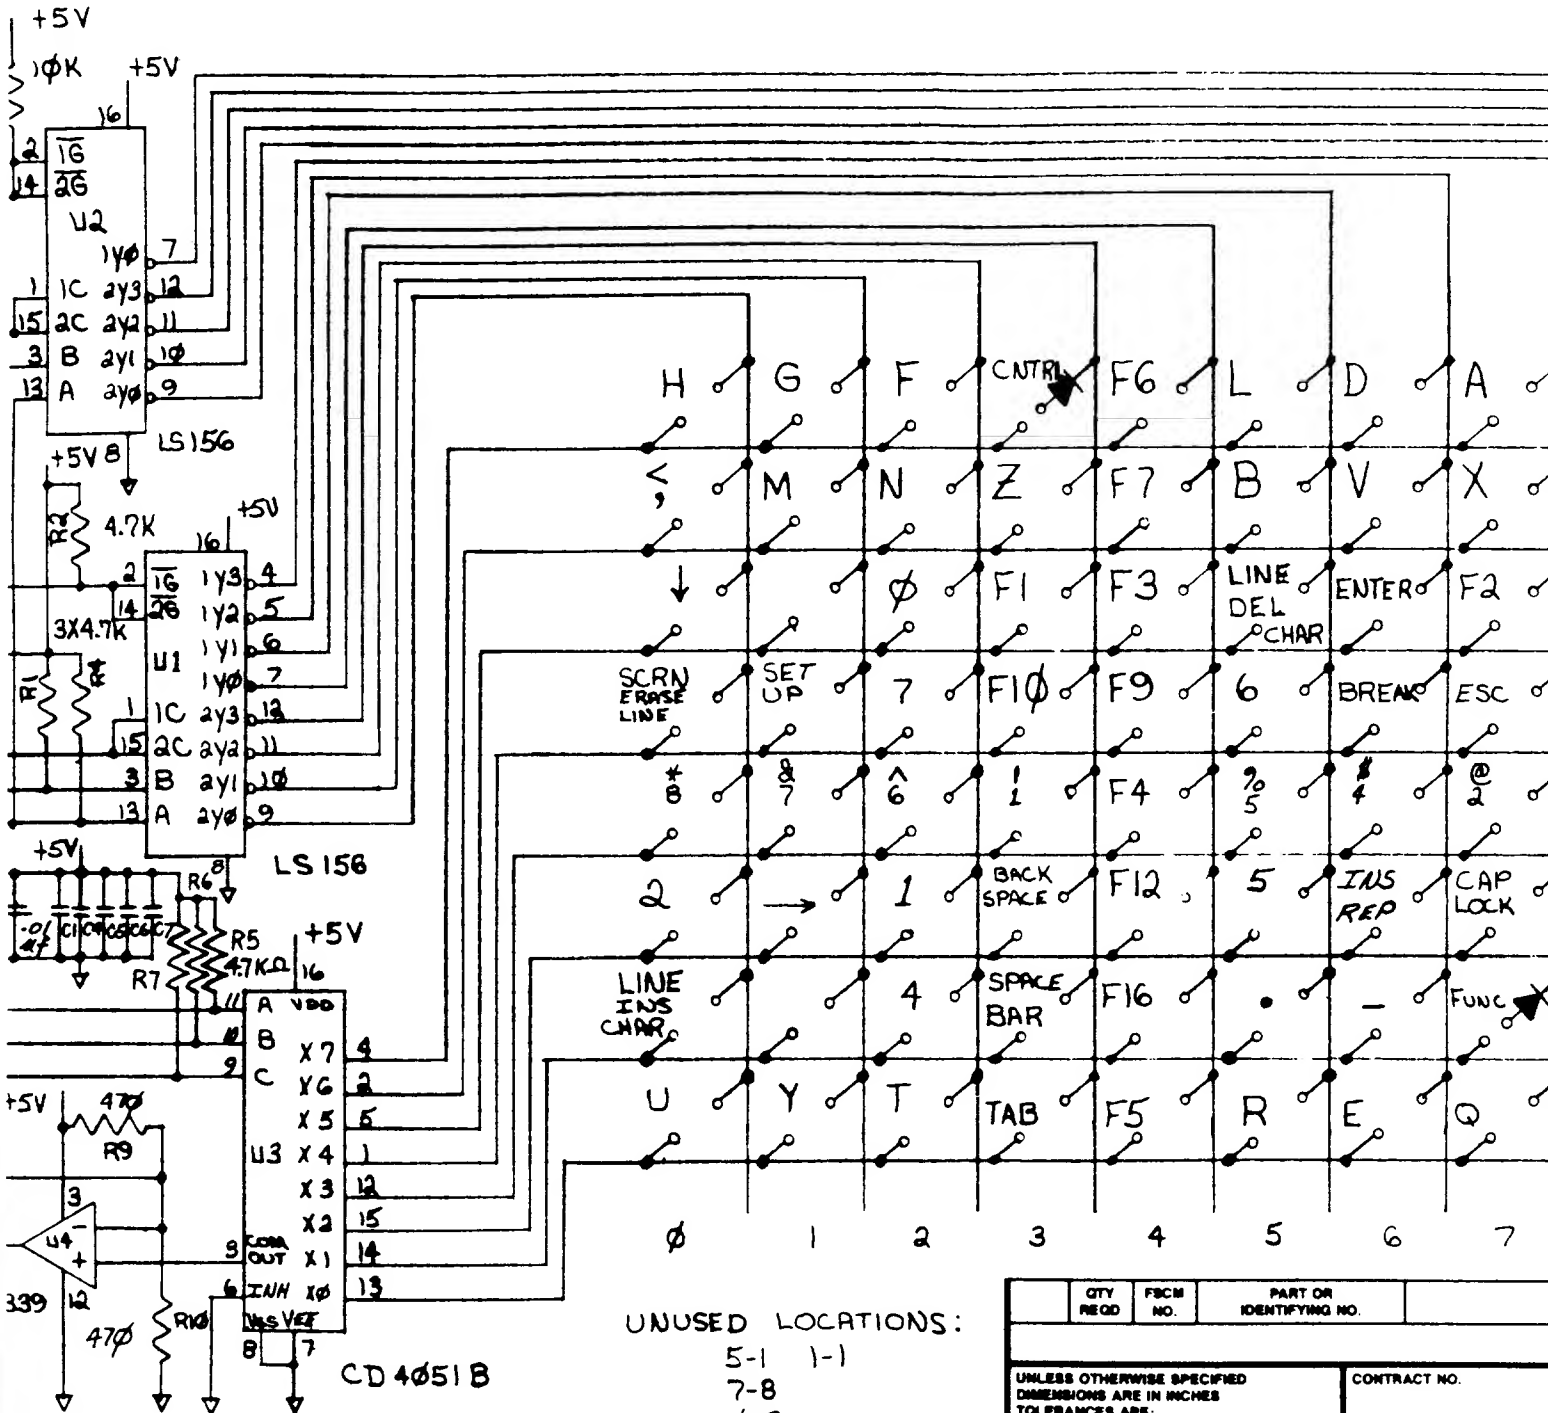

UNUSED LOCATIONS:

5-1 1-1  
7-8  
0-8

Addressing  
6543 | 210  
Column | Row

		±	.XX ±	±	
			.XXX ±		APPROVALS
		MATERIAL			DRAWN
		FINISH			CHECKED
NEXT ASSY	USED ON				ISSUED
APPLICATION		DO NOT SCALE DRAWING			




DWG. NO. SH REV.

Change Pullups to 4.7K $\Omega$

REVISIONS

REV.	DESCRIPTION	DATE	APPROVED
2	Add Command key		

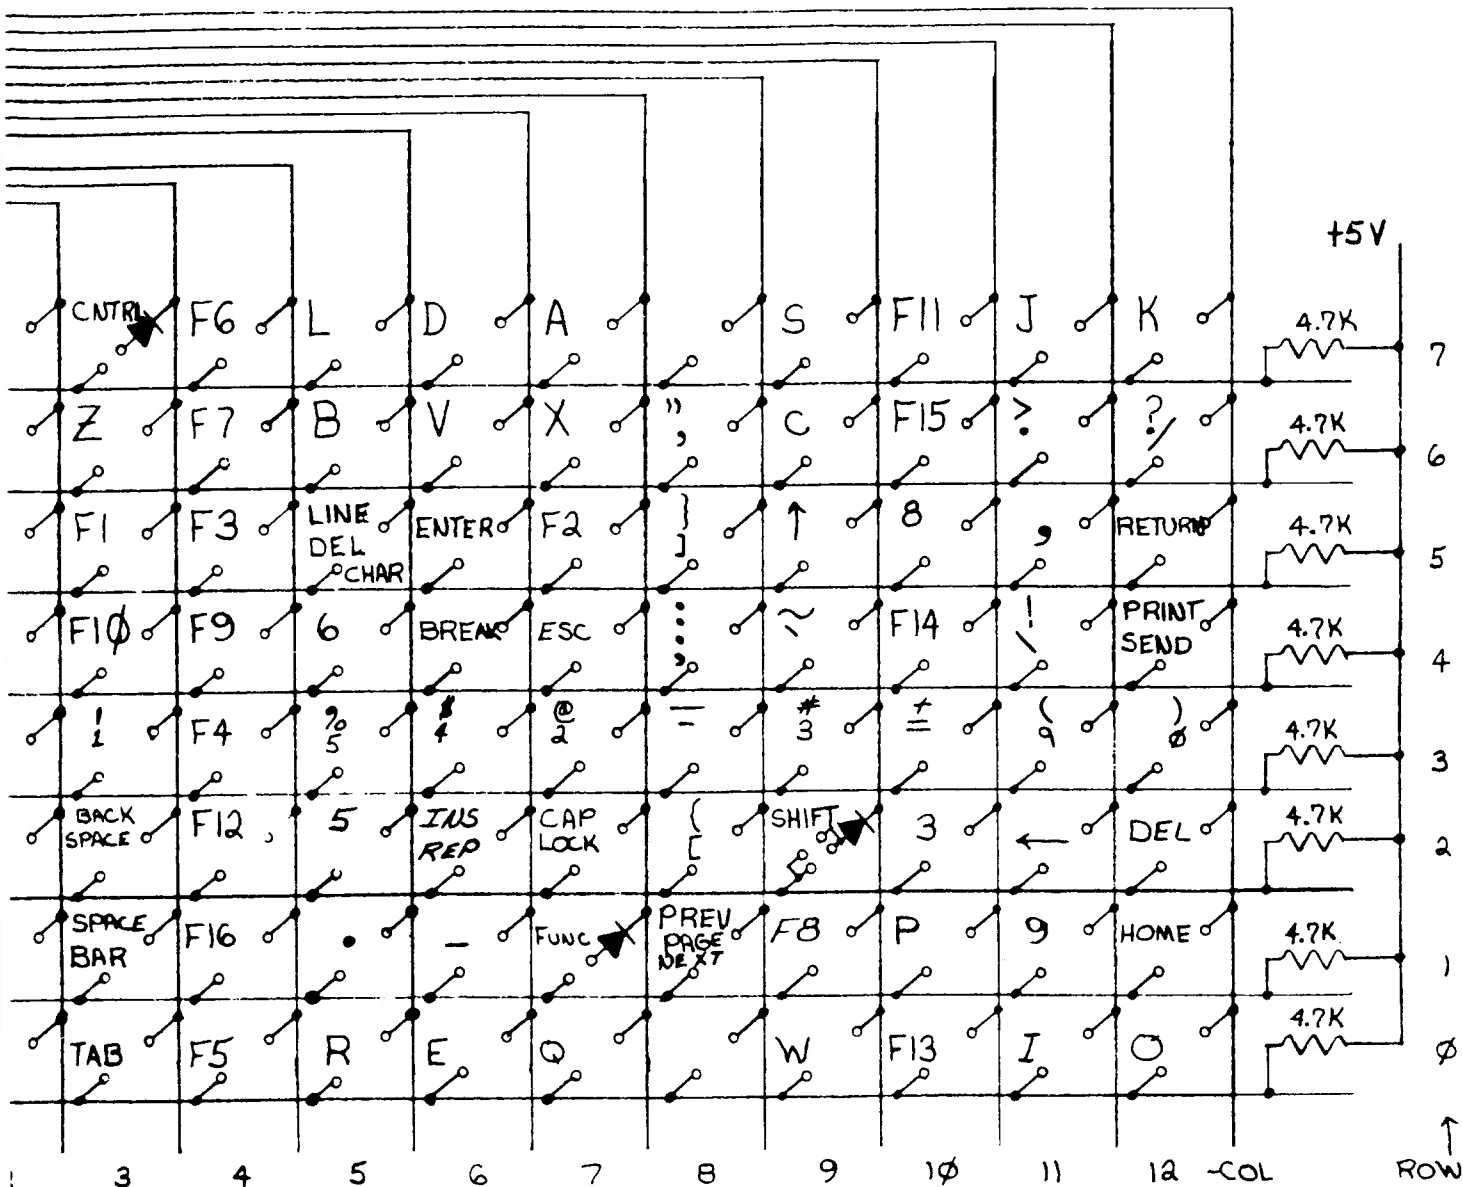

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
PARTS LIST				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS .XX ± .XXX ± DECIMALS .XX ± .XXX ± ANGLES ±		CONTRACT NO. APPROVALS DATE DRAWN CHECKED ISSUED		
MATERIAL FINISH		WYSE TECHNOLOGY KEYBOARD SCHEMATIC SIZE B FSCM NO. DWG. NO. 96-013-01 REV. D		
DO NOT SCALE DRAWING		SCALE SHEET 19/1		





NEXT ASSY	USED ON
APPLICATION	





DWG. NO.	SH
----------	----

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.							
<p>UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:</p> <table border="1"><tr><td>FRACTIONS</td><td>DECIMALS</td><td>ANGLES</td></tr><tr><td><math>\pm</math></td><td><math>.XX \pm</math> <math>.XXX \pm</math></td><td><math>\pm</math></td></tr></table>			FRACTIONS	DECIMALS	ANGLES	$\pm$	$.XX \pm$ $.XXX \pm$	$\pm$	CONTRACT NO.
			FRACTIONS	DECIMALS	ANGLES				
$\pm$	$.XX \pm$ $.XXX \pm$	$\pm$							
MATERIAL			APPROVALS						
			DRAWN <i>M. &amp; Bick</i>						
FINISH			CHECKED						
			ISSUED						
APPLICATION			DO NOT SCALE DRAWING						

NEXT ASSY	USED ON
APPLICATION	





DWG. NO.

SH

REV.

## REVISIONS

REV.	DESCRIPTION	DATE	APPROVED
B	Rev Dot CLK Oscillator, Inhibit H-Sync on Power-UP Replace CLK w/ Dot CLK on graphics Interface		1
C	Add 5.1V Zener & 100 $\Omega$ Res to E2ROMCKT.		
D	Add 1 ply. to H-Sync Separate GND for Video to monitor.		
D1	change R5, R24, R25 to 12K ohm 1/4W 5%		
D2	Remove Sockets, 3L, 3J, 6J		
D3	Location 3F changed to 1K x 8 static Ram Sy 2138A		

QTY  
REQDPSCM  
NO.PART OR  
IDENTIFYING NO.NOMENCLATURE  
OR DESCRIPTIONMATERIAL  
SPECIFICATION

## PARTS LIST

UNLESS OTHERWISE SPECIFIED  
DIMENSIONS ARE IN INCHES  
TOLERANCES ARE:FRACTIONS DECIMALS ANGLES  
 $\pm$  .XX  $\pm$   $\pm$   
 $\pm$  .XXX  $\pm$ 

MATERIAL

FINISH

DO NOT SCALE DRAWING

CONTRACT NO.

APPROVALS

DATE

DRAWN *MMB*

6-28-83

CHECKED

ISSUED



WYSE TECHNOLOGY

LOGIC BOARD, WY-50

SIZE

PSCM NO.

DWG. NO.

REV.

B


96-012-01

D3

SCALE


SHEET 0 of 7



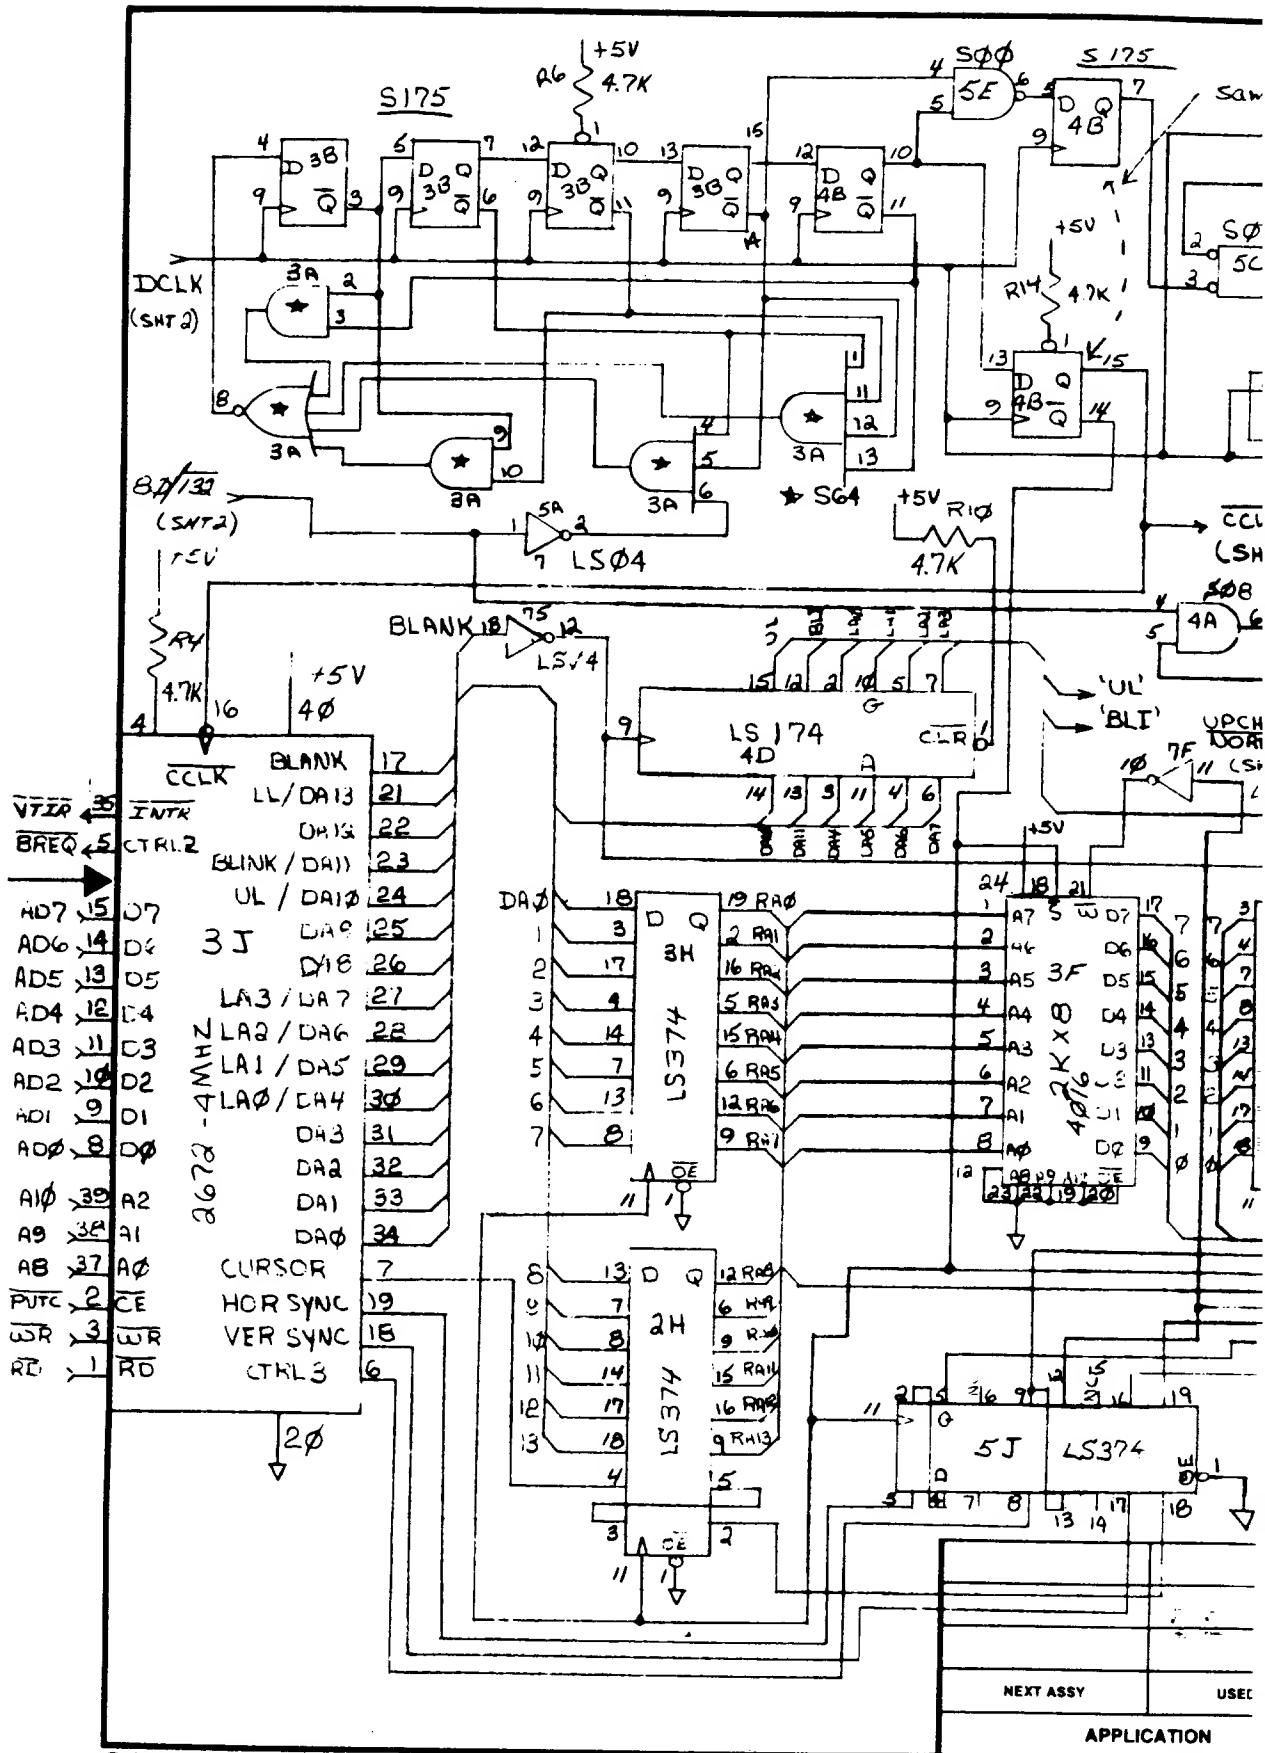



DWG. NO.

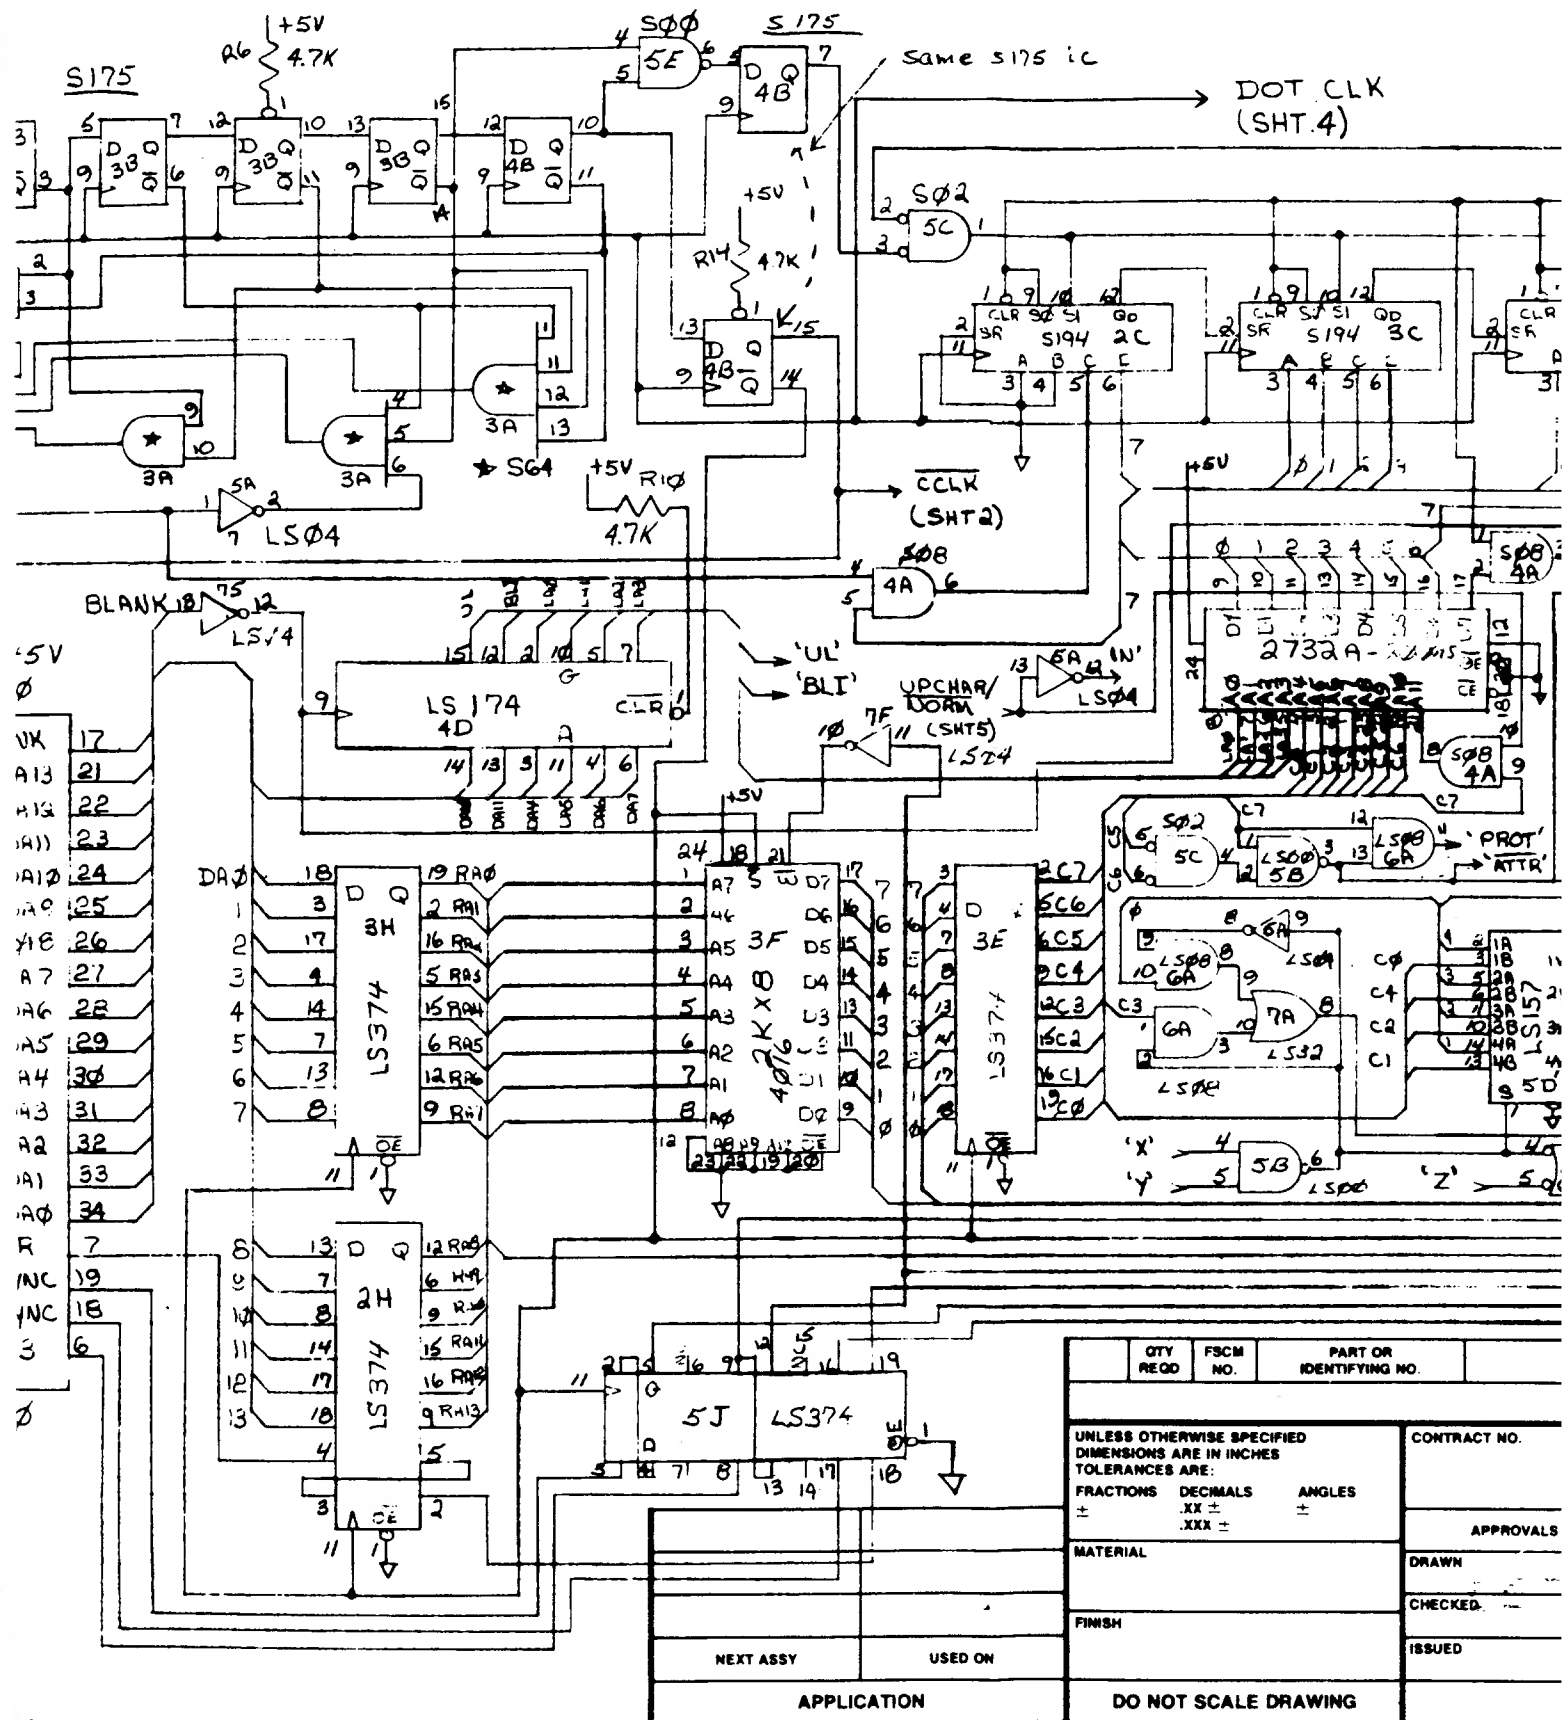



DWG. NO.

SH

REV.

## REVISIONS


REV.

DESCRIPTION

DATE

APPROVED

5175 IC

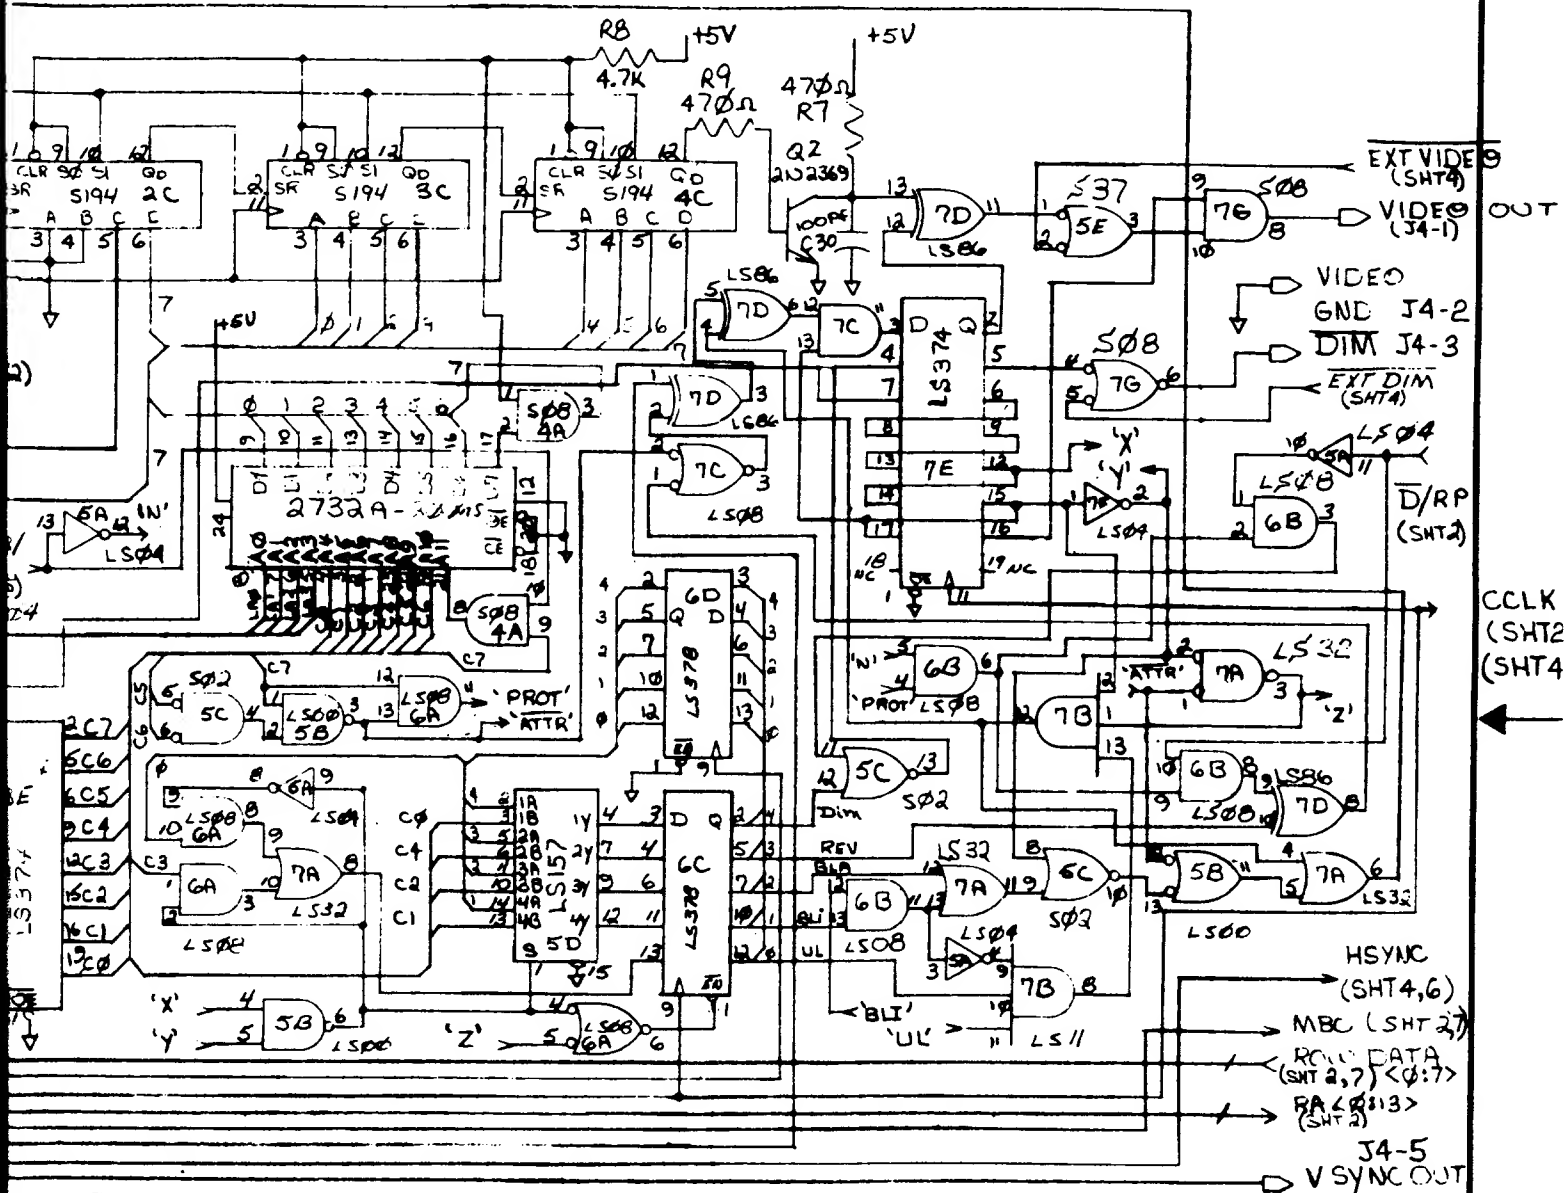DOT CLK  
(SHT.4)

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
<b>PARTS LIST</b>				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		CONTRACT NO.		
FRACTIONS ±	DECIMALS .XX ± .XXX ±	ANGLES ±		
MATERIAL		APPROVALS	DATE	
FINISH		DRAWN		
		CHECKED		
		ISSUED		
DO NOT SCALE DRAWING		SIZE	FSCM NO.	DWG. NO.
		B		96-012-01
		SCALE	SHEET 1 OF 7	


WYSE  
TECHNOLOGY

WYSE TECHNOLOGY

LOGIC BOARD, WY50



1. 1/4 LS157 ONLY LOADED  
W/ 8KX8 RAM. NORMALLY OMITTED.
2. LAYOUT RAM AREA FOR 2KX8 OR 8KX8.  
(OKI MSM 5188RS/AS - 28 PIN)  
USE TRACE IN 2KX8  
JUMPER POSITION:
3. PROGRAM EPROM  
CAN BE 4KX8,  
8KX8 OR 16KX8.

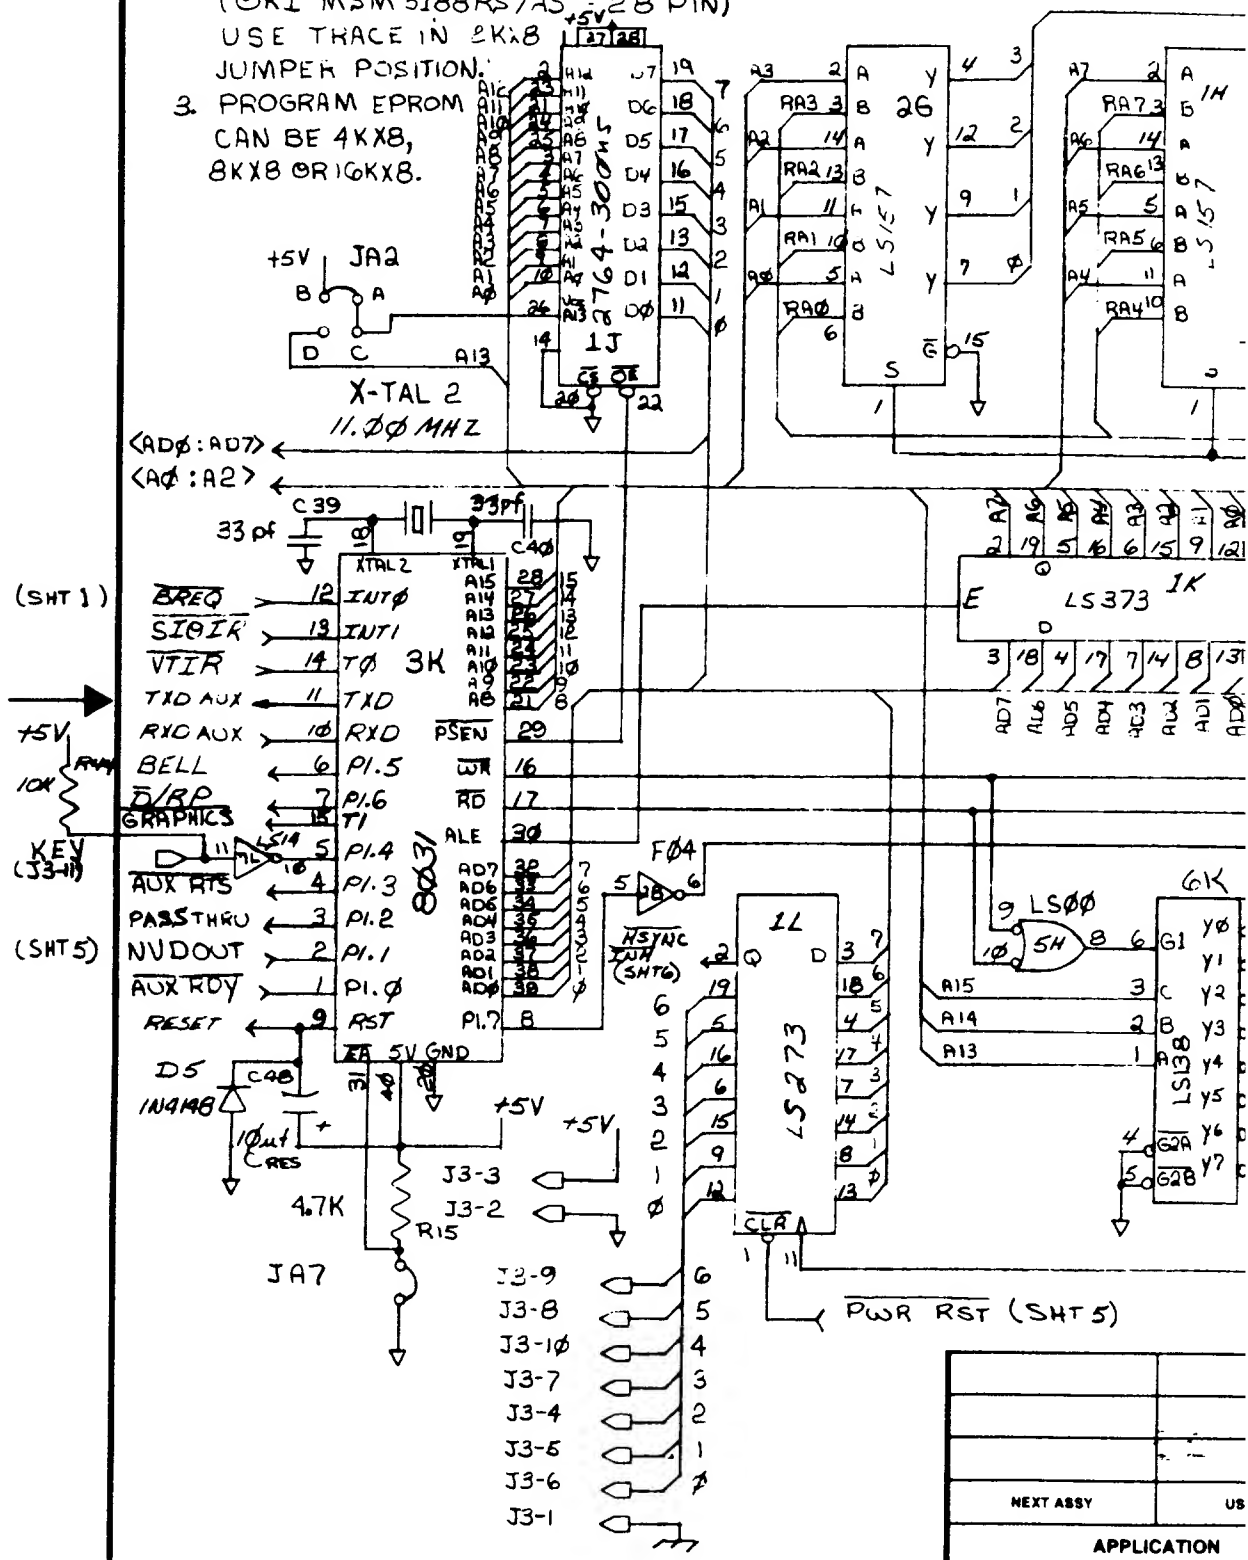



DWG. NO.

5H

NOTE 1








57 ONLY LOADED  
XB RAM. NORMALLY OMITTED.  
RAM AREA FOR 2KXB OR 8KXB  
WSM 5188RS/AS (28 PIN)  
TRACE IN 2KXB

POSITION:  
IM EPROM  
4KXB,  
16KXB.

JA2  
A  
C  
X-TAL 2  
11.00 MHZ

39  
2 INT0  
3 INT1  
4 T0 3K  
5 TXD  
6 RXD PSEN  
7 PI.5 WR  
8 PI.6 RD  
9 PI.4 ALE  
10 PI.3  
11 PI.2  
12 PI.1  
13 PI.0  
14 RST  
15 5V GND

7K  
J3-3  
J3-2  
R15  
7  
J3-9  
J3-8  
J3-10  
J3-7  
J3-4  
J3-5  
J3-6  
J3-1

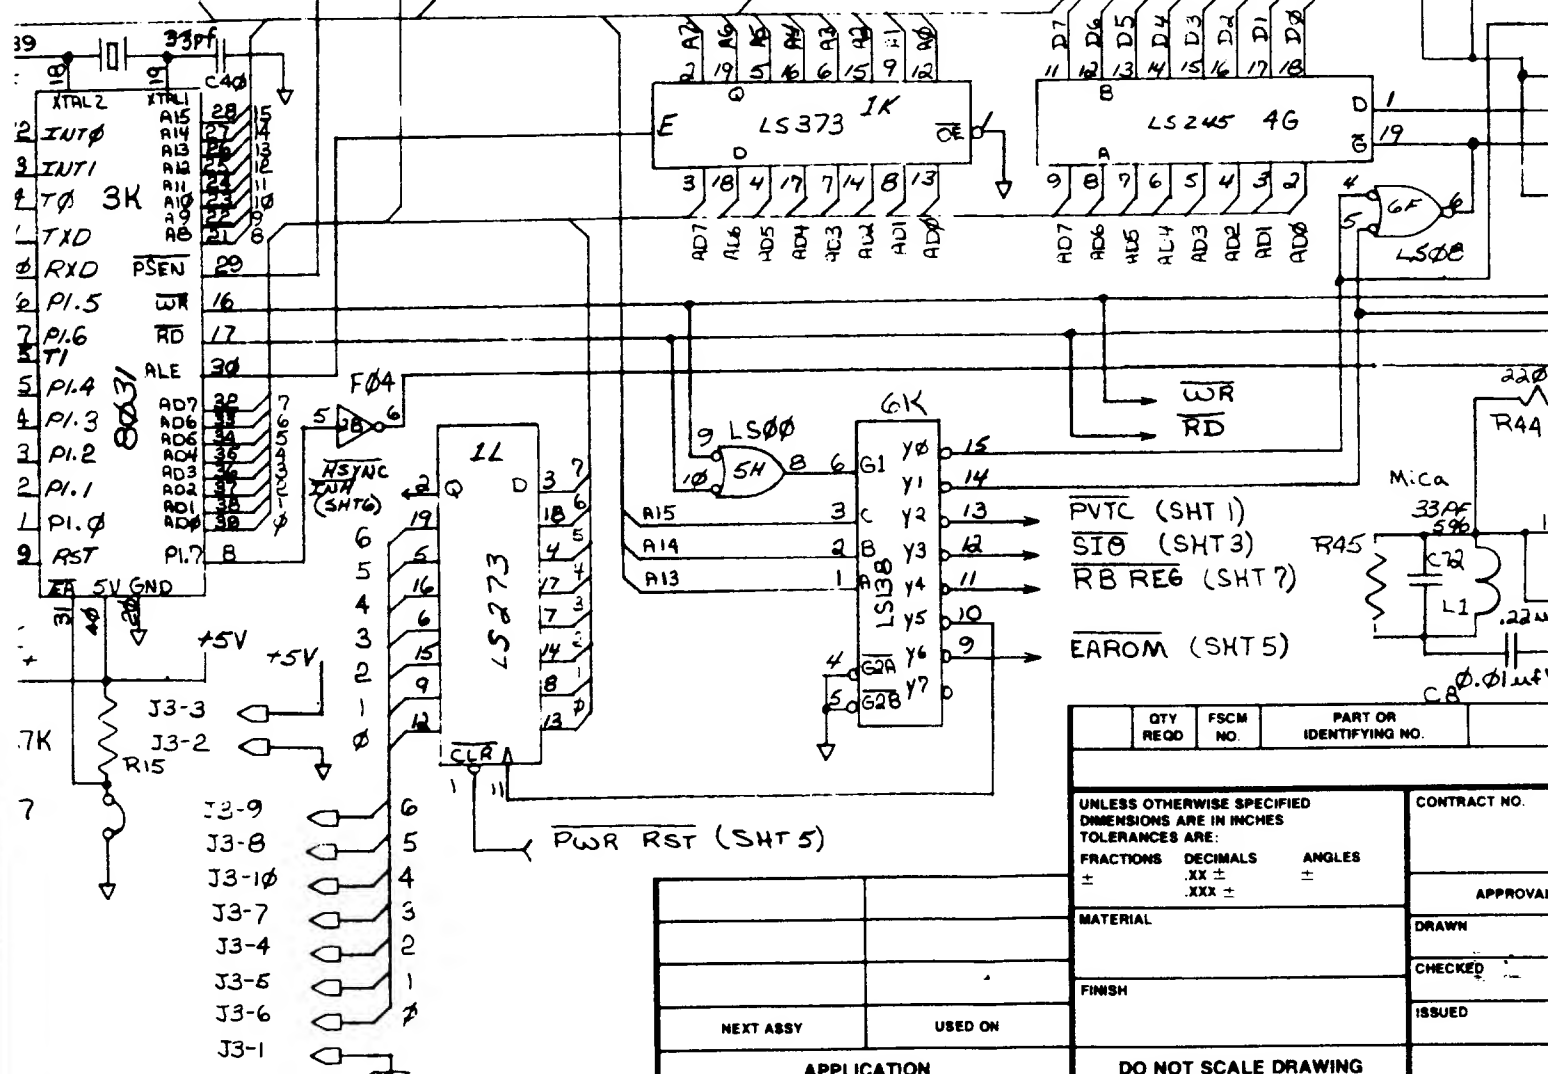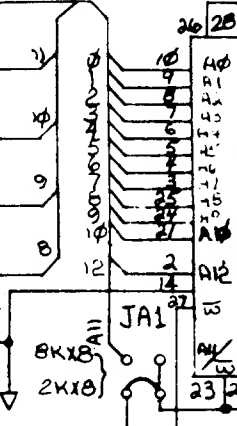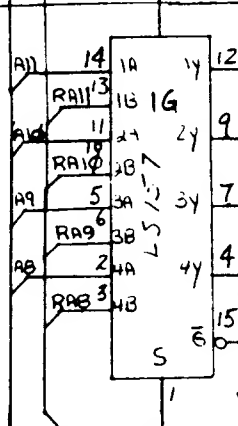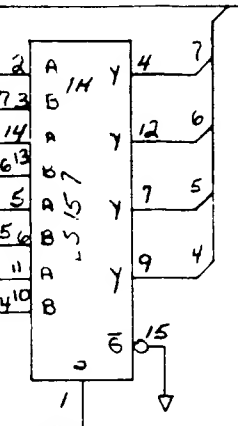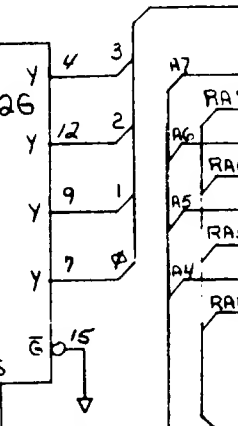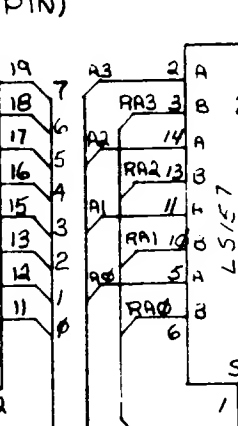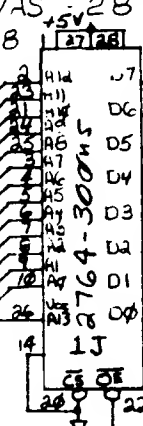

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	CONTRACT NO.
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:			APPROVALS
FRACTIONS	DECIMALS	ANGLES	
±	.XX ±	±	DRAWN
MATERIAL			CHECKED
FINISH			ISSUED
APPLICATION			DO NOT SCALE DRAWING








## 51:

- J2:

J2:

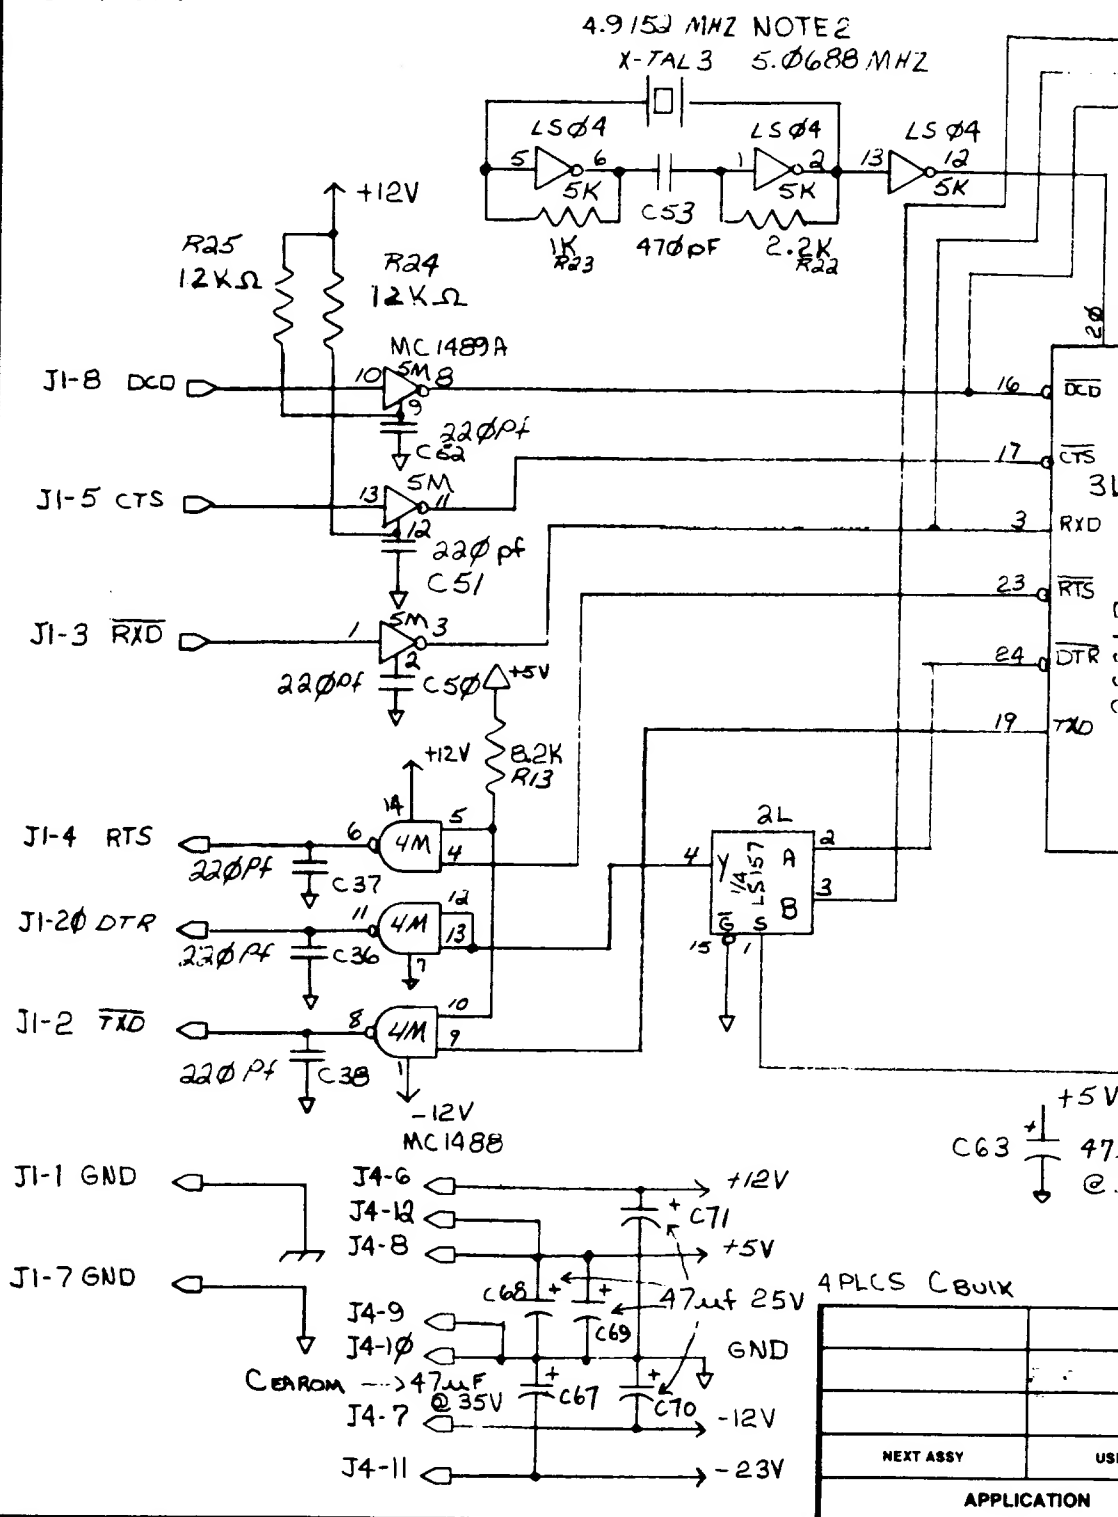



J1: 25 Pin D      MODEM PORT  
J2: 25 Pin D      PRINTER PORT





DWG. NO.

SH

REV.

REVISIONS

REV.


DESCRIPTION

DATE

APPROVED

Pin D MODEM PORT

Pin D PRINTER PORT

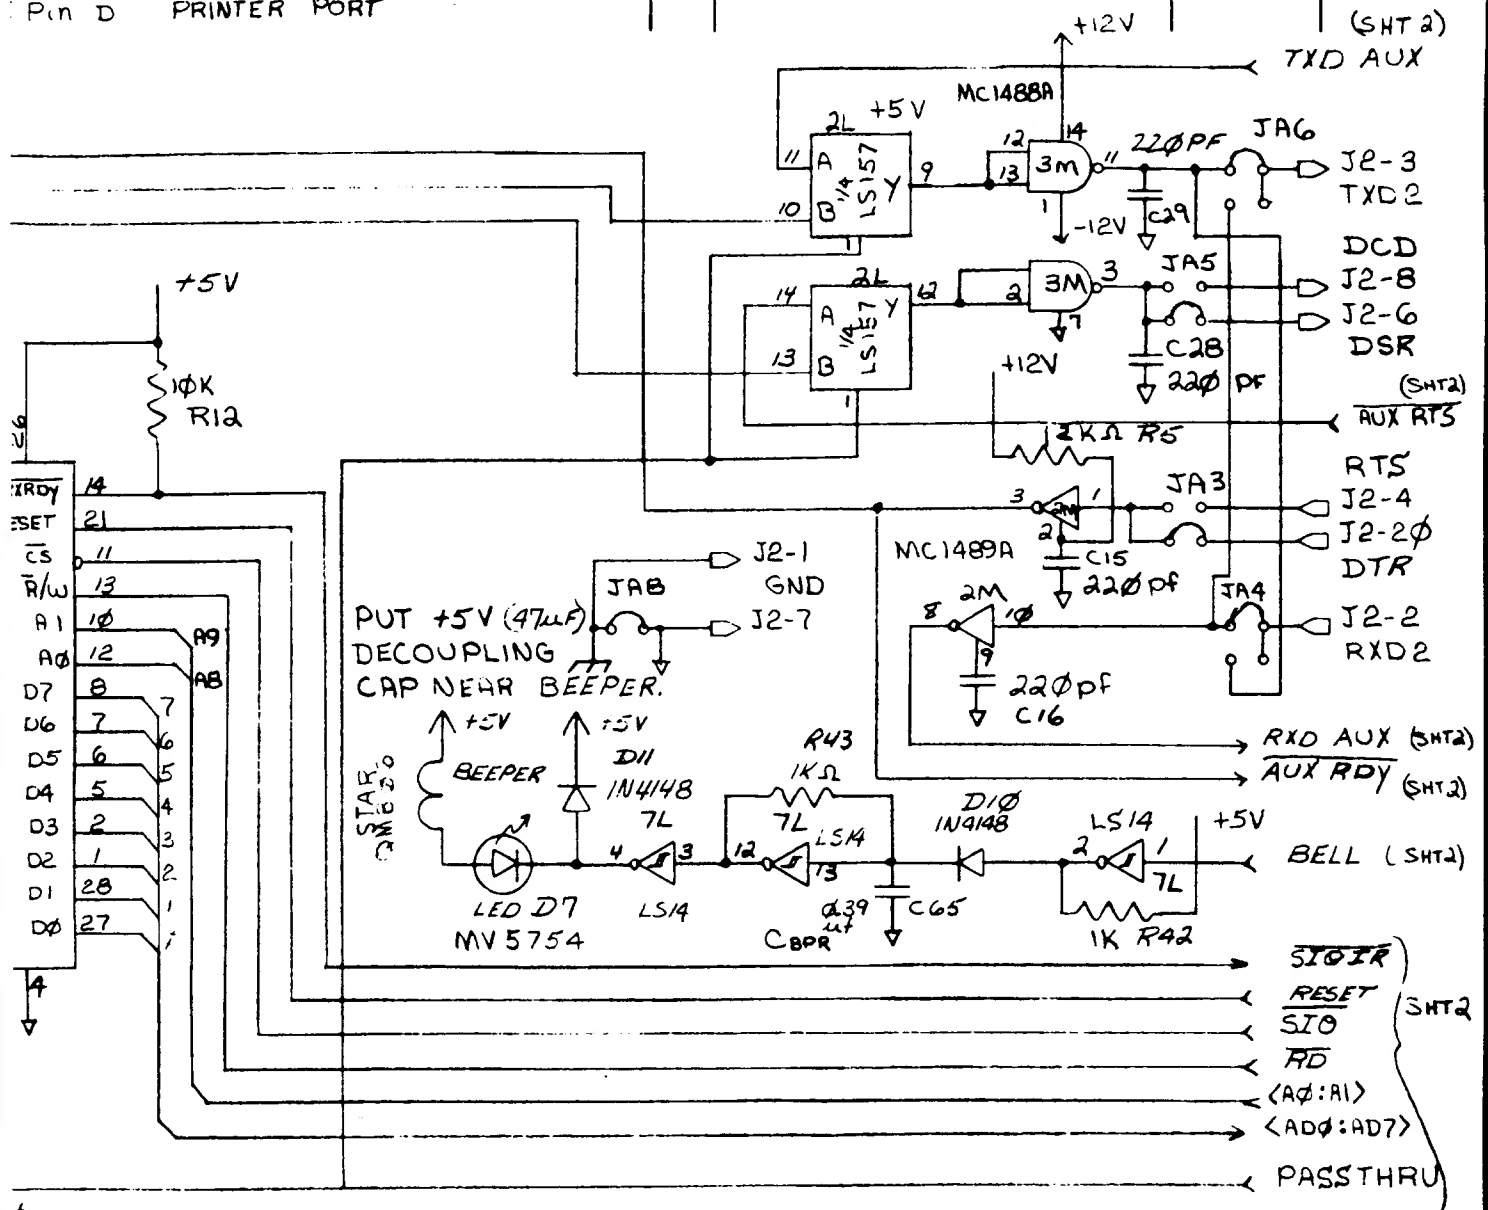

QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
<b>PARTS LIST</b>				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES ± .XX ± .XXX ±			<b>WYSE TECHNOLOGY</b> <b>LOGIC BOARD, WY-50</b>	
MATERIAL FINISH			CONTRACT NO. APPROVALS DATE DRAWN CHECKED ISSUED	
DO NOT SCALE DRAWING			SIZE <b>B</b>	FSCM NO. DWG. NO. 96-012-01 REV. <b>D3</b>
			SCALE	SHEET 3 of 7



# NOTES :

1. HSYNC-, VSYNC-, Require RS232C Receivers.
2. DIM- & VIDEO- Require S37 Drivers.
3. VIDEO- (J1-18) corresponds to Green-output on RGB Graphics Controller. Red- (J1-11) & Blue- (J1-19) are not used on wy-50.
4. Red-, Green-, Blue- require S37 Driver. Both transmit & receive ends of Blue- (J1-19) require diode clamps

DOT CLK  
(SHT 1)


GRAPHICS  
(SHT 2)

(SHT 1) HSYNC

(SHT 1) VSYNC OUT

LS04  
9 8  
5K

OFF  
ON  
NORM  
DIM

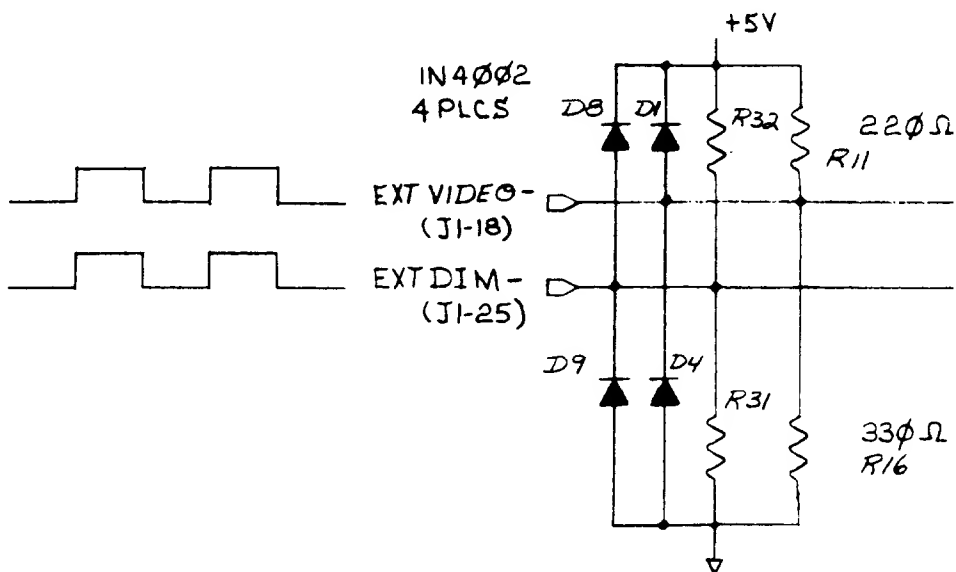

NEXT ASSY	US
APPLICATION	



DWG. NO.

S

, VSYNC-, Require  
: Receivers.  
VIDEO- Require  
ivers.  
(J1-18) corresponds  
en-output on RGB  
S Controller.  
I1-11) & Blue-(J1-19)  
- used on wy-50.  
Green-, Blue- require  
river. Both transmit  
e ends of Blue-(J1-19)  
diode clamps


(SHT 1) HSYNC

(SHT 1) VSYNC OUT

DOT CLK  
(SHT 1)

GRAPHICS  
(SHT 2)


LS04  
5K

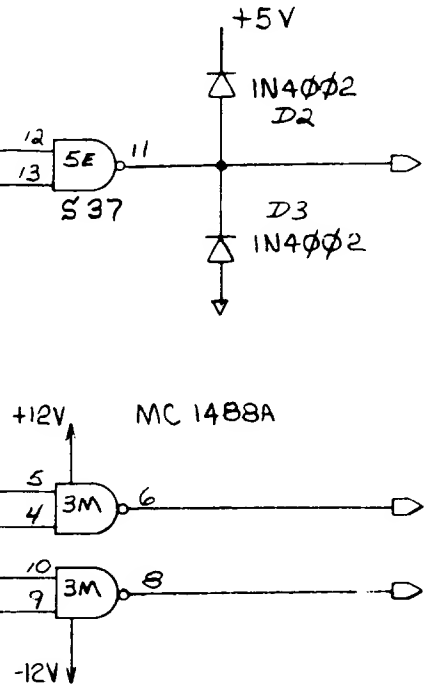

DOT  
OUT -  
(J1-9)

HSYNC  
(J1-18)

VSYNC  
(J1-19)

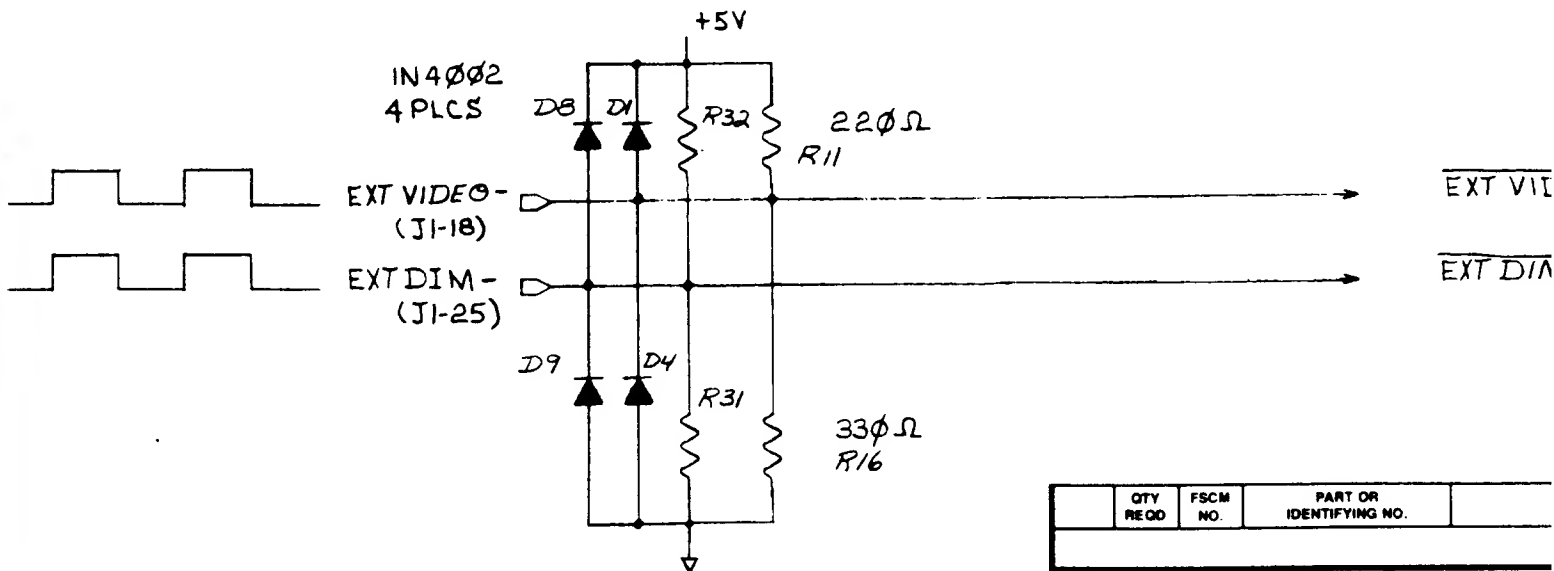

EXT VIDEO-

EXT DIM-

NEXT ASSY	USED ON
APPLICATION	



QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:			CONTRACT NO.
FRACTIONS ±	DECIMALS .XX ± .XXX ±	ANGLES ±	APPROVALS
MATERIAL			DRAWN
FINISH			CHECKED
DO NOT SCALE DRAWING			ISSUED



SH

REV.

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	Removed Blank/CCLK. Added 1488 drivers.	1-26-89	W. Bell

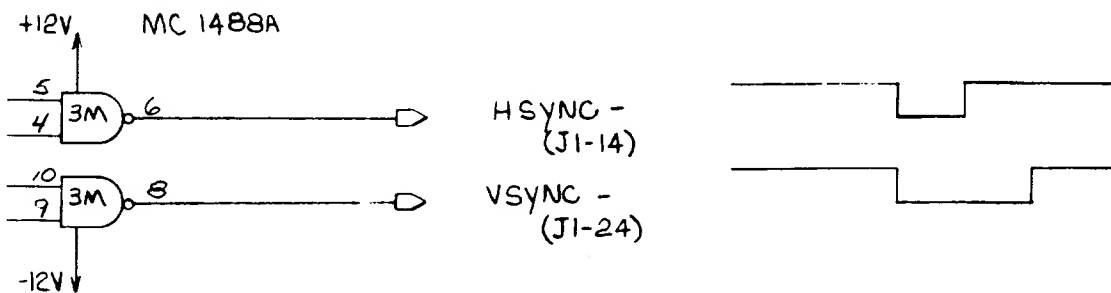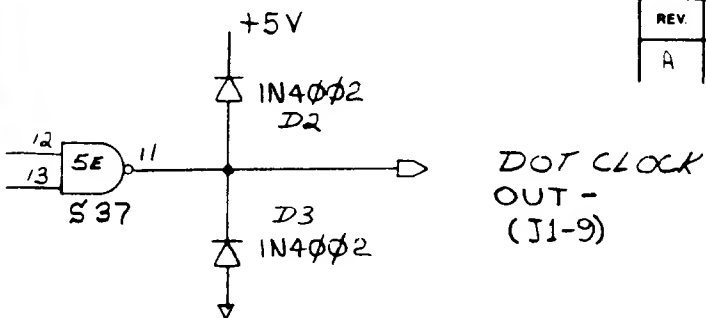


→ EXT VIDEO (SHT1)

→ EXT DIM (SHT1)

## GRAPHICS INTERFACE

 QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
<b>PARTS LIST</b>				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS    DECIMALS    ANGLES ±                .XX ±                ± .XXX ±			<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; font-weight: bold; margin-right: 5px;">WYSE</div> <div style="font-weight: bold; font-size: 1.2em;">WYSE TECHNOLOGY</div> </div>	
			LOGIC BOARD, W 50	
			SIZE <b>B</b> FSCM NO.    DWG. NO. <i>96-012-01</i> REV. <i>D3</i>	
			SCALE    SHEET <i>4 of 7</i>	
DO NOT SCALE DRAWING				






(SHT2)  
AD0  
AD1  
AD2  
AD3  
AD4  
AD5


EAROM  
(SHT2)

RESET  
(SHT2)

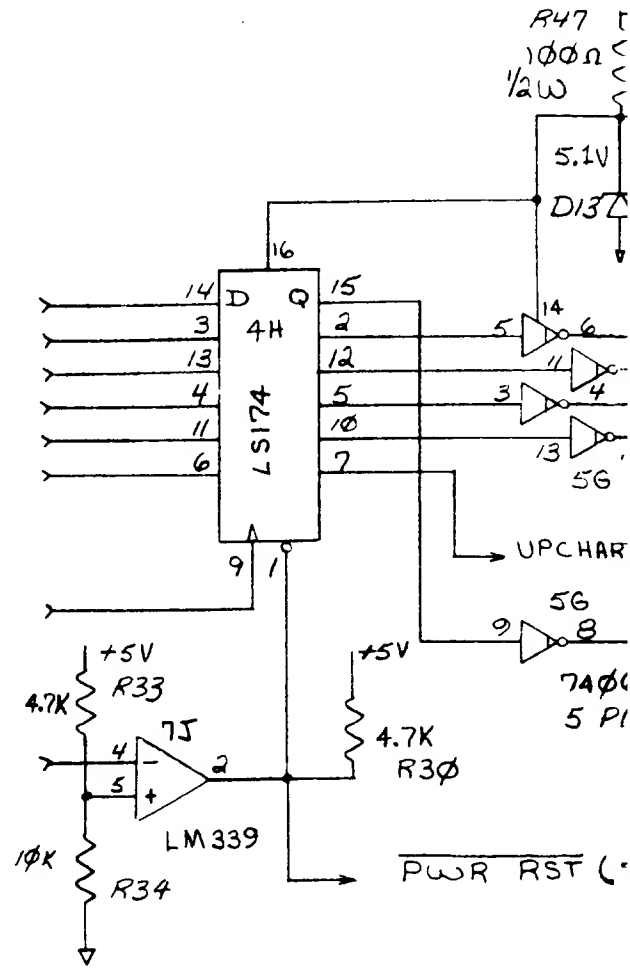

NEXT ASSY	U:
APPLICATION	




 

	QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:				
FRACTIONS		DECIMALS	ANGLES	CONTRACT NO.
±		.XX ± .XXX ±	±	APPROVALS
MATERIAL				
FINISH				DRAWN
				CHECKED
				ISSUED
DO NOT SCALE DRAWING				




DWG. NO.	SH	REV.
REVISIONS		
REV.	DESCRIPTION	DATE

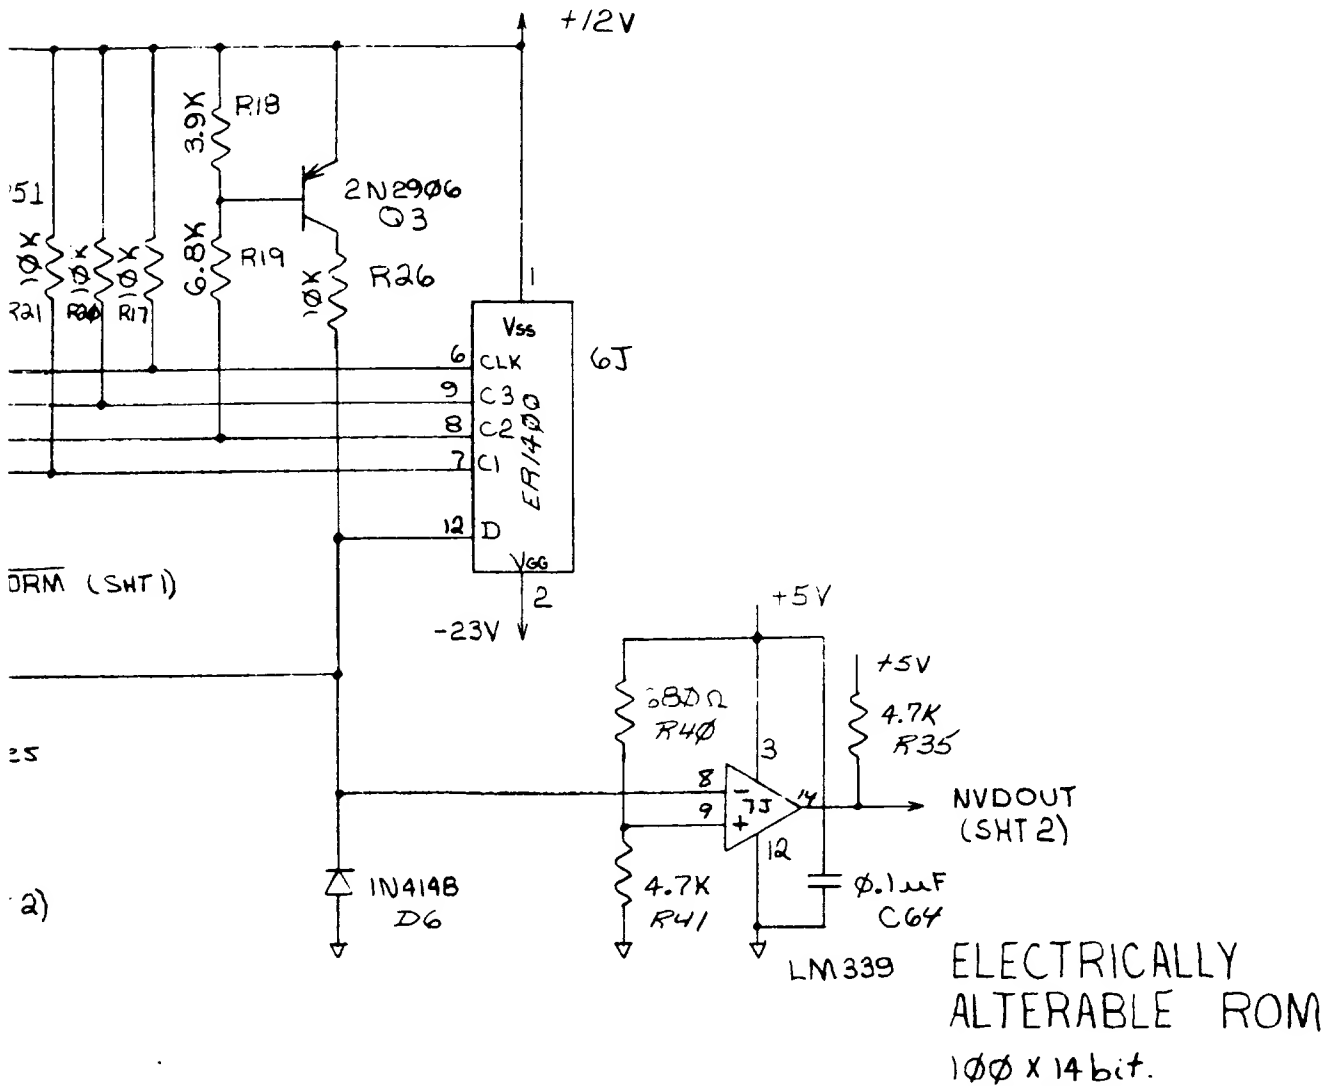


QTY REQD	FSCM NO.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION
PARTS LIST				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES ± .XX ± ± .XXX ±		CONTRACT NO. APPROVALS DATE DRAWN CHECKED ISSUED		
MATERIAL		WYSE TECHNOLOGY LOGIC BOARD, WY50		
FINISH		SIZE B	FSCM NO.	DWG. NO. 96-012-01 REV. D3
DO NOT SCALE DRAWING		SCALE	SHEET 5 OF 7	



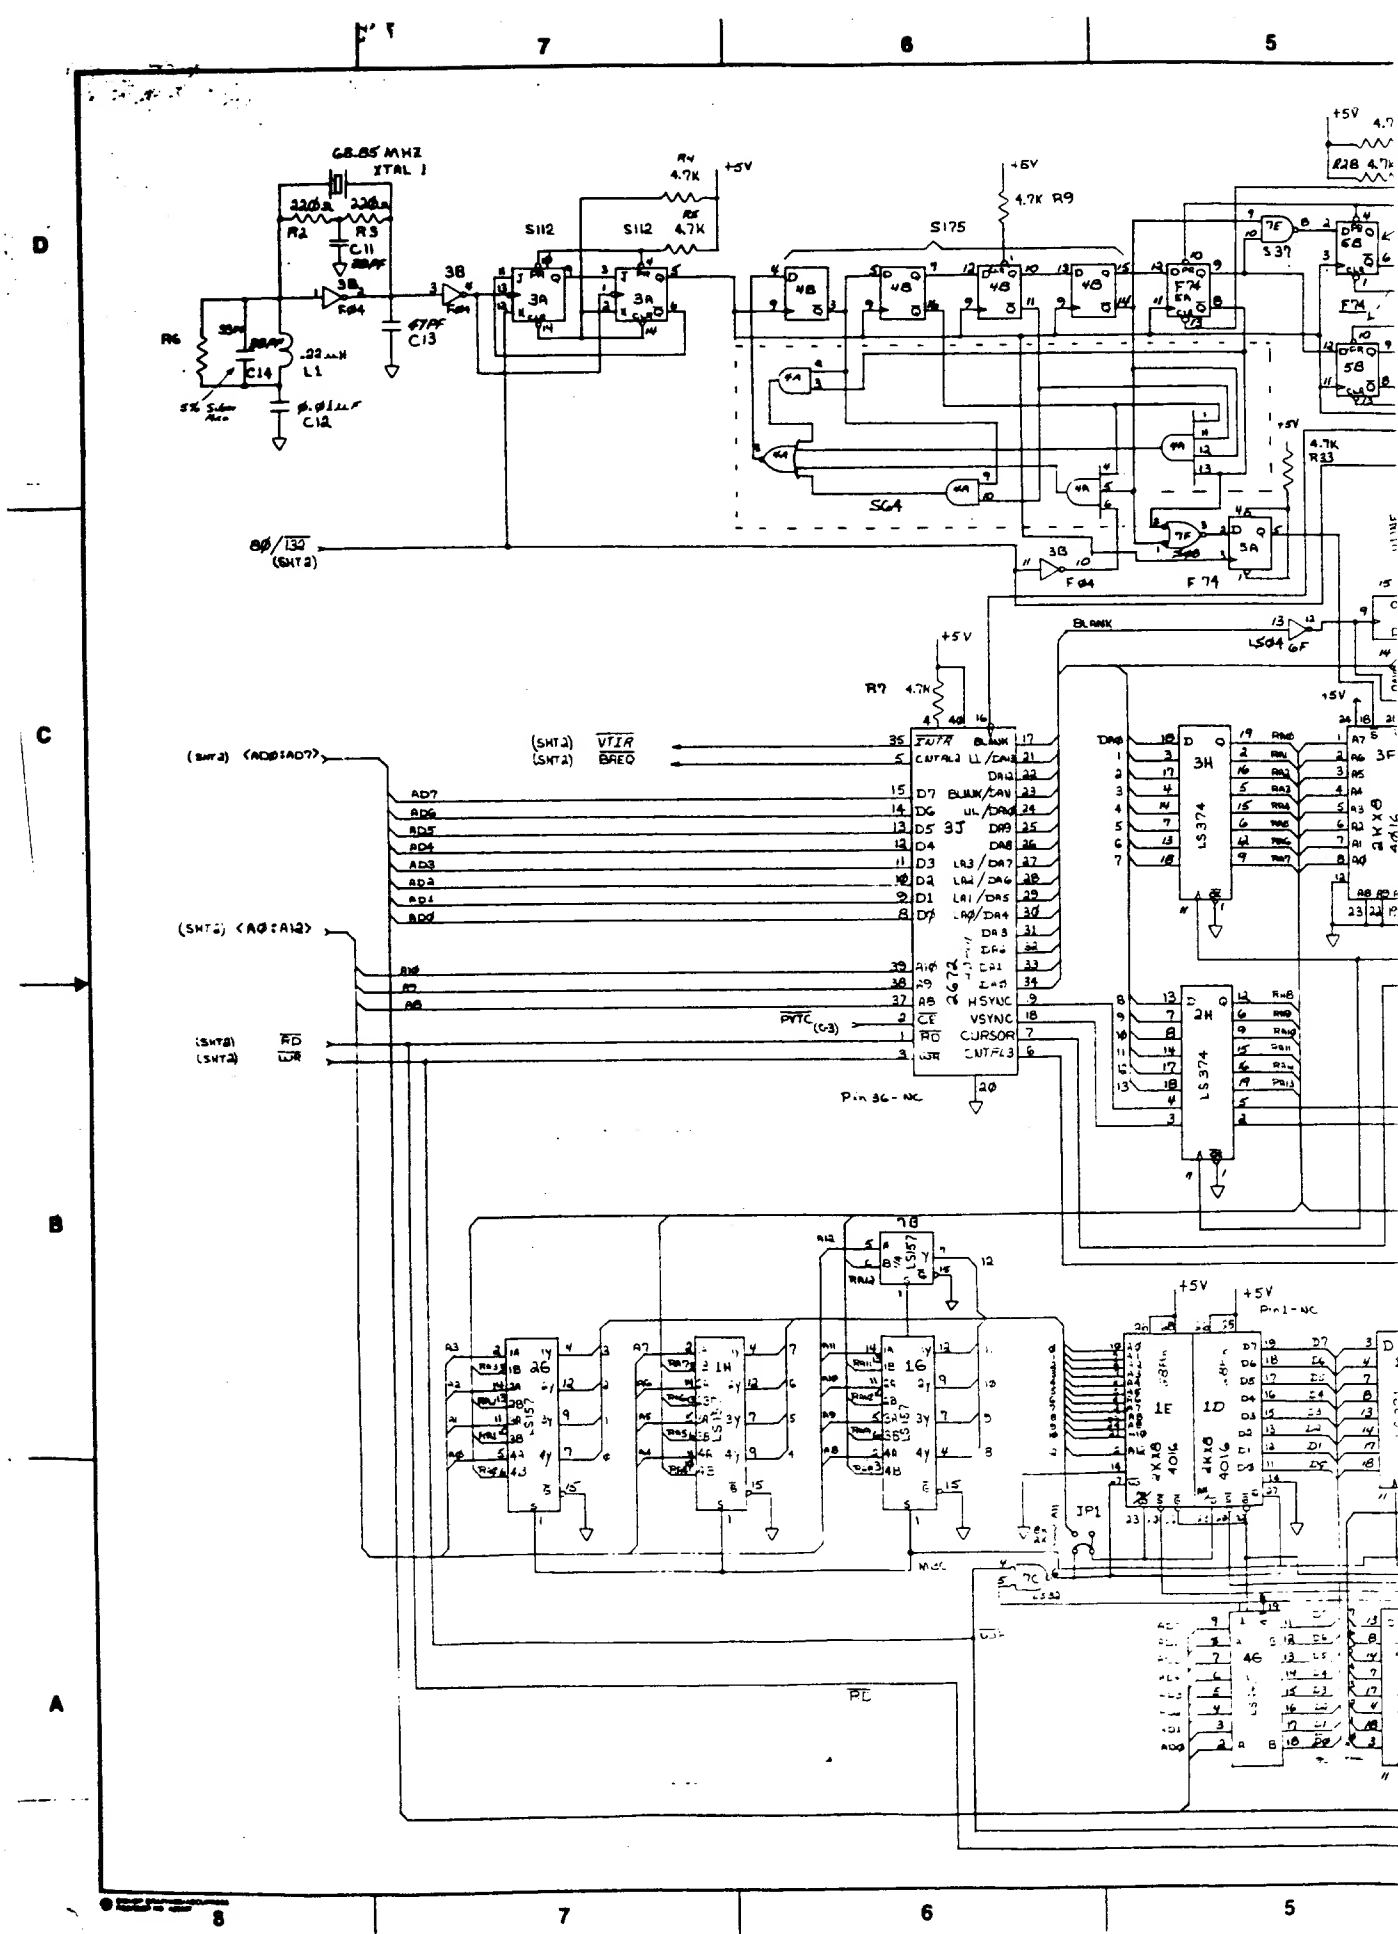




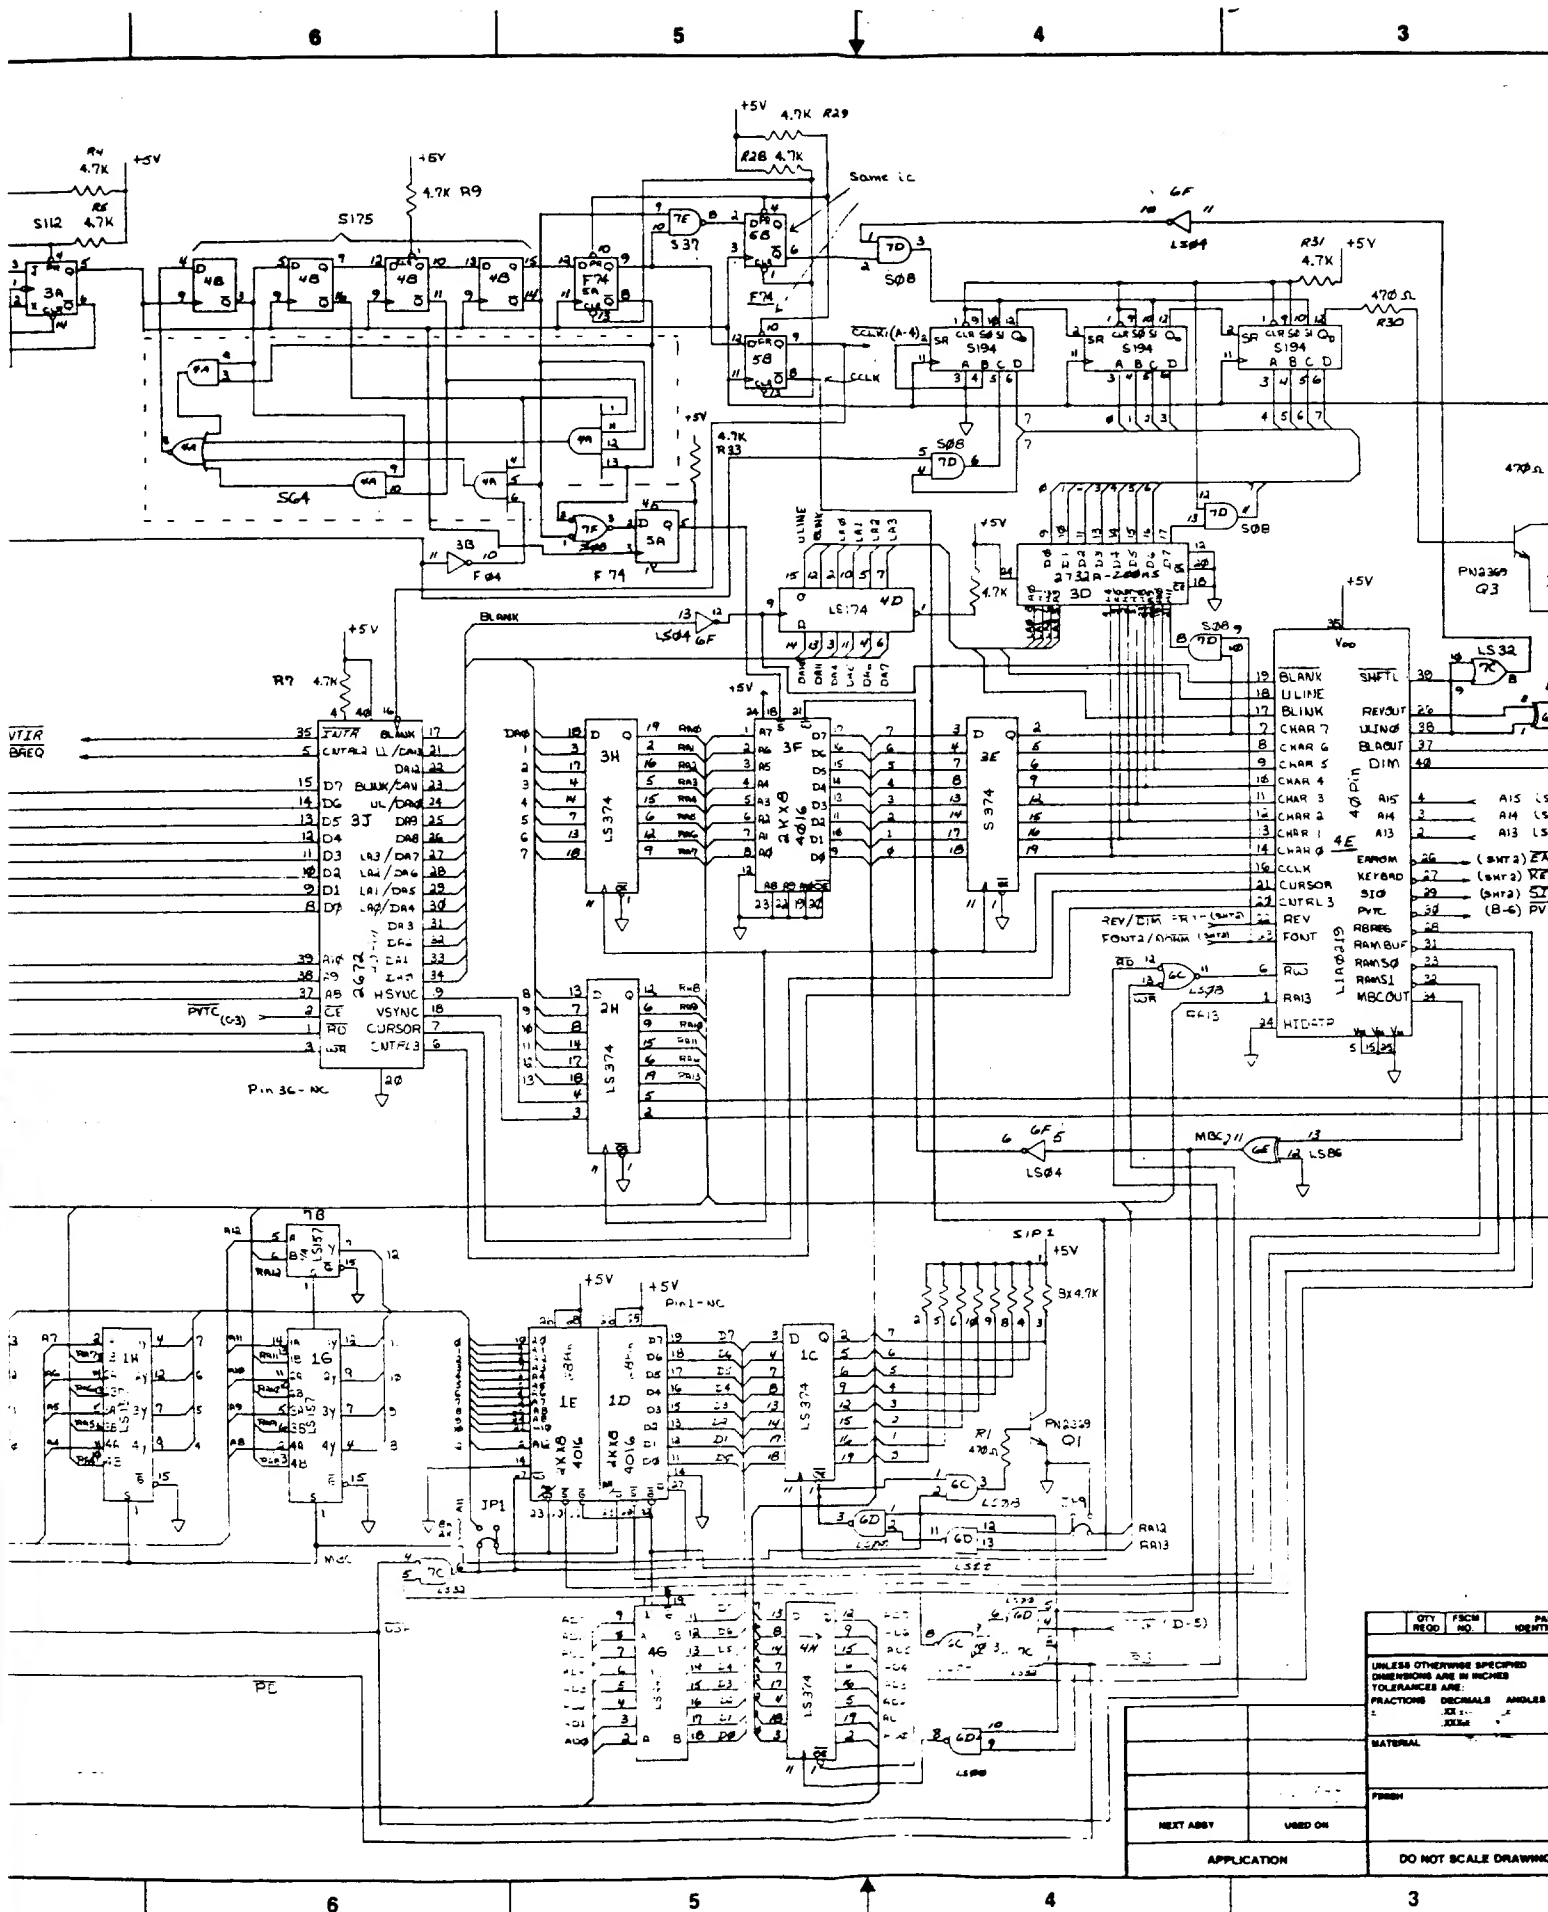


QTY	FSCM NO.	PART IDENTIFY
RECD		
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE DECIMALS ANGLES IN DEGREES		
FRACTIONS DECIMALS ANGLES		
MATERIAL		
FINISH		
NEXT ASSY		
USED ON		
APPLICATION		
DO NOT SCALE DRAWING		



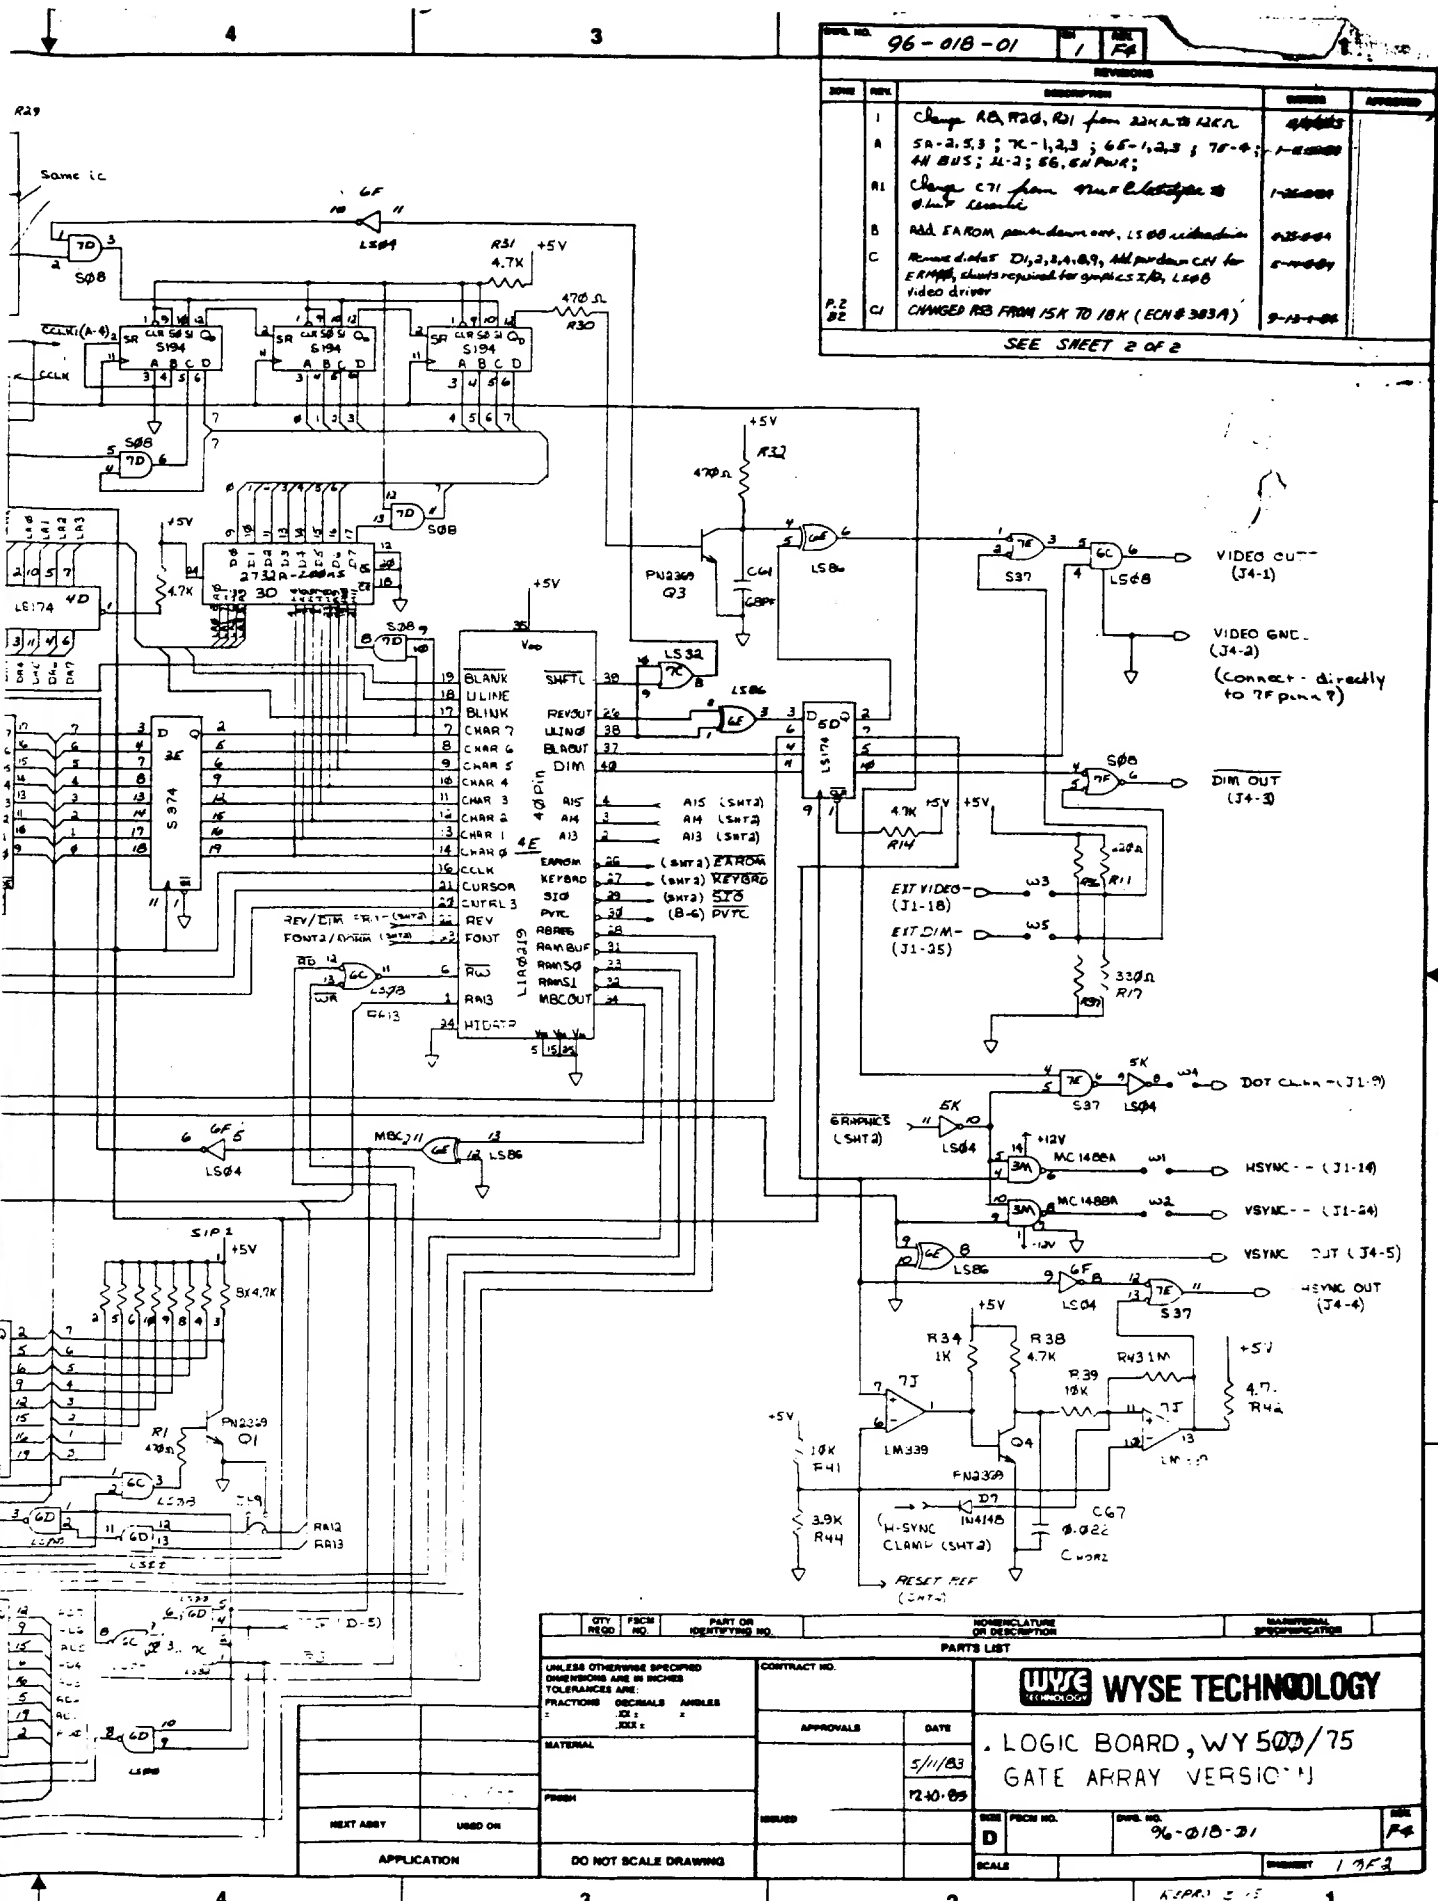


96-018-01			
REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
1	Change R2, R20, R21 from 22K to 12K	4/1/83	
A	SA-2, 3, 3; 7K-1, 2, 3; 6K-1, 2, 3; 7K-4; 4K BUS; 11-2; 6K, 6K PAIR;	1-1-83	
A1	Change C71 from 100pF to 100nF	1-25-83	
B	ADD 5A0M power down out, LS00 addition	4-25-84	
C	Remove diodes D1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000		
P.2	CHANGED R23 FROM 15K TO 10K (ECHO 303A)	9-15-84	
B2			
SEE SHEET 2 OF 2			

QTY REQD		PCEB NO.		PART OR IDENTIFYING NO.		NOMENCLATURE OR DESCRIPTION		MANUFACTURER'S SPECIFICATION	
PARTS LIST									
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES 1/16 0.001 0.001				CONTRACT NO.		 <b>WYSE TECHNOLOGY</b>			
MATERIAL		APPROVALS		DATE		. LOGIC BOARD, WY 500/75 GATE ARRAY VERSION 1			
				5/11/83					
FINISH				7/20/83		REV. NO. 96-018-01			
DO NOT SCALE DRAWING		ISSUED				SIZE PCEB NO.		DATE 1/7/83	
						SCALE		PERMIT 1353	




1. MOUNT LED NEAR PCB EDGE
2. LS157 - COMMON
3. ALL JUMPERS (JP) 0.1" SPACING.
4. TRACE ON SOLDER SIDE.
5. ALL IC'S EXCEPT U9, U10, U17, U30, U33, U37, U41, U43 AND U48 HAVE INDIVIDUAL 0.1UF BYPASS CAPACITORS.

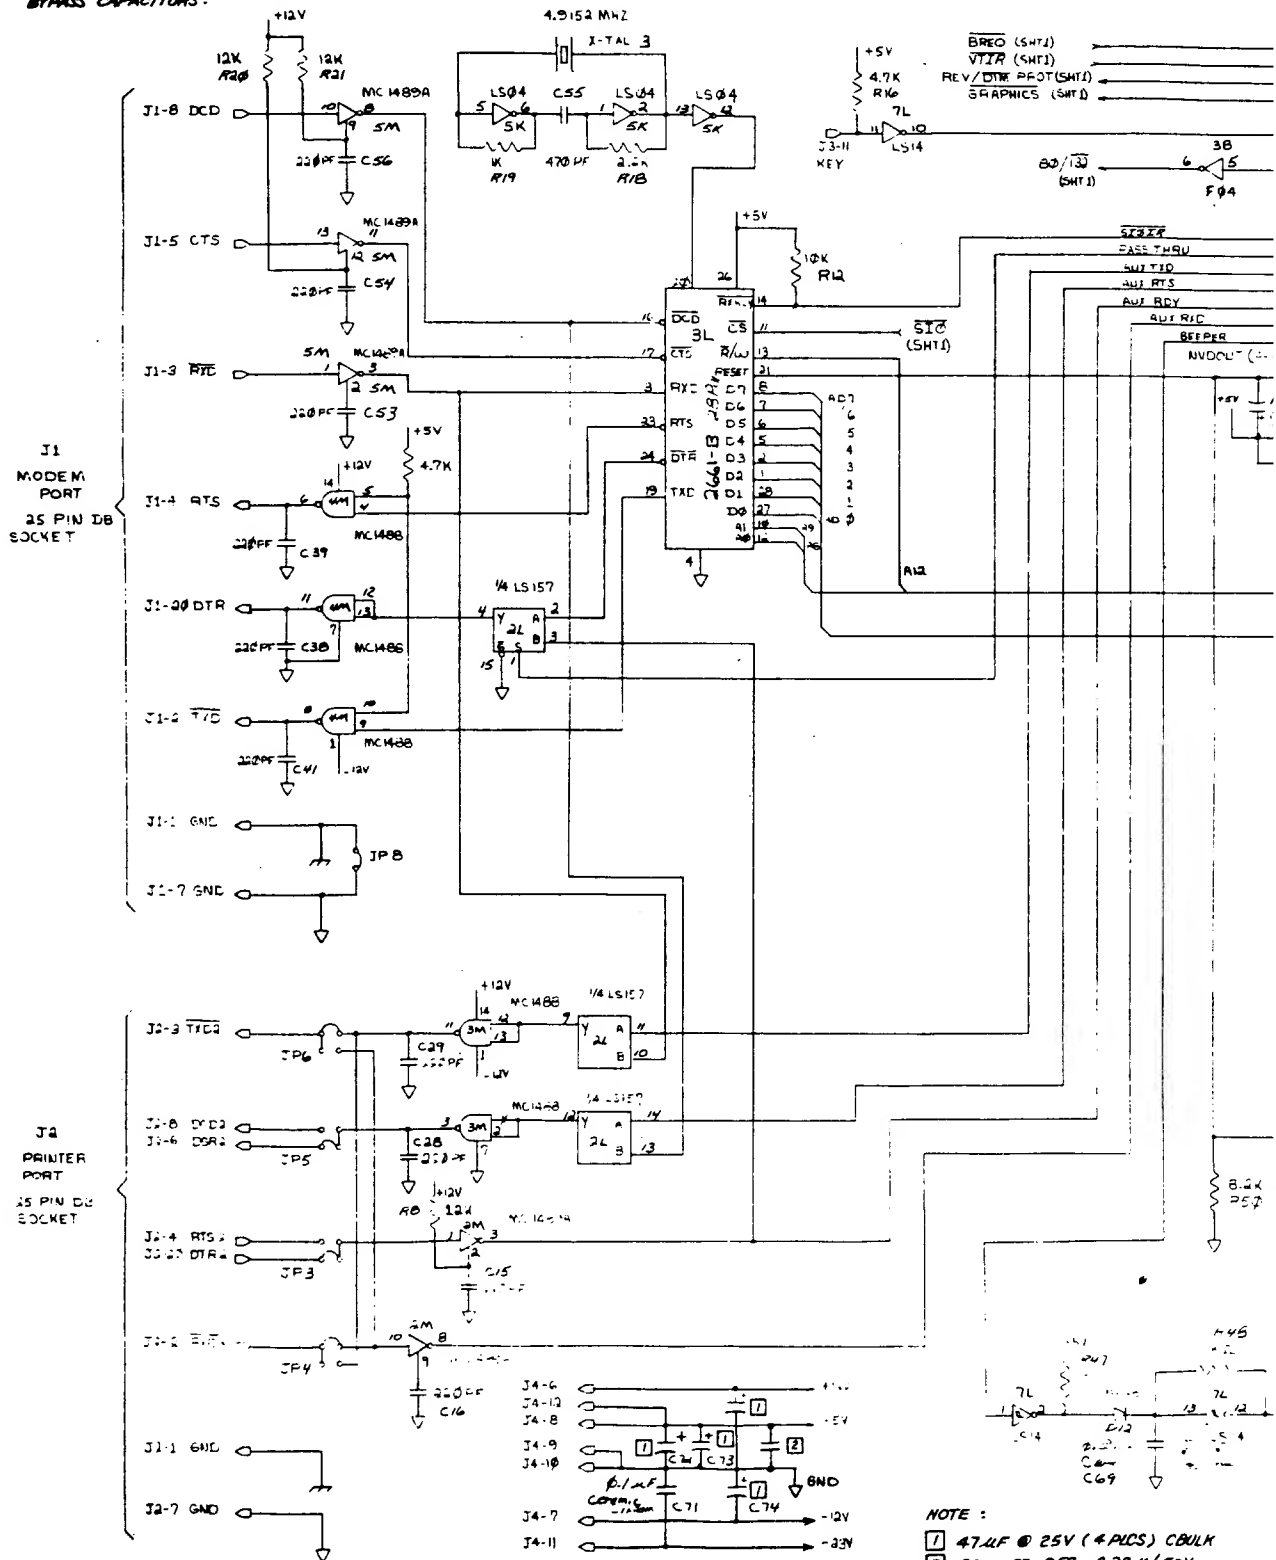

NOTE:


- 1 47.4UF @ 25V (+PICS) CBUK
- 2 C21, C57, C59 0.22UF/50V
- C66 0.01UF/50V



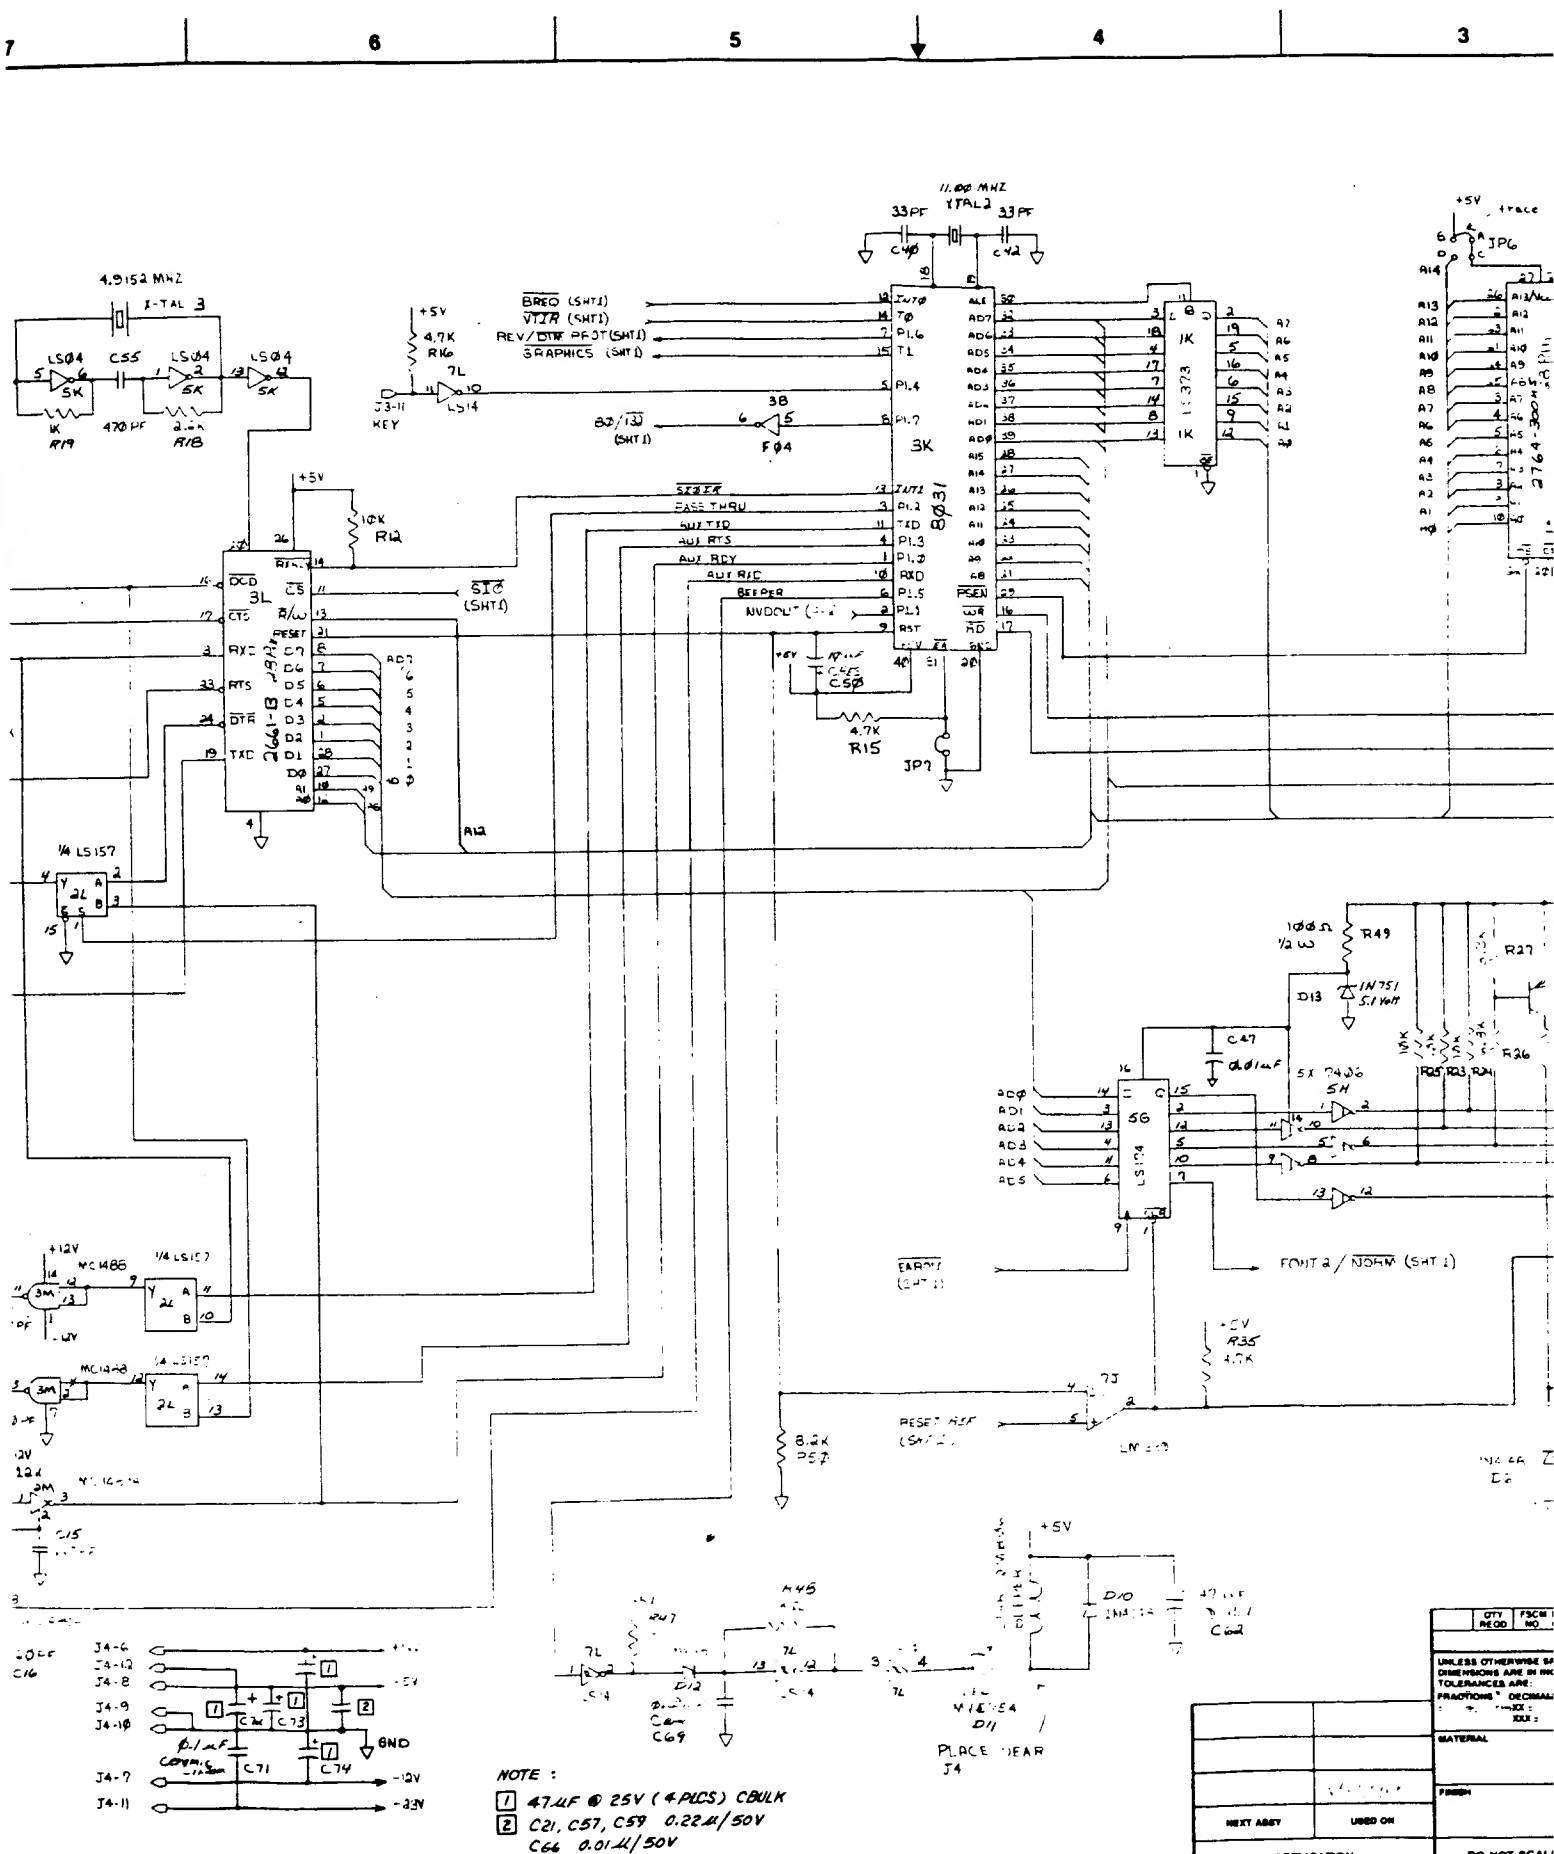

		QTY REQD	PSUM NO.
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCH TOLERANCES ARE: FRACTIONS DECIMALS : . . . . . : : . . . . . :			
		MATERIAL	
		FINISH	
NEXT ASBY	USED ON		
APPLICATION		DO NOT SCALE	




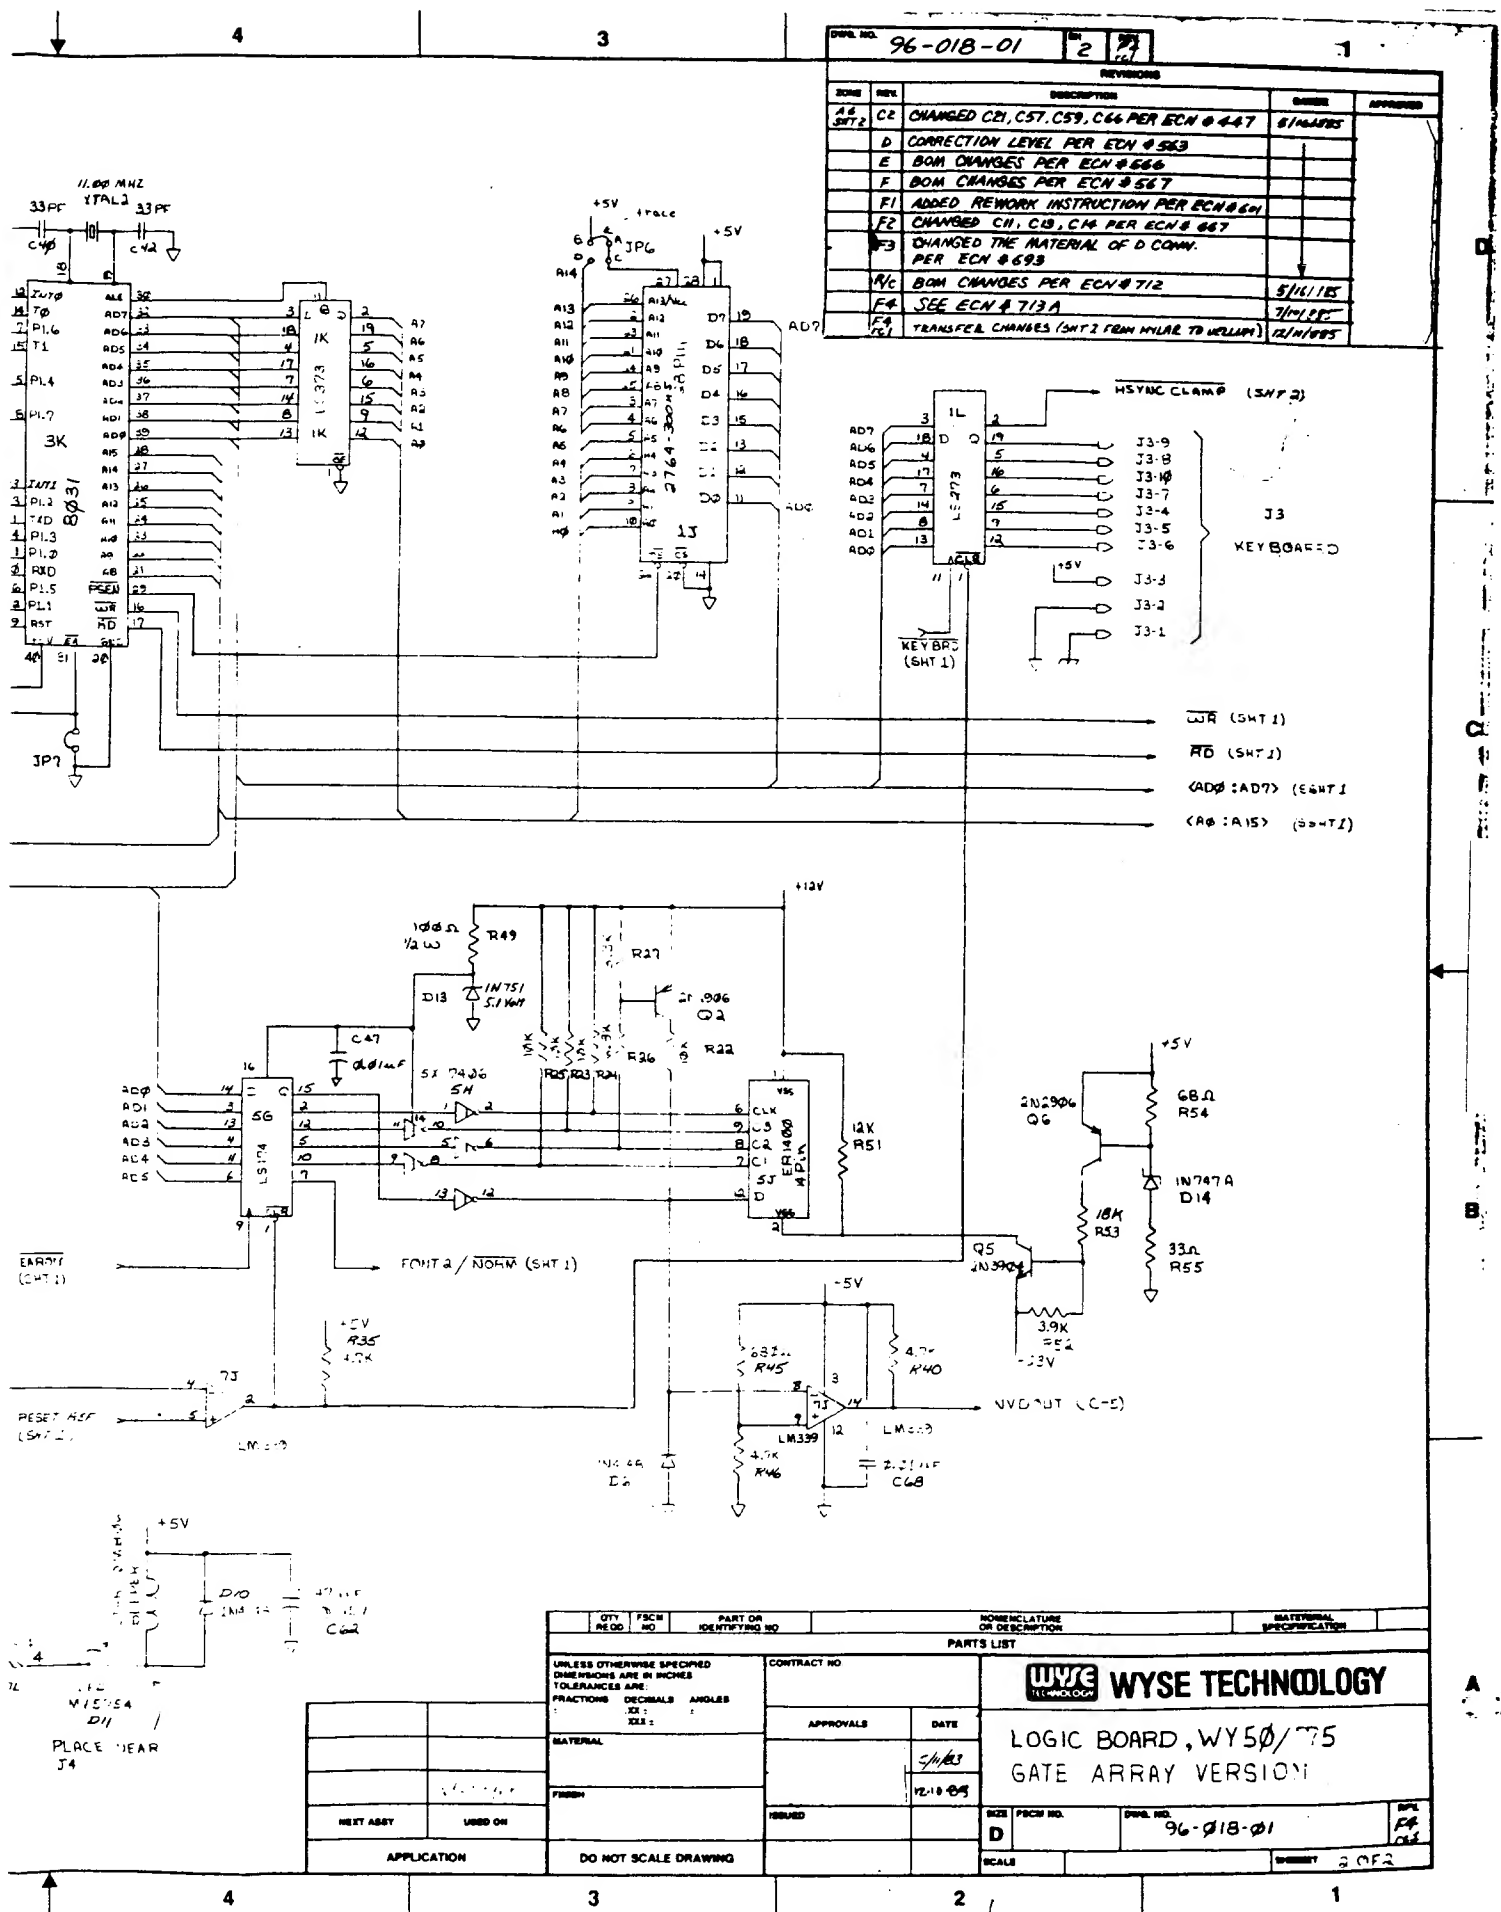


REV. NO.		96-018-01	2	7	1
REVISIONS					
ECN	REV.	DESCRIPTION	DATE	APPROVED	
A4 SHT 2	C2	CHANGED C21, C57, C59, C66 PER ECN # 447	5/14/85		
	D	CORRECTION LEVEL PER ECN # 563			
	E	BOM CHANGES PER ECN # 666			
	F	BOM CHANGES PER ECN # 667			
	F1	ADDED REWORK INSTRUCTION PER ECN # 661			
	F2	CHANGED CH, C18, C14 PER ECN # 667			
	F3	CHANGED THE MATERIAL OF D COMM. PER ECN # 693			
	F4	BOM CHANGES PER ECN # 712	5/15/85		
	F5	SEE ECN # 713A	7/11/85		
	F6	TRANSFER CHANGES (SHT 2 FROM HYLAR TO ULLUM)	12/11/85		

QTY REQD		FSCN NO		PART OR IDENTIFYING NO		NOMENCLATURE OR DESCRIPTION		MATERIAL SPECIFICATION	
PARTS LIST									
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS    DECIMALS    ANGLES 1                    .XX                    ° 2                    .XXX                    °				CONTRACT NO		<div>WYSE TECHNOLOGY</div> <div>LOGIC BOARD, WY50/75 GATE ARRAY VERSION</div>			
MATERIAL				APPROVALS		DATE			
						5/14/85			
FINISH						12-11-85			
				ISSUED				SIZE    FSCN NO.    DWG. NO.    DPL D	




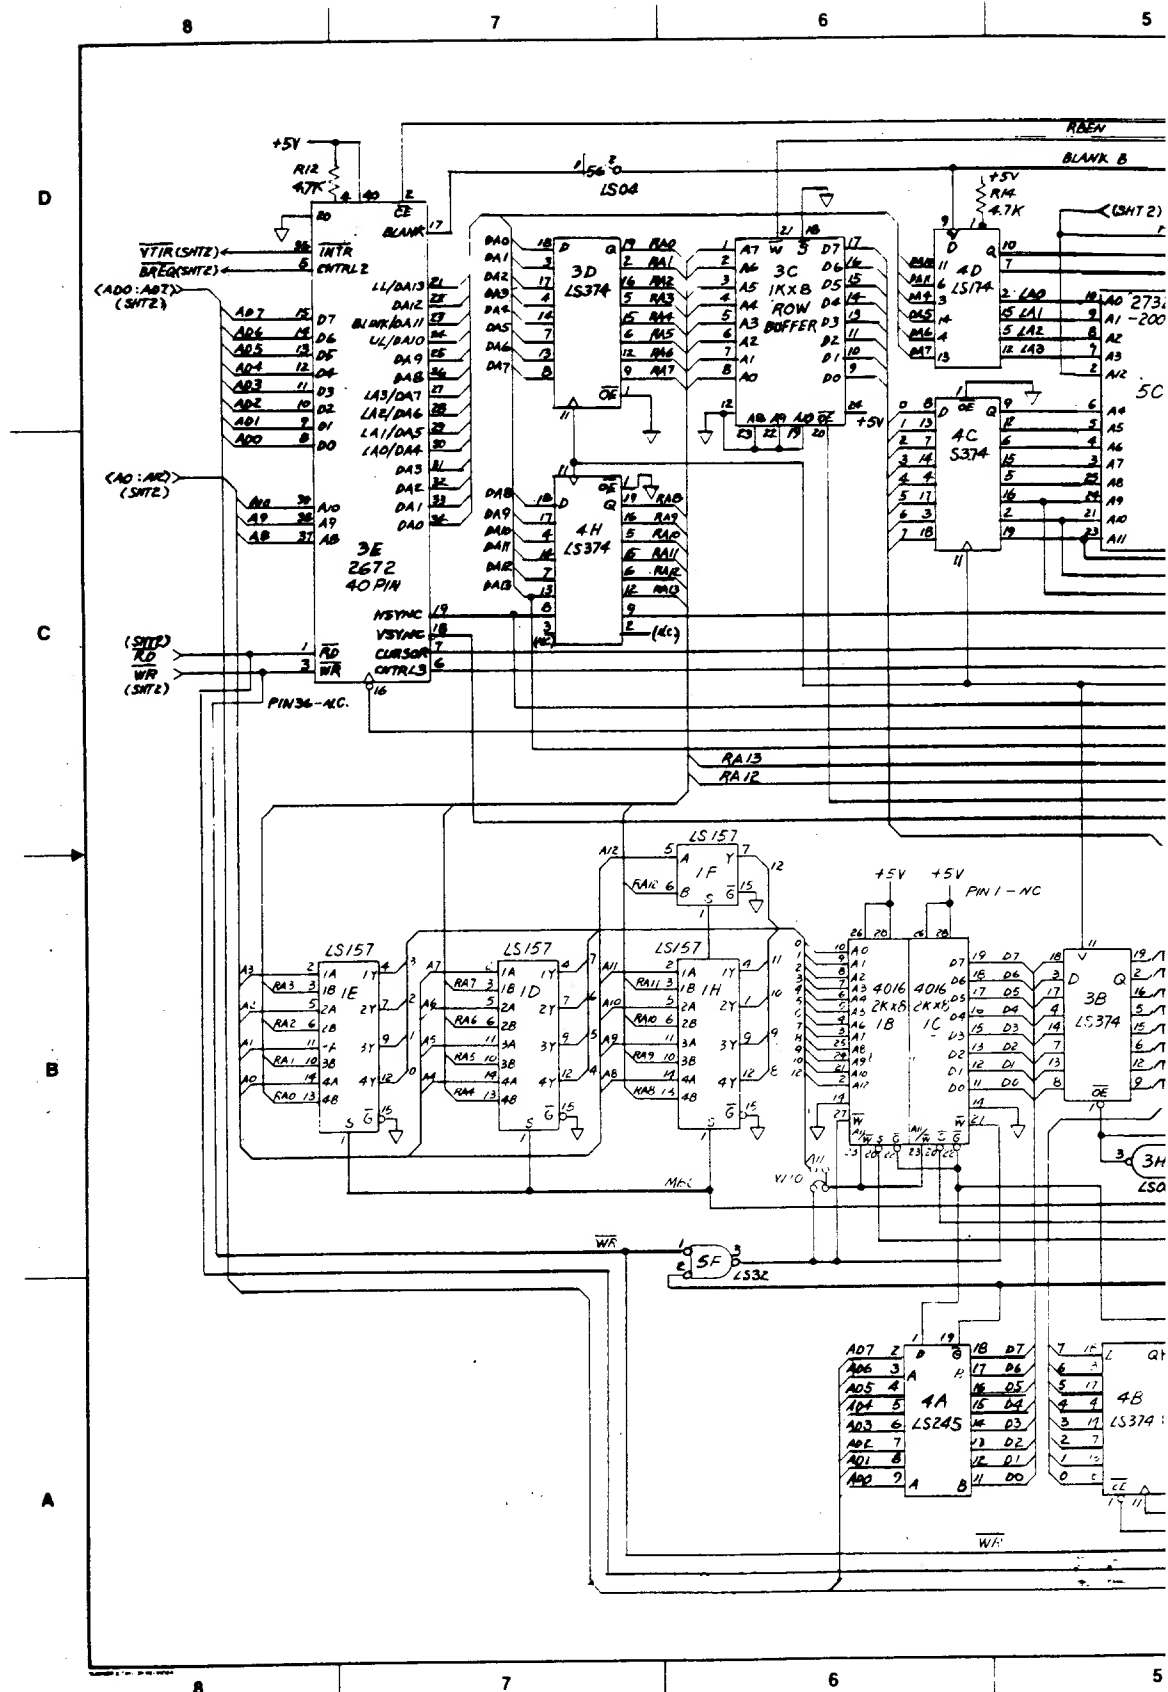



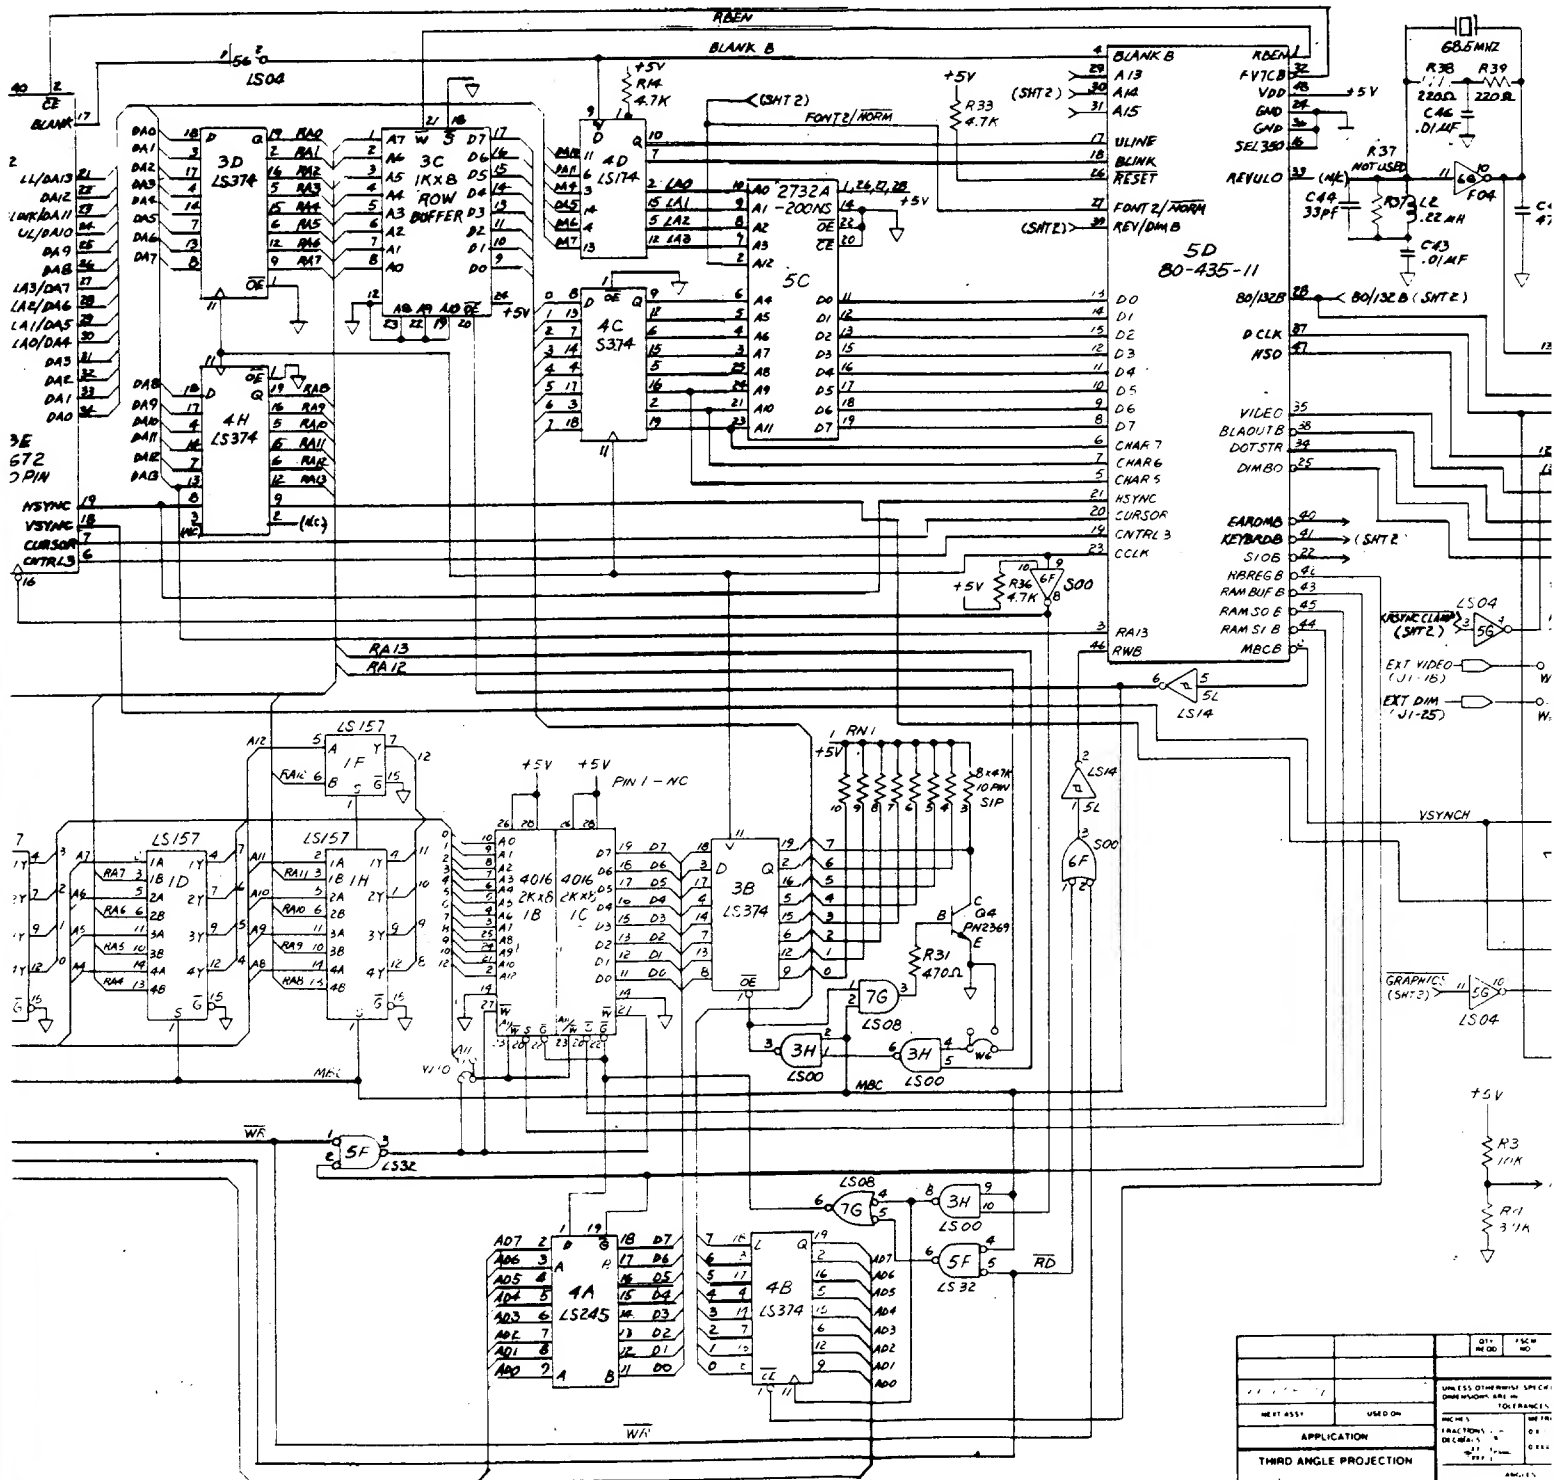



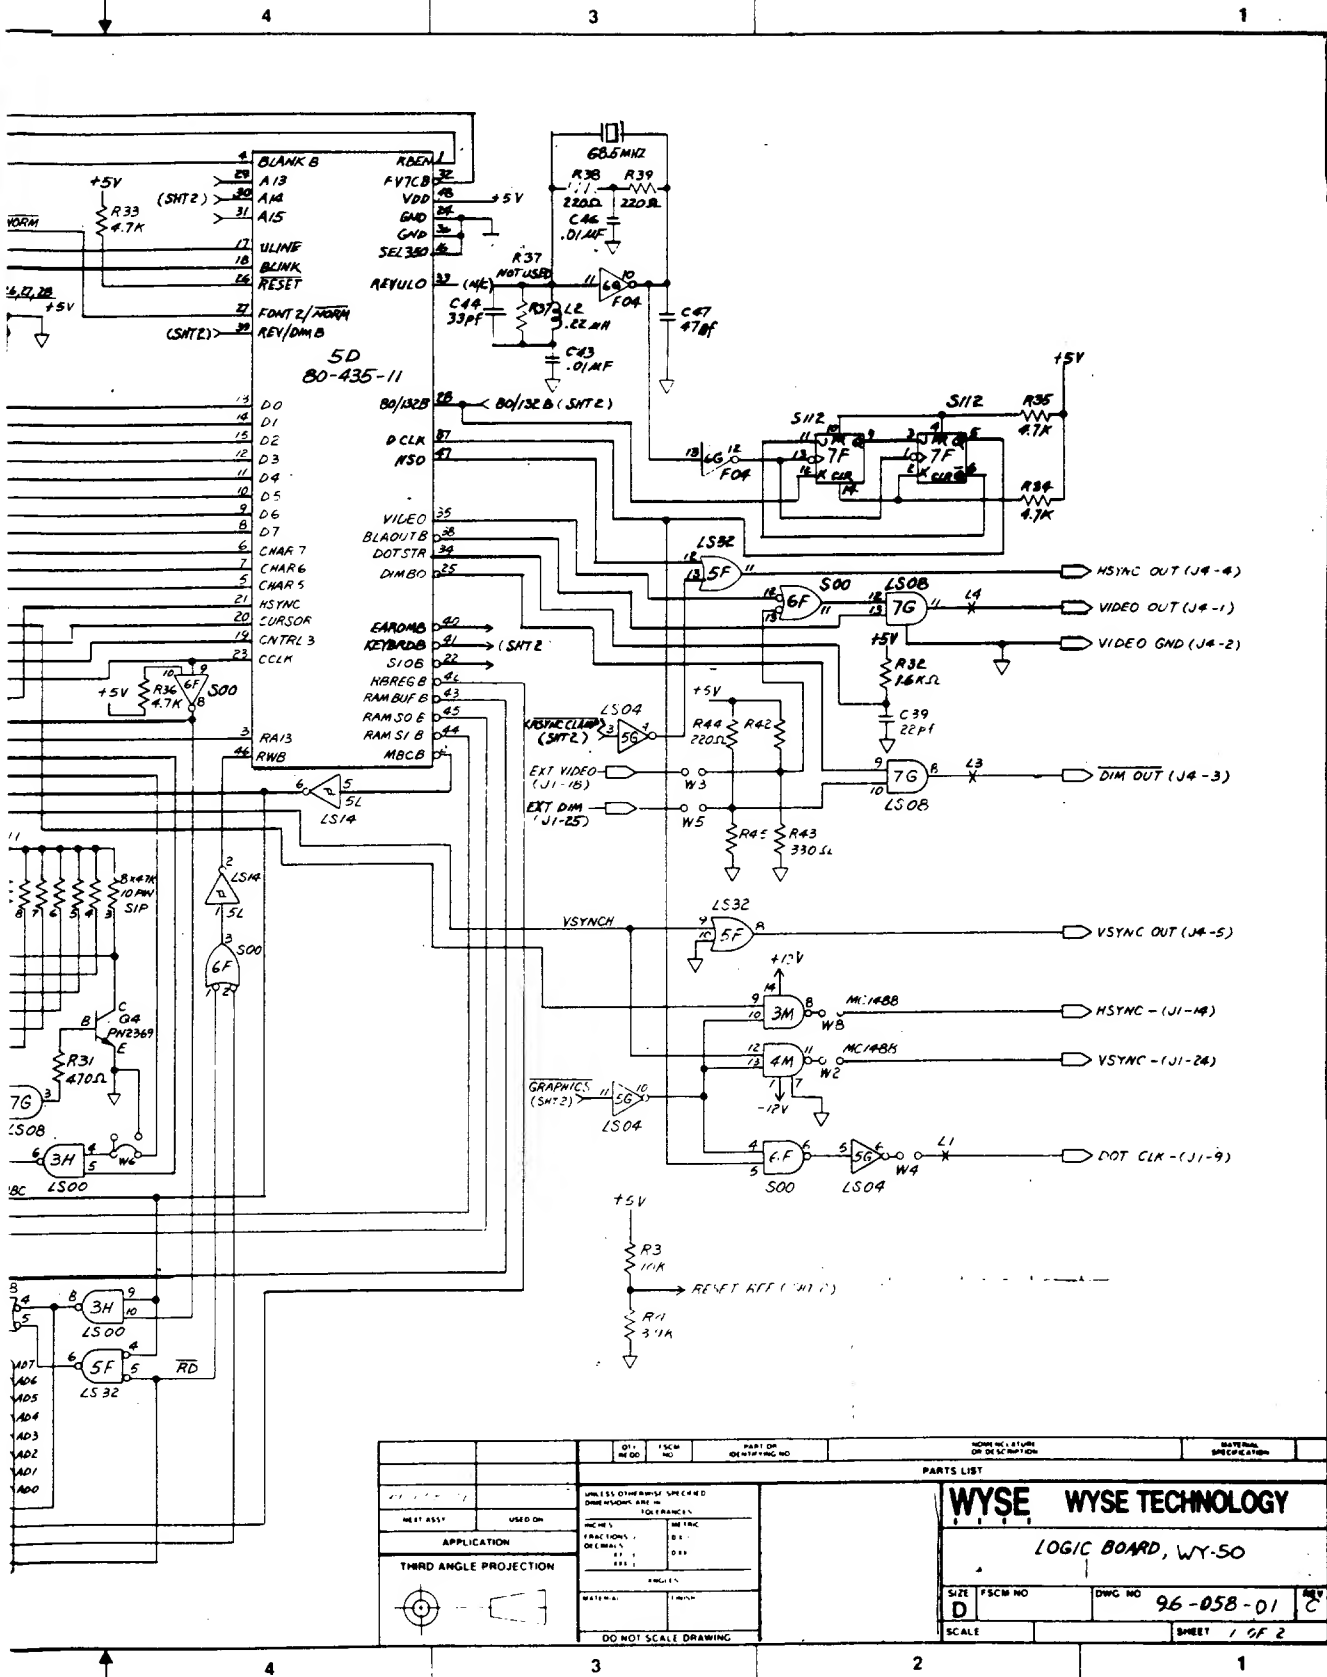


PARTS LIST		WYSE TECHNOLOGY	
LOGIC BOARD, WY-50		SIZE D	
FSCM NO		DWC NO 96-058-01	
SCALE		SHEET 1 OF 2	







C54, C55, C56, C57 ARE 47-4F @ 25V

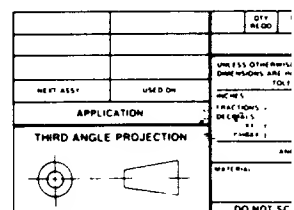







# NOTES:

1. ALL RESISTORS ARE 1/4 W 5% UNLESS OTHERWISE SPECIFIED
2. ALL CAPACITORS ARE IN UF UNLESS OTHERWISE SPECIFIED

FUSE 2A, FOR 115V AC  
2A, FOR 230V AC


ALJ VR101 +23.5V  
VR102 +24.5V  
VR103 +5V  
VR104 +10V  
VR105 +15V  
VR106 +20V  
VR107 +25V  
VR108 +30V  
VR109 +35V  
VR110 +40V  
VR111 +45V  
VR112 +50V  
VR113 +55V  
VR114 +60V  
VR115 +65V  
VR116 +70V  
VR117 +75V  
VR118 +80V  
VR119 +85V  
VR120 +90V  
VR121 +95V  
VR122 +100V  
VR123 +105V  
VR124 +110V  
VR125 +115V  
VR126 +120V  
VR127 +125V  
VR128 +130V  
VR129 +135V  
VR130 +140V  
VR131 +145V  
VR132 +150V  
VR133 +155V  
VR134 +160V  
VR135 +165V  
VR136 +170V  
VR137 +175V  
VR138 +180V  
VR139 +185V  
VR140 +190V  
VR141 +195V  
VR142 +200V  
VR143 +205V  
VR144 +210V  
VR145 +215V  
VR146 +220V  
VR147 +225V  
VR148 +230V  
VR149 +235V  
VR150 +240V  
VR151 +245V  
VR152 +250V  
VR153 +255V  
VR154 +260V  
VR155 +265V  
VR156 +270V  
VR157 +275V  
VR158 +280V  
VR159 +285V  
VR160 +290V  
VR161 +295V  
VR162 +300V  
VR163 +305V  
VR164 +310V  
VR165 +315V  
VR166 +320V  
VR167 +325V  
VR168 +330V  
VR169 +335V  
VR170 +340V  
VR171 +345V  
VR172 +350V  
VR173 +355V  
VR174 +360V  
VR175 +365V  
VR176 +370V  
VR177 +375V  
VR178 +380V  
VR179 +385V  
VR180 +390V  
VR181 +395V  
VR182 +400V  
VR183 +405V  
VR184 +410V  
VR185 +415V  
VR186 +420V  
VR187 +425V  
VR188 +430V  
VR189 +435V  
VR190 +440V  
VR191 +445V  
VR192 +450V  
VR193 +455V  
VR194 +460V  
VR195 +465V  
VR196 +470V  
VR197 +475V  
VR198 +480V  
VR199 +485V  
VR200 +490V  
VR201 +495V  
VR202 +500V  
VR203 +505V  
VR204 +510V  
VR205 +515V  
VR206 +520V  
VR207 +525V  
VR208 +530V  
VR209 +535V  
VR210 +540V  
VR211 +545V  
VR212 +550V  
VR213 +555V  
VR214 +560V  
VR215 +565V  
VR216 +570V  
VR217 +575V  
VR218 +580V  
VR219 +585V  
VR220 +590V  
VR221 +595V  
VR222 +600V  
VR223 +605V  
VR224 +610V  
VR225 +615V  
VR226 +620V  
VR227 +625V  
VR228 +630V  
VR229 +635V  
VR230 +640V  
VR231 +645V  
VR232 +650V  
VR233 +655V  
VR234 +660V  
VR235 +665V  
VR236 +670V  
VR237 +675V  
VR238 +680V  
VR239 +685V  
VR240 +690V  
VR241 +695V  
VR242 +700V  
VR243 +705V  
VR244 +710V  
VR245 +715V  
VR246 +720V  
VR247 +725V  
VR248 +730V  
VR249 +735V  
VR250 +740V  
VR251 +745V  
VR252 +750V  
VR253 +755V  
VR254 +760V  
VR255 +765V  
VR256 +770V  
VR257 +775V  
VR258 +780V  
VR259 +785V  
VR260 +790V  
VR261 +795V  
VR262 +800V  
VR263 +805V  
VR264 +810V  
VR265 +815V  
VR266 +820V  
VR267 +825V  
VR268 +830V  
VR269 +835V  
VR270 +840V  
VR271 +845V  
VR272 +850V  
VR273 +855V  
VR274 +860V  
VR275 +865V  
VR276 +870V  
VR277 +875V  
VR278 +880V  
VR279 +885V  
VR280 +890V  
VR281 +895V  
VR282 +900V  
VR283 +905V  
VR284 +910V  
VR285 +915V  
VR286 +920V  
VR287 +925V  
VR288 +930V  
VR289 +935V  
VR290 +940V  
VR291 +945V  
VR292 +950V  
VR293 +955V  
VR294 +960V  
VR295 +965V  
VR296 +970V  
VR297 +975V  
VR298 +980V  
VR299 +985V  
VR300 +990V  
VR301 +995V  
VR302 +1000V  
VR303 +1005V  
VR304 +1010V  
VR305 +1015V  
VR306 +1020V  
VR307 +1025V  
VR308 +1030V  
VR309 +1035V  
VR310 +1040V  
VR311 +1045V  
VR312 +1050V  
VR313 +1055V  
VR314 +1060V  
VR315 +1065V  
VR316 +1070V  
VR317 +1075V  
VR318 +1080V  
VR319 +1085V  
VR320 +1090V  
VR321 +1095V  
VR322 +1100V  
VR323 +1105V  
VR324 +1110V  
VR325 +1115V  
VR326 +1120V  
VR327 +1125V  
VR328 +1130V  
VR329 +1135V  
VR330 +1140V  
VR331 +1145V  
VR332 +1150V  
VR333 +1155V  
VR334 +1160V  
VR335 +1165V  
VR336 +1170V  
VR337 +1175V  
VR338 +1180V  
VR339 +1185V  
VR340 +1190V  
VR341 +1195V  
VR342 +1200V  
VR343 +1205V  
VR344 +1210V  
VR345 +1215V  
VR346 +1220V  
VR347 +1225V  
VR348 +1230V  
VR349 +1235V  
VR350 +1240V  
VR351 +1245V  
VR352 +1250V  
VR353 +1255V  
VR354 +1260V  
VR355 +1265V  
VR356 +1270V  
VR357 +1275V  
VR358 +1280V  
VR359 +1285V  
VR360 +1290V  
VR361 +1295V  
VR362 +1300V  
VR363 +1305V  
VR364 +1310V  
VR365 +1315V  
VR366 +1320V  
VR367 +1325V  
VR368 +1330V  
VR369 +1335V  
VR370 +1340V  
VR371 +1345V  
VR372 +1350V  
VR373 +1355V  
VR374 +1360V  
VR375 +1365V  
VR376 +1370V  
VR377 +1375V  
VR378 +1380V  
VR379 +1385V  
VR380 +1390V  
VR381 +1395V  
VR382 +1400V  
VR383 +1405V  
VR384 +1410V  
VR385 +1415V  
VR386 +1420V  
VR387 +1425V  
VR388 +1430V  
VR389 +1435V  
VR390 +1440V  
VR391 +1445V  
VR392 +1450V  
VR393 +1455V  
VR394 +1460V  
VR395 +1465V  
VR396 +1470V  
VR397 +1475V  
VR398 +1480V  
VR399 +1485V  
VR400 +1490V  
VR401 +1495V  
VR402 +1500V  
VR403 +1505V  
VR404 +1510V  
VR405 +1515V  
VR406 +1520V  
VR407 +1525V  
VR408 +1530V  
VR409 +1535V  
VR410 +1540V  
VR411 +1545V  
VR412 +1550V  
VR413 +1555V  
VR414 +1560V  
VR415 +1565V  
VR416 +1570V  
VR417 +1575V  
VR418 +1580V  
VR419 +1585V  
VR420 +1590V  
VR421 +1595V  
VR422 +1600V  
VR423 +1605V  
VR424 +1610V  
VR425 +1615V  
VR426 +1620V  
VR427 +1625V  
VR428 +1630V  
VR429 +1635V  
VR430 +1640V  
VR431 +1645V  
VR432 +1650V  
VR433 +1655V  
VR434 +1660V  
VR435 +1665V  
VR436 +1670V  
VR437 +1675V  
VR438 +1680V  
VR439 +1685V  
VR440 +1690V  
VR441 +1695V  
VR442 +1700V  
VR443 +1705V  
VR444 +1710V  
VR445 +1715V  
VR446 +1720V  
VR447 +1725V  
VR448 +1730V  
VR449 +1735V  
VR450 +1740V  
VR451 +1745V  
VR452 +1750V  
VR453 +1755V  
VR454 +1760V  
VR455 +1765V  
VR456 +1770V  
VR457 +1775V  
VR458 +1780V  
VR459 +1785V  
VR460 +1790V  
VR461 +1795V  
VR462 +1800V  
VR463 +1805V  
VR464 +1810V  
VR465 +1815V  
VR466 +1820V  
VR467 +1825V  
VR468 +1830V  
VR469 +1835V  
VR470 +1840V  
VR471 +1845V  
VR472 +1850V  
VR473 +1855V  
VR474 +1860V  
VR475 +1865V  
VR476 +1870V  
VR477 +1875V  
VR478 +1880V  
VR479 +1885V  
VR480 +1890V  
VR481 +1895V  
VR482 +1900V  
VR483 +1905V  
VR484 +1910V  
VR485 +1915V  
VR486 +1920V  
VR487 +1925V  
VR488 +1930V  
VR489 +1935V  
VR490 +1940V  
VR491 +1945V  
VR492 +1950V  
VR493 +1955V  
VR494 +1960V  
VR495 +1965V  
VR496 +1970V  
VR497 +1975V  
VR498 +1980V  
VR499 +1985V  
VR500 +1990V  
VR501 +1995V  
VR502 +2000V  
VR503 +2005V  
VR504 +2010V  
VR505 +2015V  
VR506 +2020V  
VR507 +2025V  
VR508 +2030V  
VR509 +2035V  
VR510 +2040V  
VR511 +2045V  
VR512 +2050V  
VR513 +2055V  
VR514 +2060V  
VR515 +2065V  
VR516 +2070V  
VR517 +2075V  
VR518 +2080V  
VR519 +2085V  
VR520 +2090V  
VR521 +2095V  
VR522 +2100V  
VR523 +2105V  
VR524 +2110V  
VR525 +2115V  
VR526 +2120V  
VR527 +2125V  
VR528 +2130V  
VR529 +2135V  
VR530 +2140V  
VR531 +2145V  
VR532 +2150V  
VR533 +2155V  
VR534 +2160V  
VR535 +2165V  
VR536 +2170V  
VR537 +2175V  
VR538 +2180V  
VR539 +2185V  
VR540 +2190V  
VR541 +2195V  
VR542 +2200V  
VR543 +2205V  
VR544 +2210V  
VR545 +2215V  
VR546 +2220V  
VR547 +2225V  
VR548 +2230V  
VR549 +2235V  
VR550 +2240V  
VR551 +2245V  
VR552 +2250V  
VR553 +2255V  
VR554 +2260V  
VR555 +2265V  
VR556 +2270V  
VR557 +2275V  
VR558 +2280V  
VR559 +2285V  
VR560 +2290V  
VR561 +2295V  
VR562 +2300V  
VR563 +2305V  
VR564 +2310V  
VR565 +2315V  
VR566 +2320V  
VR567 +2325V  
VR568 +2330V  
VR569 +2335V  
VR570 +2340V  
VR571 +2345V  
VR572 +2350V  
VR573 +2355V  
VR574 +2360V  
VR575 +2365V  
VR576 +2370V  
VR577 +2375V  
VR578 +2380V  
VR579 +2385V  
VR580 +2390V  
VR581 +2395V  
VR582 +2400V  
VR583 +2405V  
VR584 +2410V  
VR585 +2415V  
VR586 +2420V  
VR587 +2425V  
VR588 +2430V  
VR589 +2435V  
VR590 +2440V  
VR591 +2445V  
VR592 +2450V  
VR593 +2455V  
VR594 +2460V  
VR595 +2465V  
VR596 +2470V  
VR597 +2475V  
VR598 +2480V  
VR599 +2485V  
VR600 +2490V  
VR601 +2495V  
VR602 +2500V  
VR603 +2505V  
VR604 +2510V  
VR605 +2515V  
VR606 +2520V  
VR607 +2525V  
VR608 +2530V  
VR609 +2535V  
VR610 +2540V  
VR611 +2545V  
VR612 +2550V  
VR613 +2555V  
VR614 +2560V  
VR615 +2565V  
VR616 +2570V  
VR617 +2575V  
VR618 +2580V  
VR619 +2585V  
VR620 +2590V  
VR621 +2595V  
VR622 +2600V  
VR623 +2605V  
VR624 +2610V  
VR625 +2615V  
VR626 +2620V  
VR627 +2625V  
VR628 +2630V  
VR629 +2635V  
VR630 +2640V  
VR631 +2645V  
VR632 +2650V  
VR633 +2655V  
VR634 +2660V  
VR635 +2665V  
VR636 +2670V  
VR637 +2675V  
VR638 +2680V  
VR639 +2685V  
VR640 +2690V  
VR641 +2695V  
VR642 +2700V  
VR643 +2705V  
VR644 +2710V  
VR645 +2715V  
VR646 +2720V  
VR647 +2725V  
VR648 +2730V  
VR649 +2735V  
VR650 +2740V  
VR651 +2745V  
VR652 +2750V  
VR653 +2755V  
VR654 +2760V  
VR655 +2765V  
VR656 +2770V  
VR657 +2775V  
VR658 +2780V  
VR659 +2785V  
VR660 +2790V  
VR661 +2795V  
VR662 +2800V  
VR663 +2805V  
VR664 +2810V  
VR665 +2815V  
VR666 +2820V  
VR667 +2825V  
VR668 +2830V  
VR669 +2835V  
VR670 +2840V  
VR671 +2845V  
VR672 +2850V  
VR673 +2855V  
VR674 +2860V  
VR675 +2865V  
VR676 +2870V  
VR677 +2875V  
VR678 +2880V  
VR679 +2885V  
VR680 +2890V  
VR681 +2895V  
VR682 +2900V  
VR683 +2905V  
VR684 +2910V  
VR685 +2915V  
VR686 +2920V  
VR687 +2925V  
VR688 +2930V  
VR689 +2935V  
VR690 +2940V  
VR691 +2945V  
VR692 +2950V  
VR693 +2955V  
VR694 +2960V  
VR695 +2965V  
VR696 +2970V  
VR697 +2975V  
VR698 +2980V  
VR699 +2985V  
VR700 +2990V  
VR701 +2995V  
VR702 +3000V  
VR703 +3005V  
VR704 +3010V  
VR705 +3015V  
VR706 +3020V  
VR707 +3025V  
VR708 +3030V  
VR709 +3035V  
VR710 +3040V  
VR711 +3045V  
VR712 +3050V  
VR713 +3055V  
VR714 +3060V  
VR715 +3065V  
VR716 +3070V  
VR717 +3075V  
VR718 +3080V  
VR719 +3085V  
VR720 +3090V  
VR721 +3095V  
VR722 +3100V  
VR723 +3105V  
VR724 +3110V  
VR725 +3115V  
VR726 +3120V  
VR727 +3125V  
VR728 +3130V  
VR729 +3135V  
VR730 +3140V  
VR731 +3145V  
VR732 +3150V  
VR733 +3155V  
VR734 +3160V  
VR735 +3165V  
VR736 +3170V  
VR737 +3175V  
VR738 +3180V  
VR739 +3185V  
VR740 +3190V  
VR741 +3195V  
VR742 +3200V  
VR743 +3205V  
VR744 +3210V  
VR745 +3215V  
VR746 +3220V  
VR747 +3225V  
VR748 +3230V  
VR749 +3235V  
VR750 +3240V  
VR751 +3245V  
VR752 +3250V  
VR753 +3255V  
VR754 +3260V  
VR755 +3265V  
VR756 +3270V  
VR757 +3275V  
VR758 +3280V  
VR759 +3285V  
VR760 +3290V  
VR761 +3295V  
VR762 +3300V  
VR763 +3305V  
VR764 +3310V  
VR765 +3315V  
VR766 +3320V  
VR767 +3325V  
VR768 +3330V  
VR769 +3335V  
VR770 +3340V  
VR771 +3345V  
VR772 +3350V  
VR773 +3355V  
VR774 +3360V  
VR775 +3365V  
VR776 +3370V  
VR777 +3375V  
VR778 +3380V  
VR779 +3385V  
VR780 +3390V  
VR781 +3395V  
VR782 +3400V  
VR783 +3405V  
VR784 +3410V  
VR785 +3415V  
VR786 +3420V  
VR787 +3425V  
VR788 +3430V  
VR789 +3435V  
VR790 +3440V  
VR791 +3445V  
VR792 +3450V  
VR793 +3455V  
VR794 +3460V  
VR795 +3465V  
VR796 +3470V  
VR797 +3475V  
VR798 +3480V  
VR799 +3485V  
VR800 +3490V  
VR801 +3495V  
VR802 +3500V  
VR803 +3505V  
VR804 +3510V  
VR805 +3515V  
VR806 +3520V  
VR807 +3525V  
VR808 +3530V  
VR809 +3535V  
VR810 +3540V  
VR811 +3545V  
VR812 +3550V  
VR813 +3555V  
VR814 +3560V  
VR815 +3565V  
VR816 +3570V  
VR817 +3575V  
VR818 +3580V  
VR819 +3585V  
VR820 +3590V  
VR821 +3595V  
VR822 +3600V  
VR823 +3605V  
VR824 +3610V  
VR825 +3615V  
VR826 +3620V  
VR827 +3625V  
VR828 +3630V  
VR829 +3635V  
VR830 +3640V  
VR831 +3645V  
VR832 +3650V  
VR833 +3655V  
VR834 +3660V  
VR835 +3665V  
VR836 +3670V  
VR837 +3675V  
VR838 +3680V  
VR839 +3685V  
VR840 +3690V  
VR841 +3695V  
VR842 +3700V  
VR843 +3705V  
VR844 +3710V  
VR845 +3715V  
VR846 +3720V  
VR847 +3725V  
VR848 +3730V  
VR849 +3735V  
VR850 +3740V  
VR851 +3745V  
VR852 +3750V  
VR853 +3755V  
VR854 +3760V  
VR855 +3765V  
VR856 +3770V  
VR857 +3775V  
VR858 +3780V  
VR859 +3785V  
VR860 +3790V  
VR861 +3795V  
VR862 +3800V  
VR863 +3805V  
VR864 +3810V  
VR865 +3815V  
VR866 +3820V  
VR867 +3825V  
VR868 +3830V  
VR869 +3835V  
VR870 +3840V  
VR871 +3845V  
VR872 +3850V  
VR873 +3855V  
VR874 +3860V  
VR875 +3865V  
VR876 +3870V  
VR877 +3875V  
VR878 +3880V  
VR879 +3885V  
VR880 +3890V  
VR881 +3895V  
VR882 +3900V  
VR883 +3905V  
VR884 +3910V  
VR885 +3915V  
VR886 +3920V  
VR887 +3925V  
VR888 +3930V  
VR889 +3935V  
VR890 +3940V  
VR891 +3945V  
VR892 +3950V  
VR893 +3955V  
VR894 +3960V  
VR895 +3965V  
VR896 +3970V  
VR897 +3975V  
VR898 +3980V  
VR899 +3985V  
VR900 +3990V  
VR901 +3995V  
VR902 +4000V  
VR903 +4005V  
VR904 +4010V  
VR905 +4015V  
VR906 +4020V  
VR907 +4025V  
VR908 +4030V  
VR909 +4035V  
VR910 +4040V  
VR911 +4045V  
VR912 +4050V  
VR913 +4055V  
VR914 +4060V  
VR915 +4065V  
VR916 +4070V  
VR917 +4075V  
VR918 +4080V  
VR919 +4085V  
VR920 +4090V  
VR921 +4095V  
VR922 +4100V  
VR923 +4105V  
VR924 +4110V  
VR925 +4115V  
VR926 +4120V  
VR927 +4125V  
VR928 +4130V  
VR929 +4135V  
VR930 +4140V  
VR931 +4145V  
VR932 +4150V  
VR933 +4155V  
VR934 +4160V  
VR935 +4165V  
VR936 +4170V  
VR937 +4175V  
VR938 +4180V  
VR939 +4185V  
VR940 +4190V  
VR941 +4195V  
VR942 +4200V  
VR943 +4205V  
VR944 +4210V  
VR945 +4215V  
VR946 +4220V  
VR947 +4225V  
VR948 +4230V  
VR949 +4235V  
VR950 +4240V  
VR951 +4245V  
VR952 +4250V  
VR953 +4255V  
VR954 +4260V  
VR955 +4265V  
VR956 +4270V  
VR957 +4275V  
VR958 +4280V  
VR959 +4285V  
VR960 +4290V  
VR961 +4295V  
VR962 +4300V  
VR963 +4305V  
VR964 +4310V  
VR965 +4315V  
VR966 +4320V  
VR967 +4325V  
VR968 +4330V  
VR969 +4335V  
VR970 +4340V  
VR971 +4345V  
VR972 +4350V  
VR973 +4355V  
VR974 +4360V  
VR975 +4365V  
VR976 +4370V  
VR977 +4375V  
VR978 +4380V  
VR979 +4385V  
VR980 +4390V  
VR981 +4395V  
VR982 +4400V  
VR983 +4405V  
VR984 +4410V  
VR985 +4415V  
VR986 +4420V  
VR987 +4425V  
VR988 +4430V  
VR989 +4435V  
VR990 +4440V  
VR991 +4445V  
VR992 +4450V  
VR993 +4455V  
VR994 +4460V  
VR995 +4465V  
VR996 +4470V  
VR997 +4475V  
VR998 +4480V  
VR999 +4485V  
VR1000 +4490V  
VR1001 +4495V  
VR1002 +4500V  
VR1003 +4505V  
VR1004 +4510V  
VR1005 +4515V  
VR1006 +4520V  
VR1007 +4525V  
VR1008 +4530V  
VR1009 +4535V  
VR1010 +4540V  
VR1011 +4545V  
VR1012 +4550V  
VR1013 +4555V  
VR1014 +4560V  
VR1015 +4565V  
VR1016 +4570V  
VR1017 +4575V  
VR1018 +4580V  
VR1019 +4585V  
VR1020 +4590V  
VR1021 +4595V  
VR1022 +4600V  
VR1023 +4605V  
VR1024 +4610V  
VR1025 +4615V  
VR1026 +4620V  
VR1027 +4625V  
VR1028 +4630V  
VR1029 +4635V  
VR1030 +4640V  
VR1031 +4645V  
VR1032 +4650V  
VR1033 +4655V  
VR1034 +4660V  
VR1035 +4665V  
VR1036 +4670V  
VR1037 +4675V  
VR1038 +4680V  
VR1039 +4685V  
VR1040 +4690V  
VR1041 +4695V  
VR1042 +4700V  
VR1043 +4705V  
VR1044 +4710V  
VR1045 +4715V  
VR1046 +4720V  
VR1047 +4725V  
VR1048 +4730V  
VR1049 +4735V  
VR1050 +4740V  
VR1051 +4745V  
VR1052 +4750V  
VR1053 +4755V  
VR1054 +4760V  
VR1055 +4765V  
VR1056 +4770V  
VR1057 +4775V  
VR1058 +4780V  
VR1059 +4785V  
VR1060 +4790V  
VR1061 +4795V  
VR1062 +4800V  
VR1063 +4805V  
VR1064 +4810V  
VR1065 +4815V  
VR1066 +4820V  
VR1067 +4825V  
VR1068 +4830V  
VR1069 +4835V  
VR1070 +4840V  
VR1071 +4845V  
VR1072 +4850V  
VR1073 +4855V  
VR1074 +4860V  
VR1075 +4865V  
VR1076 +4870V  
VR1077 +4875V  
VR1078 +4880V  
VR1079 +4885V  
VR1080 +4890V  
VR1081 +4895V  
VR1082 +4900V  
VR1083 +4905V  
VR1084 +4910V  
VR1085 +4915V  
VR1086 +4920V  
VR1087 +4925V  
VR1088 +4930V  
VR1089 +4935V  
VR1090 +4940V  
VR1091 +4945V  
VR1092 +4950V  
VR1093 +4955V  
VR1094 +4960V  
VR1095 +4965V  
VR1096 +4970V  
VR1097 +4975V  
VR1098 +4980V  
VR1099 +4985V  
VR1100 +4990V  
VR1101 +4995V  
VR1102 +5000V  
VR1103 +5005V  
VR1104 +5010V  
VR1105 +5015V  
VR1106 +5020V  
VR1107 +5025V  
VR1108 +5030V  
VR1109 +5035V  
VR1110 +5040V  
VR1111 +5045V  
VR1112 +5050V  
VR1113 +5055V  
VR1114 +5060V  
VR1115 +5065V  
VR1116 +5070V  
VR1117 +5075V  
VR1118 +5080V  
VR1119 +5085V  
VR1120 +5090V  
VR1121 +5095V



ARE 1/4 W 5% UNLESS OTHERWISE SPECIFIED  
 ARE IN LF UNLESS OTHERWISE SPECIFIED

ALJ  
 VRK 100 1.25 5V  
 VRK 200 1.25 5V  
 VRK 200 1.25 5V  
 VRK 200 1.25 5V  
 VRK 200 1.25 5V  
 VRK 200 1.25 5V


Y. F. HAKHIL  
 34-034-01

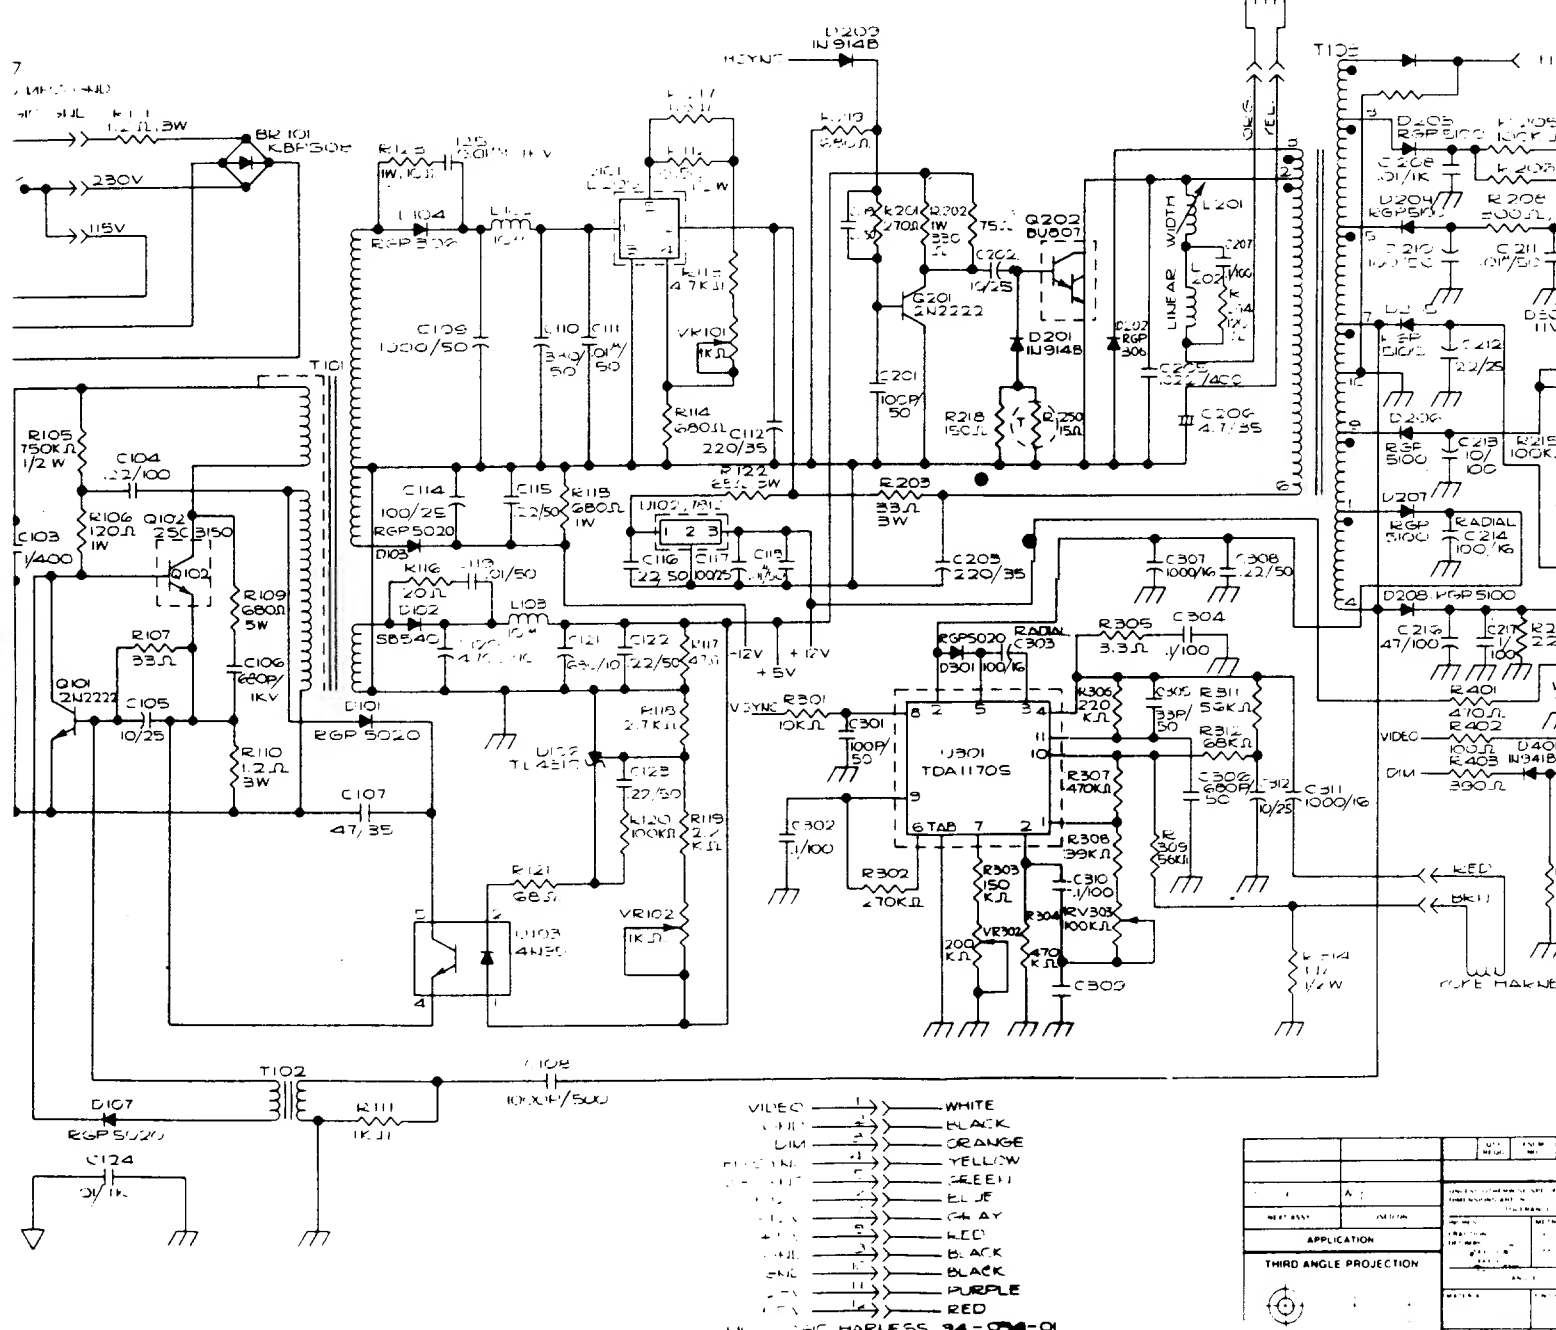

- VIDEO 1 WHITE
- VIDEO 2 BLACK
- VIDEO 3 ORANGE
- VIDEO 4 YELLOW
- VIDEO 5 GREEN
- VIDEO 6 BLUE
- VIDEO 7 GRAY
- VIDEO 8 RED
- VIDEO 9 BLACK
- VIDEO 10 PURPLE
- VIDEO 11 RED


THIRD ANGLE PROJECTION	
VIEW	SECTION
FRONT	FRONT
TOP	TOP
LEFT	LEFT
RIGHT	RIGHT
REAR	REAR
BOTTOM	BOTTOM



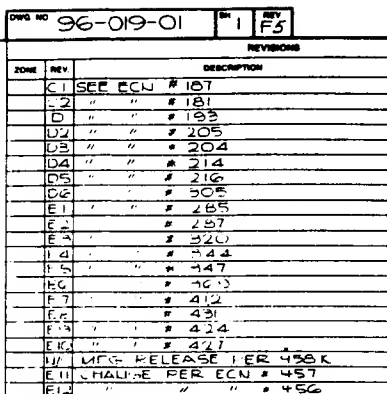


DATE		BY	CHECKED BY	REVISION NO.	DATE	MATERIAL
REV. LIST		NO.	DATE	OF NO. REVISIONS		SPECIFICATION
PARTS LIST						
				<b>WYSE WYSE TECHNOLOGY</b>		
				WY-50 MATHAL POWER SUPPLY		
APPLICATION				SIZE D FSCM NO DWG NO 96-019-01 REV FE		
THIRD ANGLE PROJECTION				SCALE SHEET 1 OF 1		




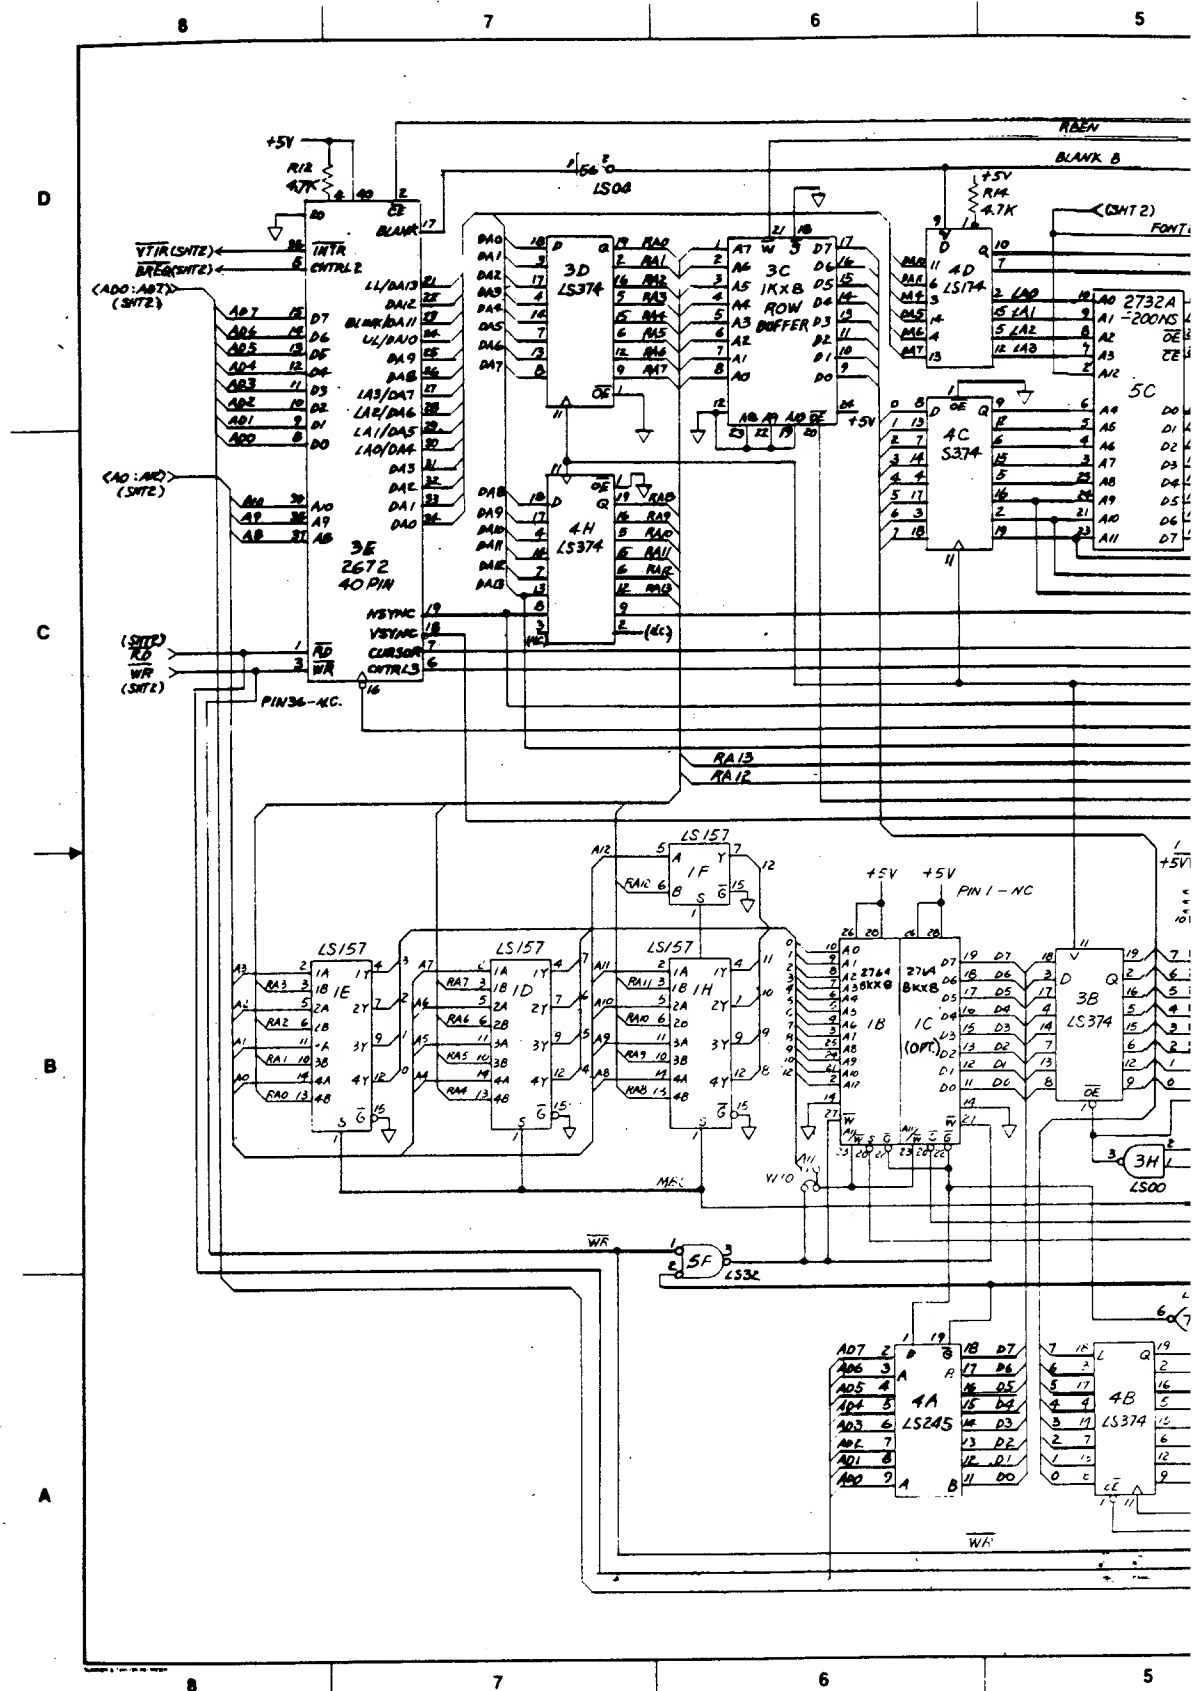



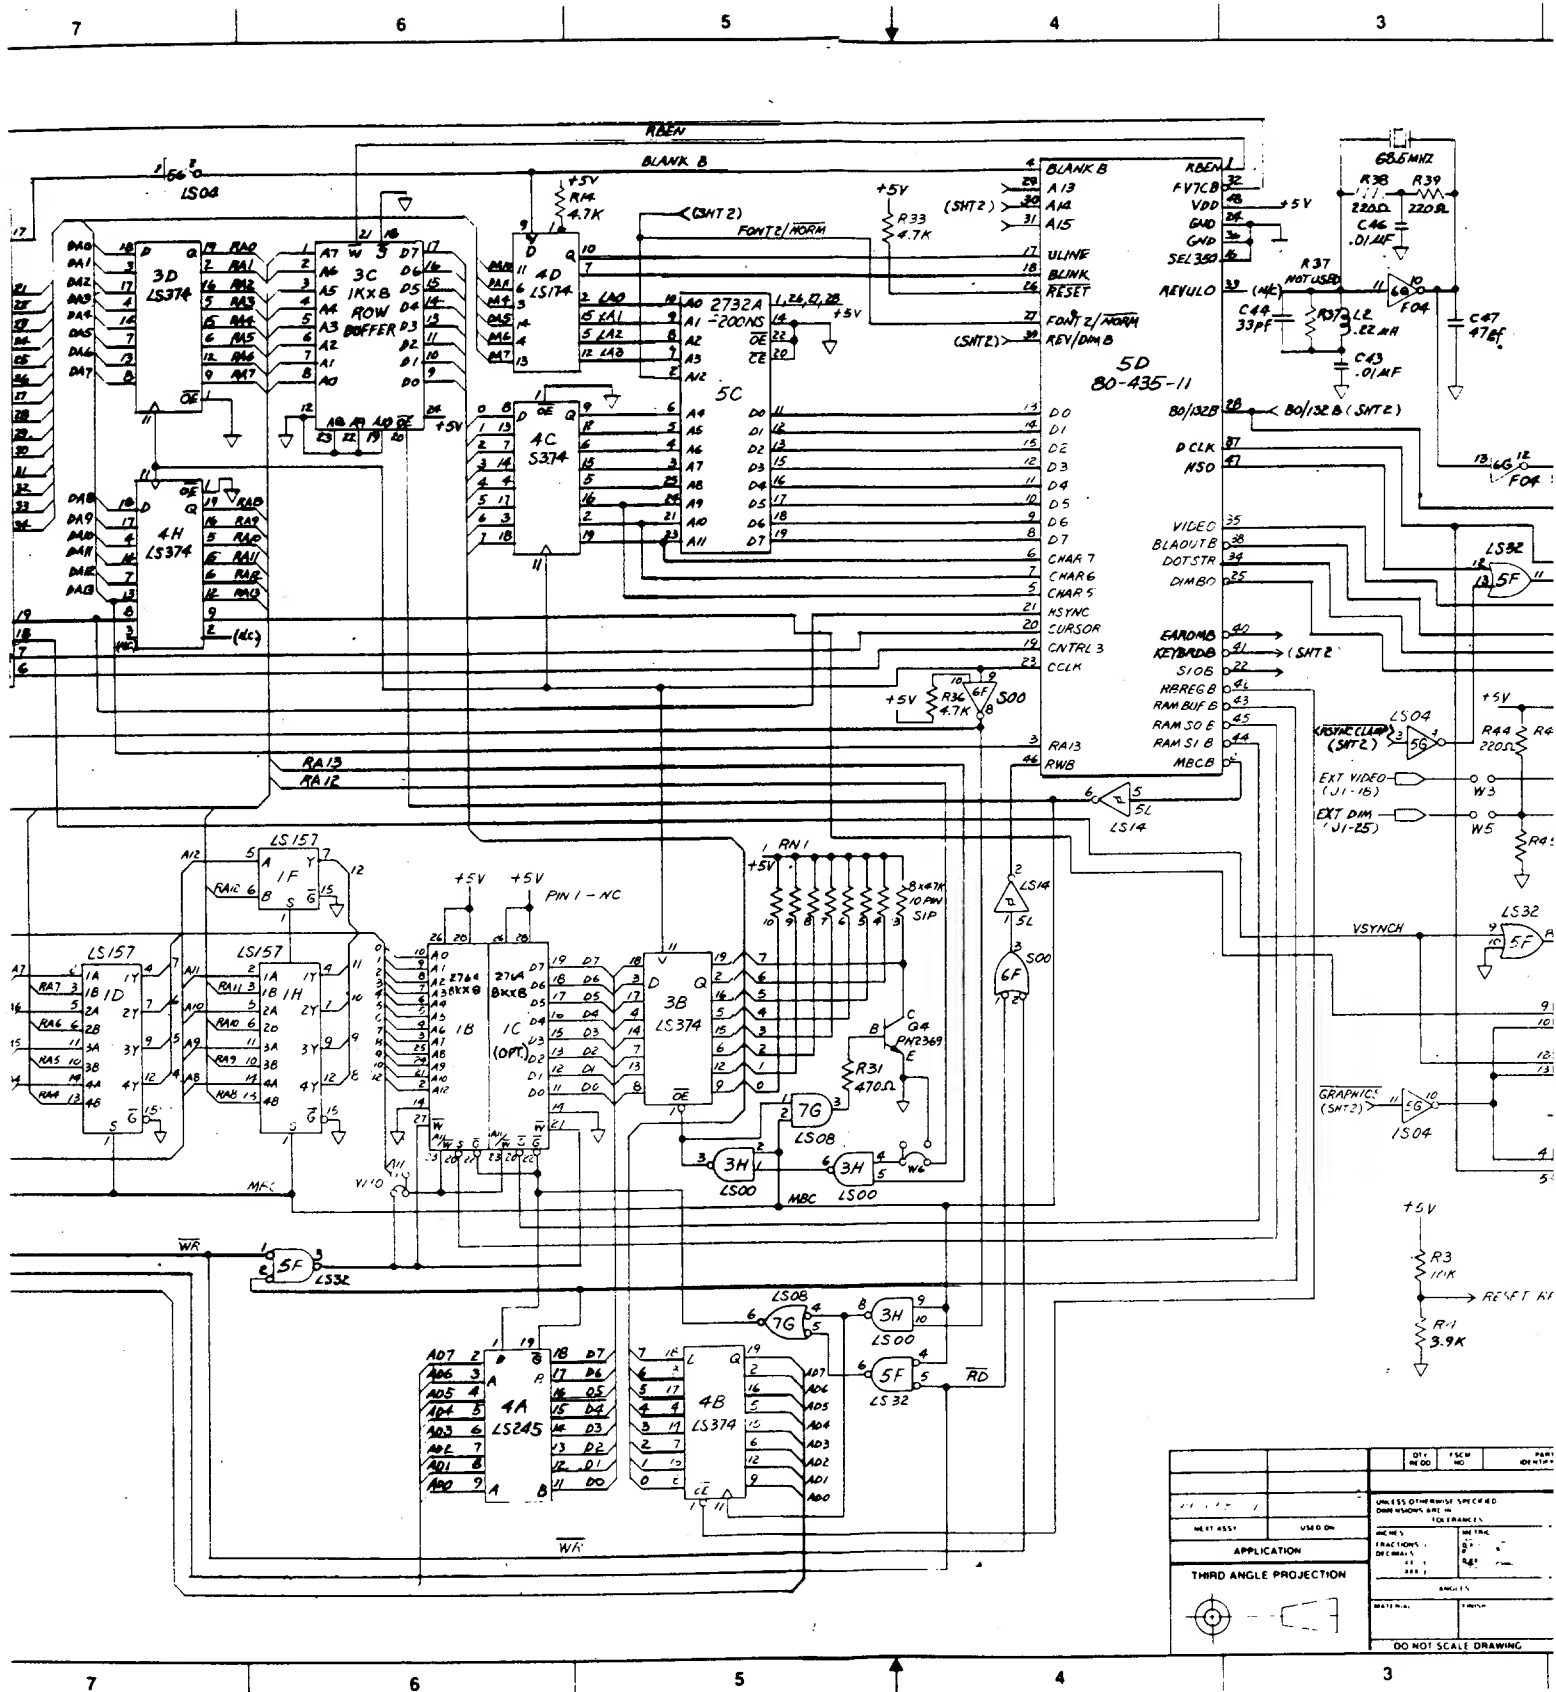


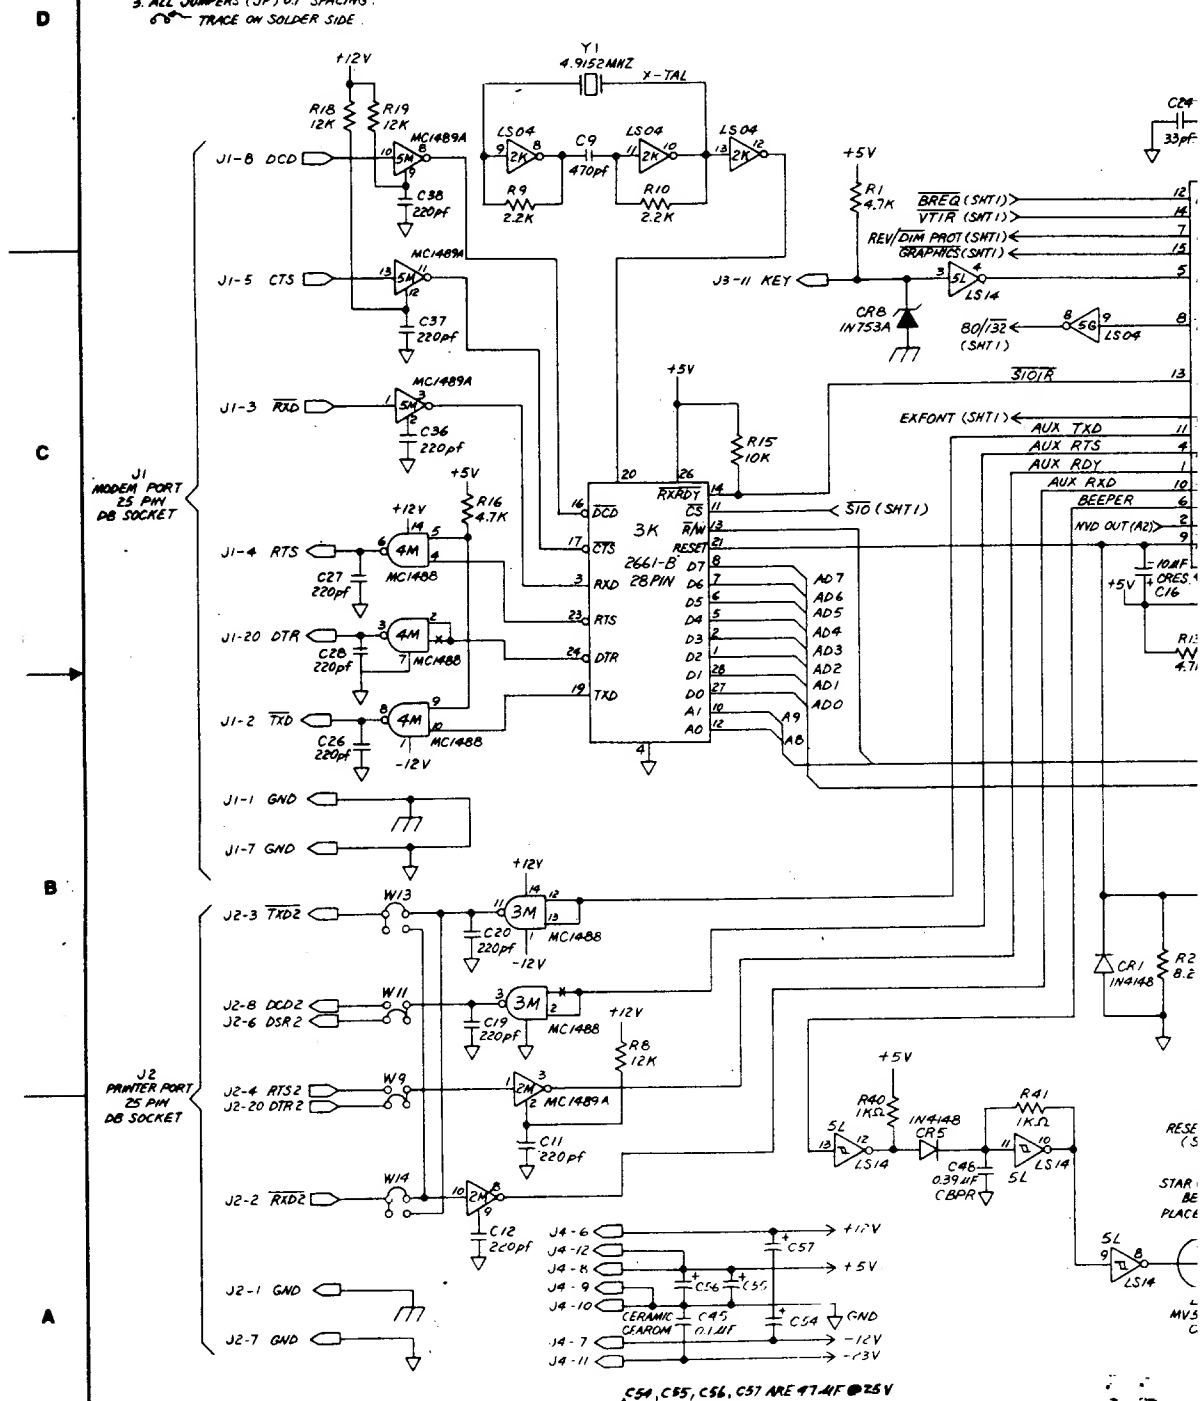


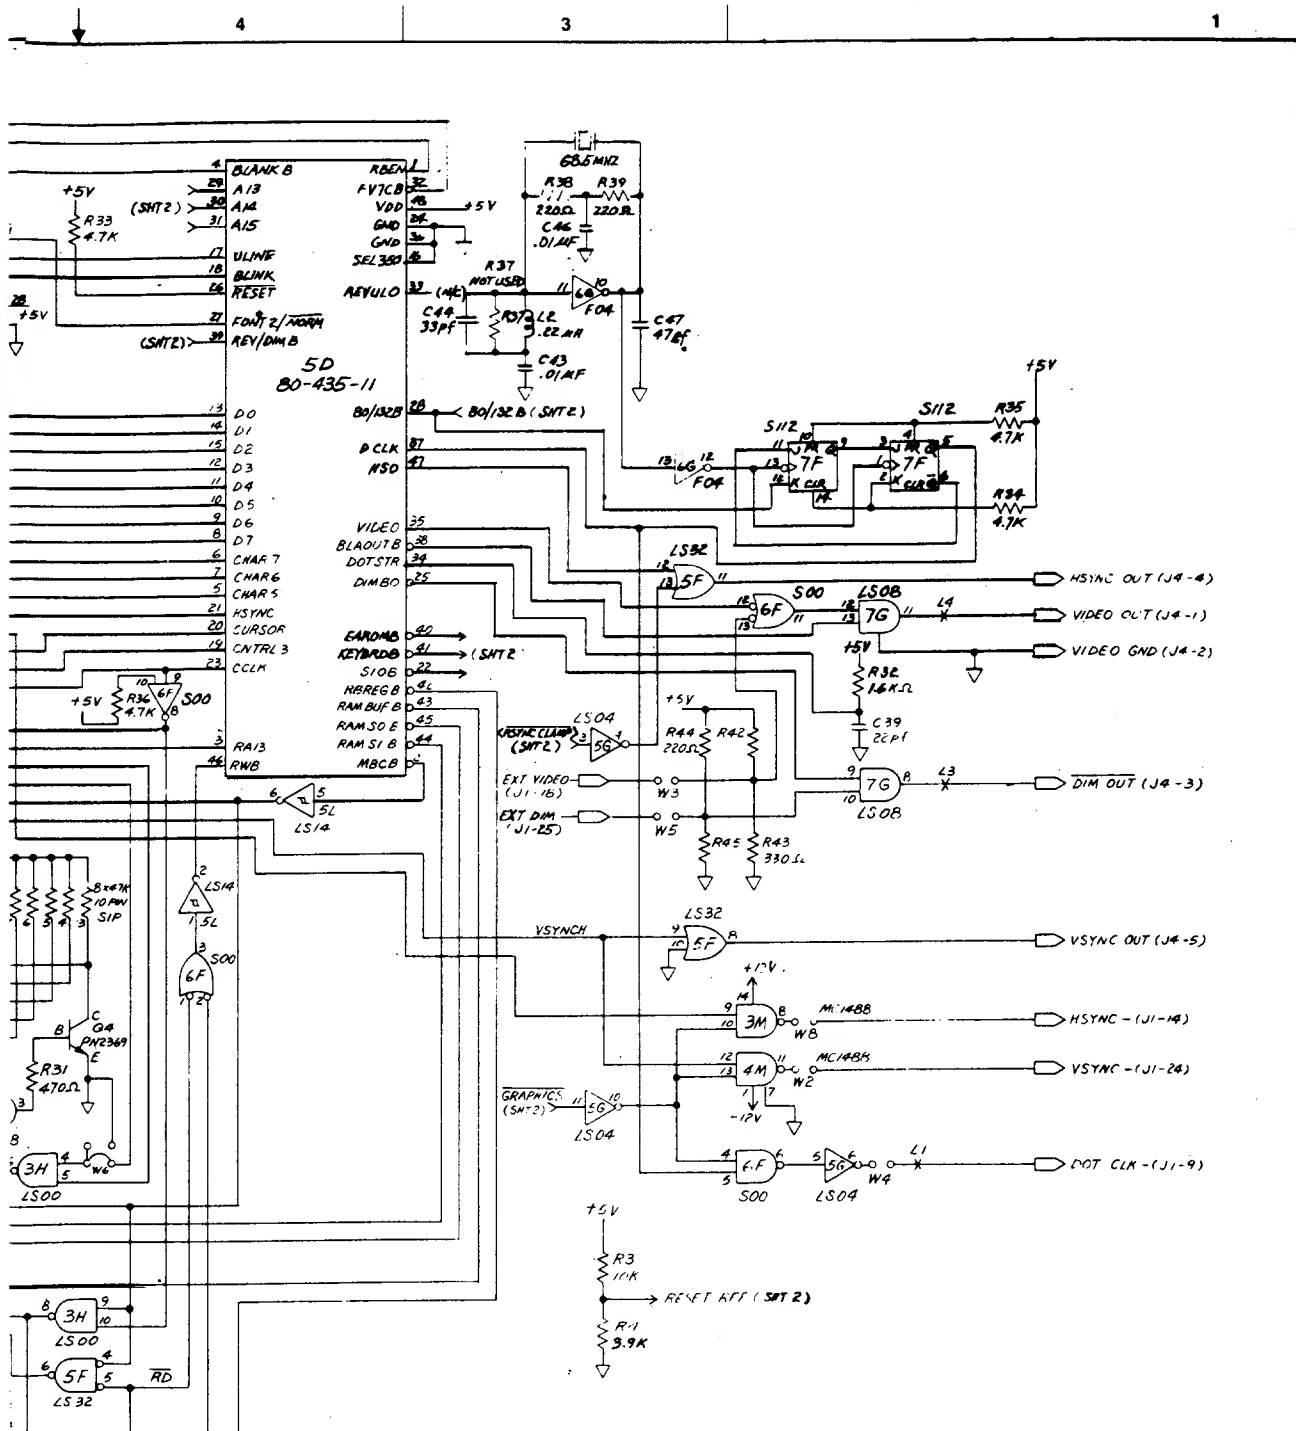

PARTS LIST		WYSE TECHNOLOGY	
LOGIC BOARD, WY-50+		REV A	
SIZE D	FSCM NO	DWG NO 96-058-05	SHEET 1 OF 2
DO NOT SCALE DRAWING		SHEET 1 OF 2	



1. MOUNT LED NEAR PCB EDGE
2. LS157 - COMMON
3. ALL JUMPERS (JP) 0.1" SPACING  
 TRACE ON SOLDER SIDE.





7

6

5


4

3

3M PROPRIETARY TO  
NATION DISCLOSURE  
PI AS WAVE TECHNOL  
UTING

R PCB EDGE

2) 0.1" SPACING  
SOLDER SIDE

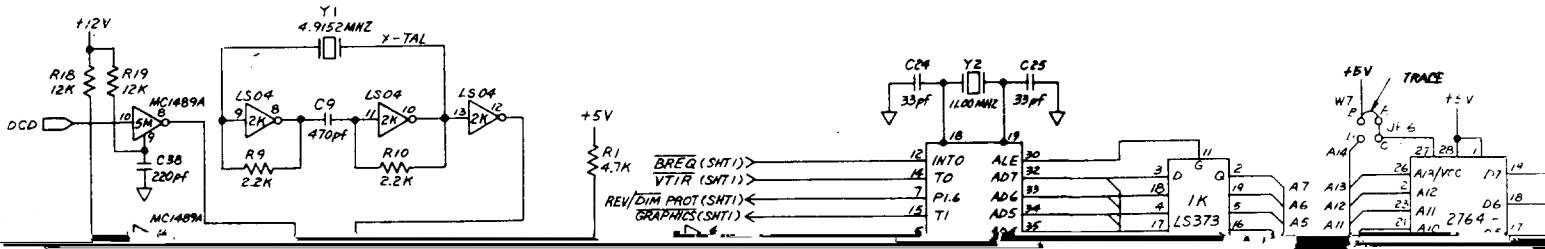








THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO  
UNION TECHNOLOGY INC. ANY REPRODUCTION, DISCLOSURE  
OR USE IN ANY MANNER WITHOUT WRITTEN PERMISSION  
OF UNION TECHNOLOGY INC. IS PROHIBITED.

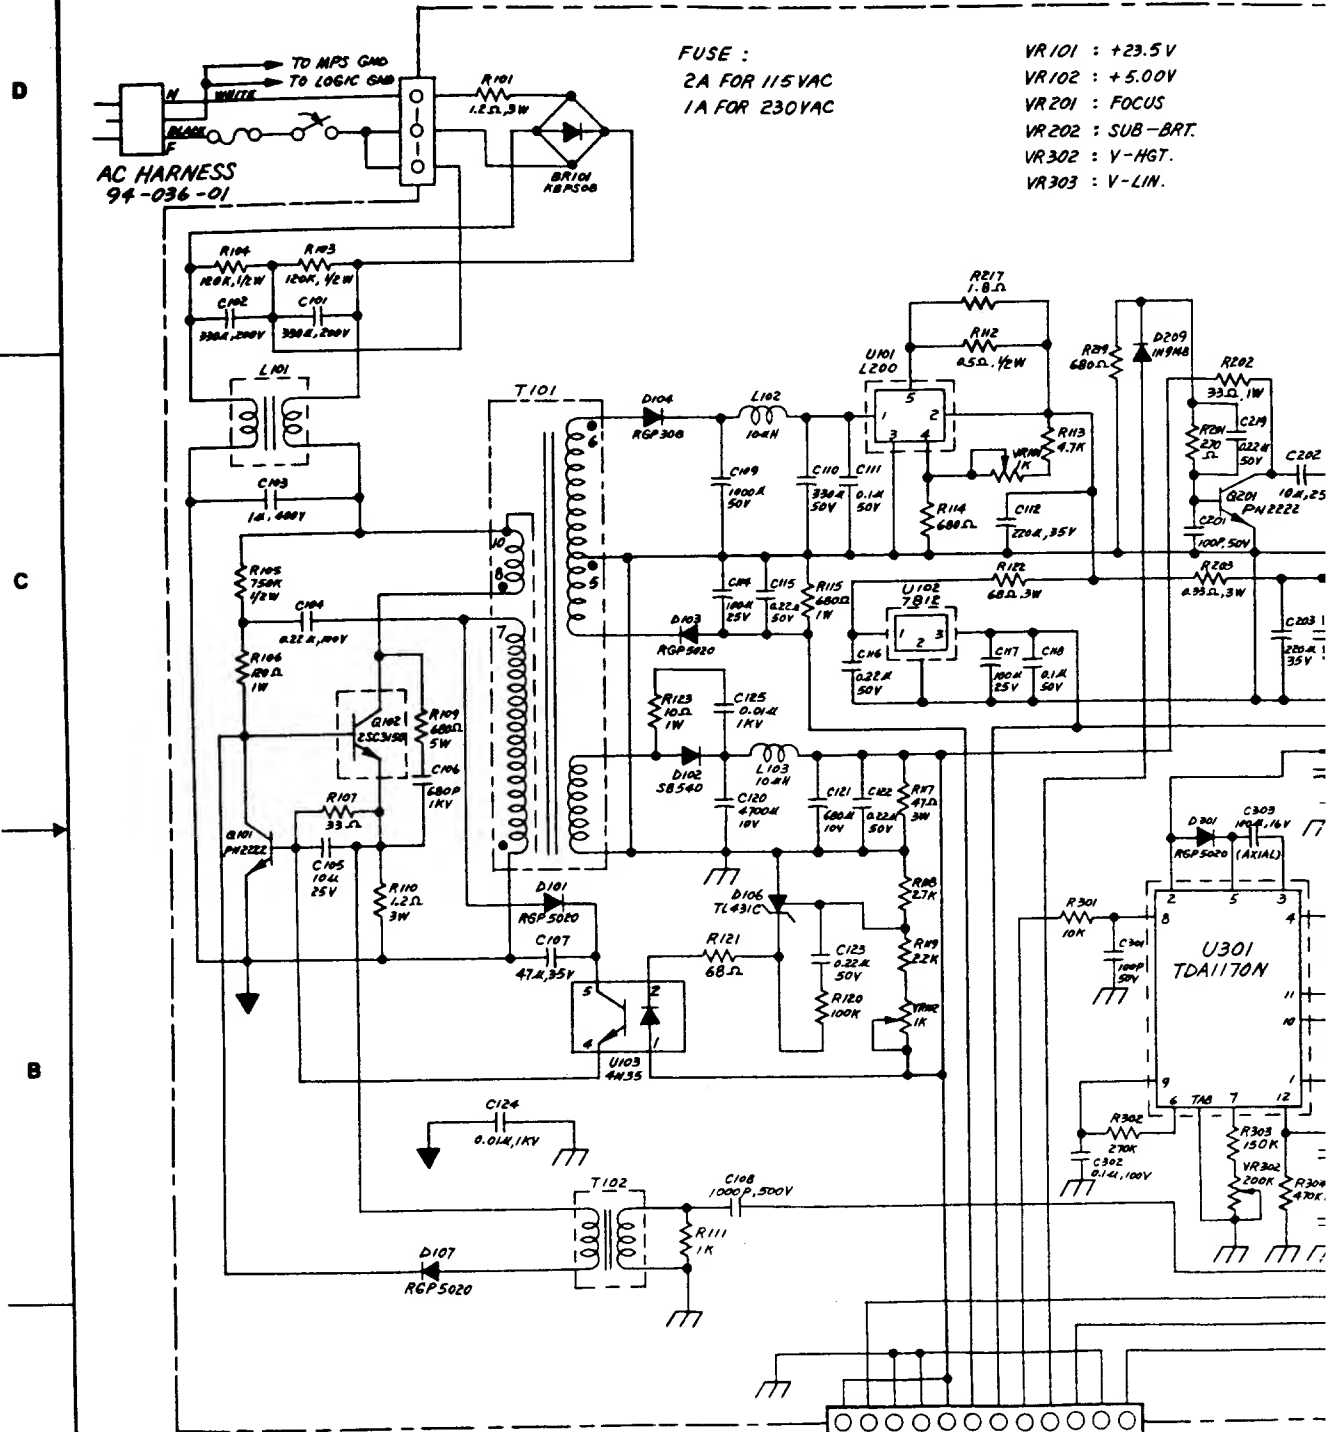

FUSE :  
2A FOR 115VAC  
1A FOR 230VAC


VR101 : +23.5V  
VR102 : +5.00V  
VR201 : FOCUS  
VR202 : SUB-BRT.  
VR302 : V-HGT.  
VR303 : V-LIN.

- |           |        |          |        |                    |
|-----------|--------|----------|--------|--------------------|
| 1. VIDEO  | WHITE  | 7. -12V  | GREY   | LOGIC HA<br>94-034 |
| 2. GND    | BLACK  | 8. +5V   | RED    |                    |
| 3. DIM    | ORANGE | 9. GND   | BLACK  |                    |
| 4. H-SYNC | YELLOW | 10. GND  | BLACK  |                    |
| 5. V-SYNC | GREEN  | 11. -23V | PURPLE |                    |
| 6. +12V   | BLUE   | 12. +5V  | RED    |                    |



FUSE :  
2A FOR 115VAC  
1A FOR 230VAC

VR101 : +23.5V  
VR102 : +5.00V  
VR201 : FOCUS  
VR202 : SUB-BRT.  
VR302 : V-HGT.  
VR303 : V-LIN.

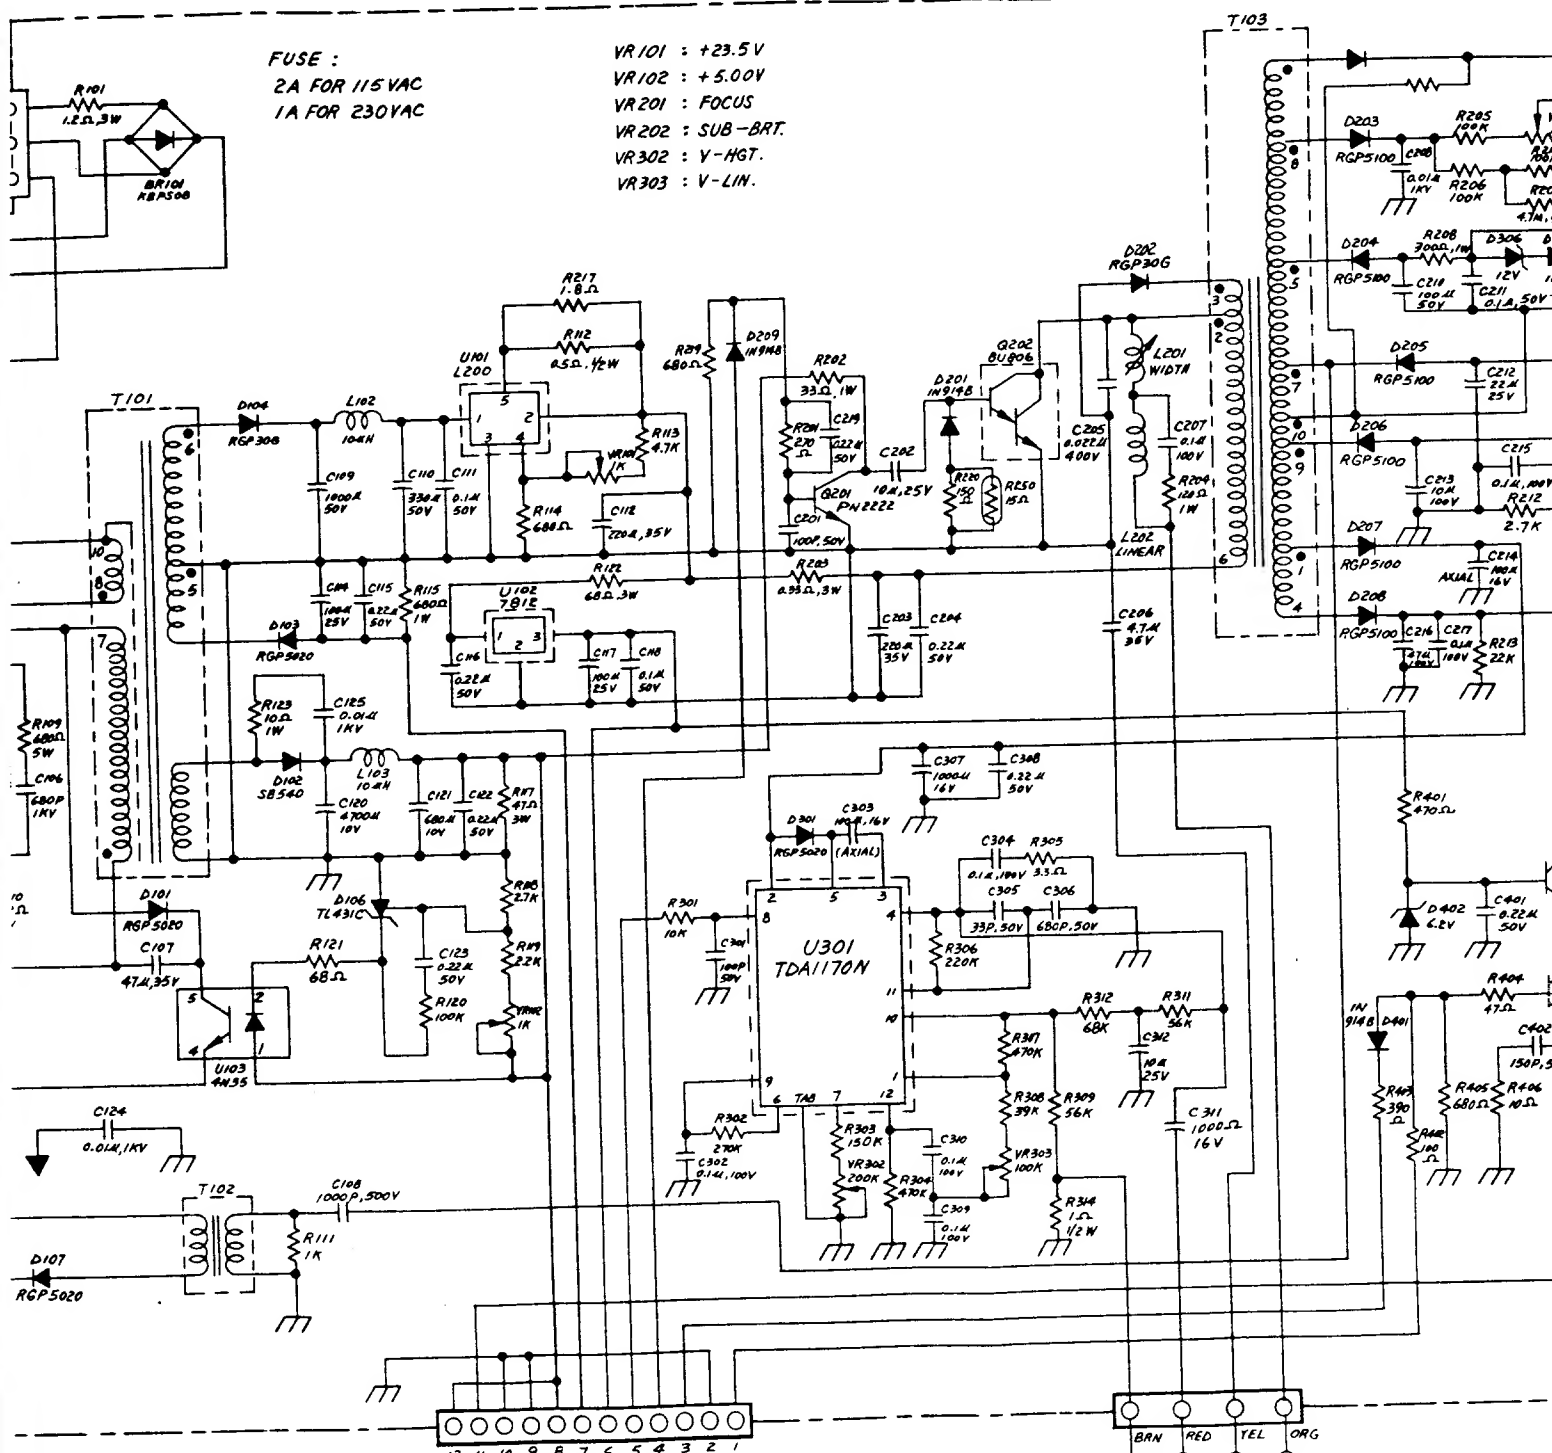


- |           |        |          |        |
|-----------|--------|----------|--------|
| 1. VIDEO  | WHITE  | 7. -12V  | GREY   |
| 2. GND    | BLACK  | 8. +5V   | RED    |
| 3. DIM    | ORANGE | 9. GND   | BLACK  |
| 4. H-SYNC | YELLOW | 10. GND  | BLACK  |
| 5. V-SYNC | GREEN  | 11. -23V | PURPLE |
| 6. +12V   | BLUE   | 12. +5V  | RED    |

LOGIC HARNESS  
94-034-01

Yoke Harness  
940154-01

WY-50	USED ON
APPLICATION	
THIRD ANGLE PROJECTION	



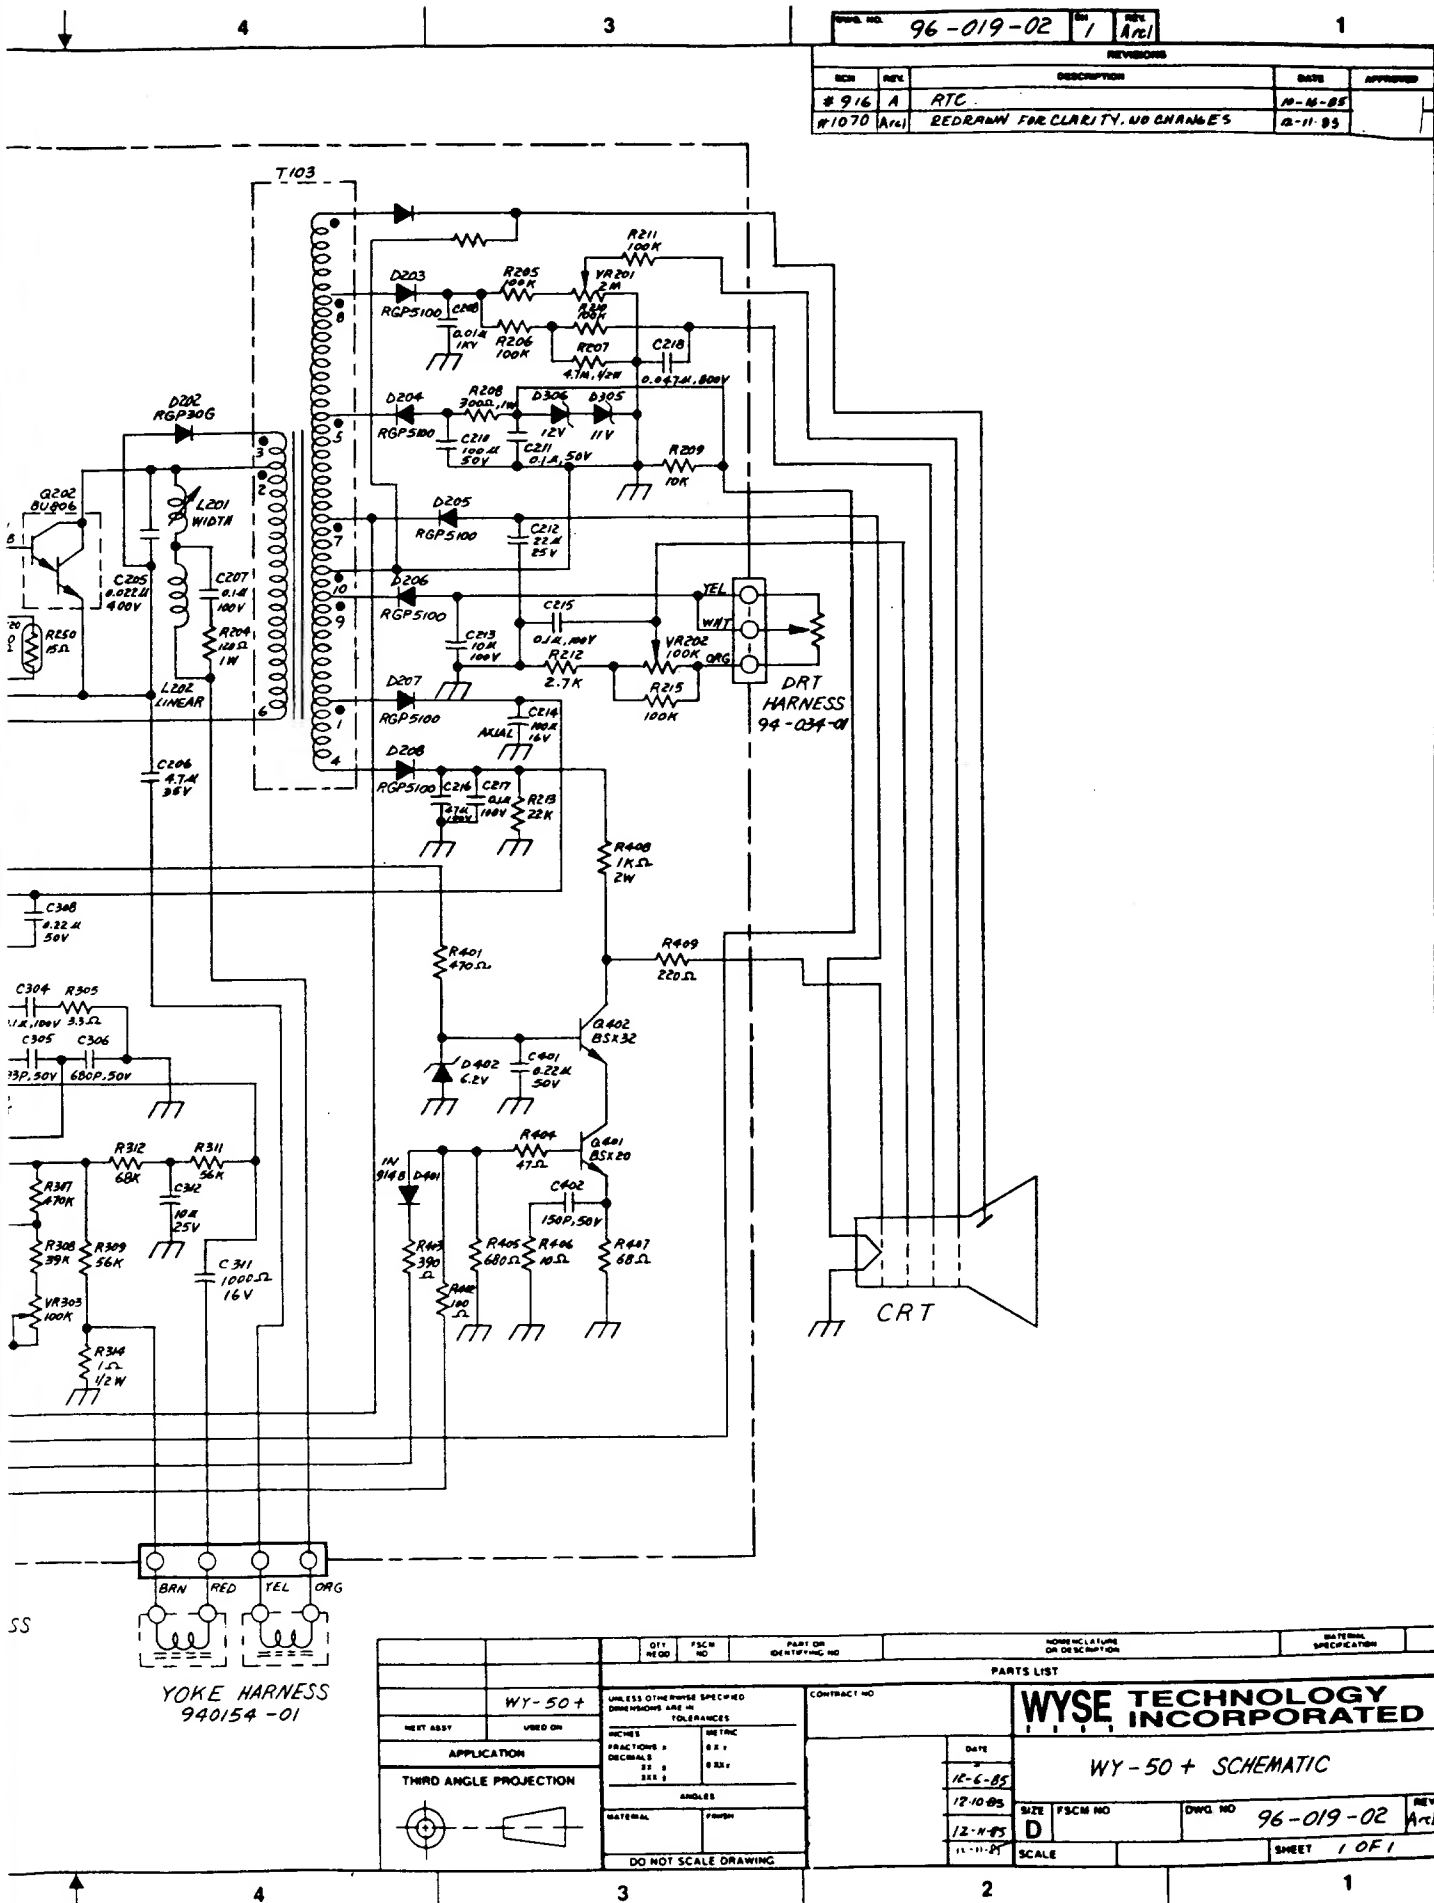

PARTS LIST		CONTRACT NO.		DATE	
WY-50+				12-6-85	
NEXT ASST.				12-10-85	
USED ON				12-11-85	
APPLICATION				12-11-85	
THIRD ANGLE PROJECTION				12-11-85	
				12-11-85	
DO NOT SCALE DRAWING				12-11-85	
<div style="display: flex; justify-content: space-between;"> <div>           UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN TOLERANCES FRACTIONS : DECIMALS : ANGLES : MATERIAL : FINISH :         </div> <div>           CONTRACT NO.            WYSE TECHNOLOGY INCORPORATED            WY-50+ SCHEMATIC            SIZE D            SCALE            SHEET 1 OF 1         </div> </div>		DWG NO. 96-019-02 REV Arc1		DATE 12-6-85 12-10-85 12-11-85	